



Springwood Industrial, Inc.  
2320 E Valencia Dr  
Fullerton , CA 92831  
Tel: 714-871-5558 Fax: 714-871-5554  
<http://www.aceronline.net>

[info@aceronline.net](mailto:info@aceronline.net)

Klim Industrial, Inc.  
244 N. Randolphville Road  
Piscataway, NJ 08854  
Tel: 732-752-9100 Fax: 732-752-9101  
<http://www.aceronline.net>

[acer\\_klim@yahoo.com](mailto:acer_klim@yahoo.com)

## PROCEDURE TO INSTALL THE EMERGENCY BREAKER ON THE E-LATHE 2160GH

1. Put the switch to off position.



2. Use a small Phillips screw driver to pop up the cover from both sides.




3. Take out label.



4. Loosen 4 screws.



5. Attach switch to the door. Tighten 4 screws.

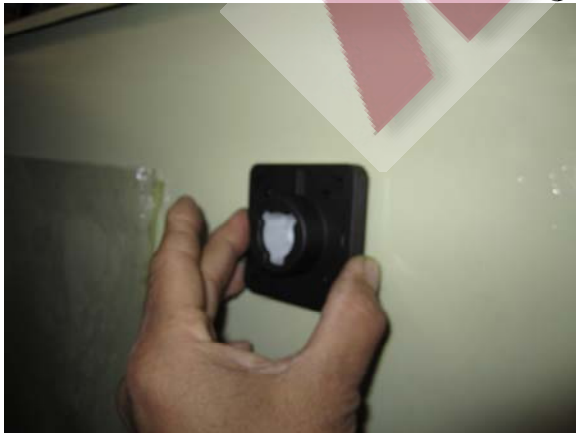

6. Put back the label.



7. Snap on breaker switch cover in Off position.



Here is a [link](#) for a video for Procedure to Install the Emergency Breaker on the E-Lathe 2160GH.