



Springwood Industrial, Inc.  
2320 E Valencia Dr  
Fullerton , CA 92831  
Tel: 714-871-5558 Fax: 714-871-5554  
<http://www.aceronline.net>

[info@aceronline.net](mailto:info@aceronline.net)

Klim Industrial, Inc.  
244 N. Randolphville Road  
Piscataway, NJ 08854  
Tel: 732-752-9100 Fax: 732-752-9101  
<http://www.aceronline.net>

[acer\\_klim@yahoo.com](mailto:acer_klim@yahoo.com)

## PROCEDURE TO CHANGE E-MILL FROM 3 PHASE TO SINGLE PHASE

1. Please connect the power input to R, T, and Ground.

