



Springwood Industrial, Inc.
2320 E Valencia Dr
Fullerton , CA 92831
Tel: 714-871-5558 Fax: 714-871-5554
<http://www.aceronline.net>

info@aceronline.net

Klim Industrial, Inc.
244 N. Randolphville Road
Piscataway, NJ 08854
Tel: 732-752-9100 Fax: 732-752-9101
<http://www.aceronline.net>


acer_klim@yahoo.com

PROCEDURE TO CHANGE FORWARD REVERSE SWITCH

1. Loosen the 4 screws.




2. Use small flat head screw drive and push out the ring to disconnect the terminal block.

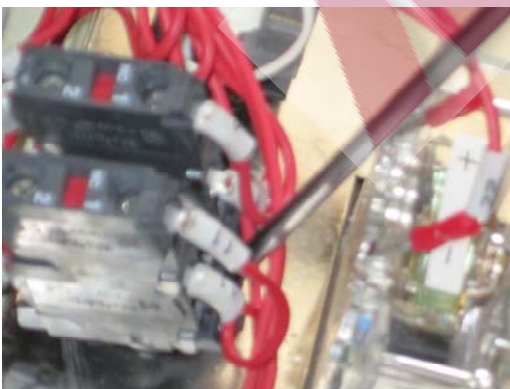

3. Change the wires.



4. Loosen the locking ring.

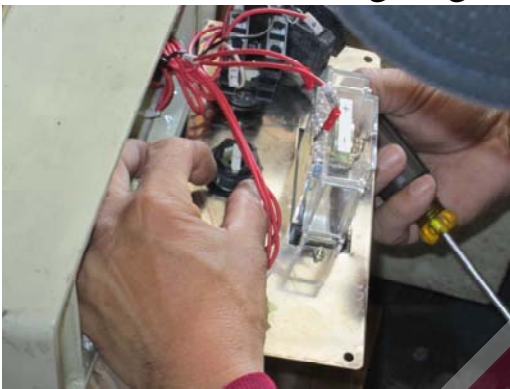

5. Take out the switch.

