



Springwood Industrial, Inc.
1062 N. Kraemer Place
Anaheim, CA 92806
Tel: 714-632-9701 Fax: 714-632-9730
<http://www.aceronline.net>


info@aceronline.net

Klim Industrial, Inc.
244 N. Randolphville Road
Piscataway, NJ 08854
Tel: 732-752-9100 Fax: 732-752-9101
<http://www.aceronline.net>


acer_klim@yahoo.com

PROCEDURE TO CHANGE TAIAN CN11/CN16 CONTACTOR COIL W/ BUCKLE TYPE


1. Loosen the buckle with a flat head screw driver.

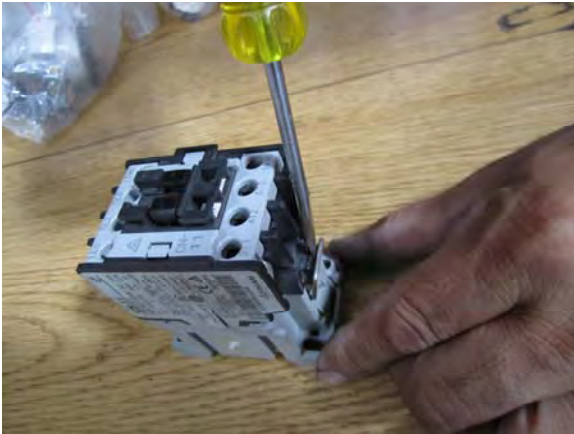


2. Remove the top part of the contactor.

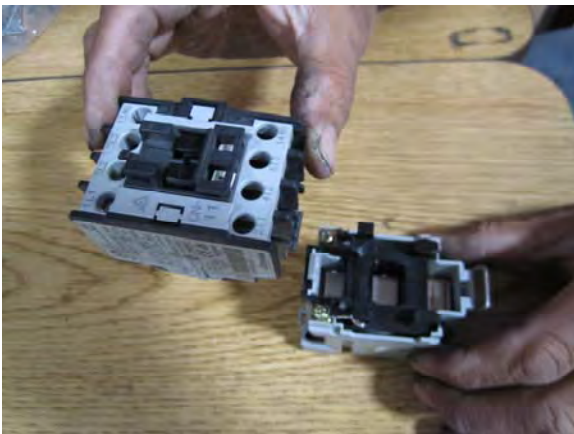

3. Remove the coil.

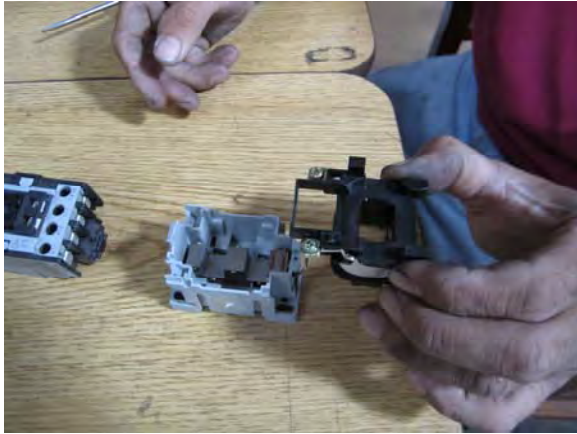

4. Replace the old coil with the new coil.

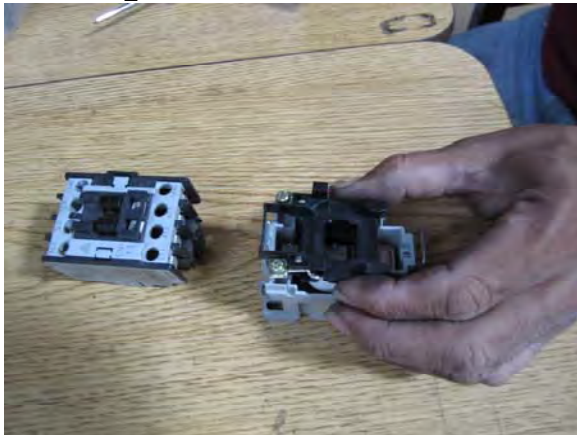

5. Put back the top. Put the latch in first, then tighten the buckle.

