

ACER

Electrical Diagram


VERTICAL MACHINING CENTER

Model: EMC-2240A

**Taiwan: YA WEI MACHINE TOO.MANUFACTURING INC
YA GIN MACHINE TOO.MANUFACTURING INC
No. 101, 506 Lane, Seng-Tso Road
Seng Karng Sharng, Taichung County,
Taiwan
Tel:886-4-2520-4120 Fax:886-4-2520-4123**


**CA: Springwood Industrial, Inc.
1062 N. Kraemer Place
Anaheim, CA 92806
Tel:714-632-9701 Fax:714-632-9730**


**NJ: Klim Industrial, Inc.
244 N. Randolphville Rd.
Piscataway, NJ 08854
Tel:732-752-9100 Fax:732-752-9101**

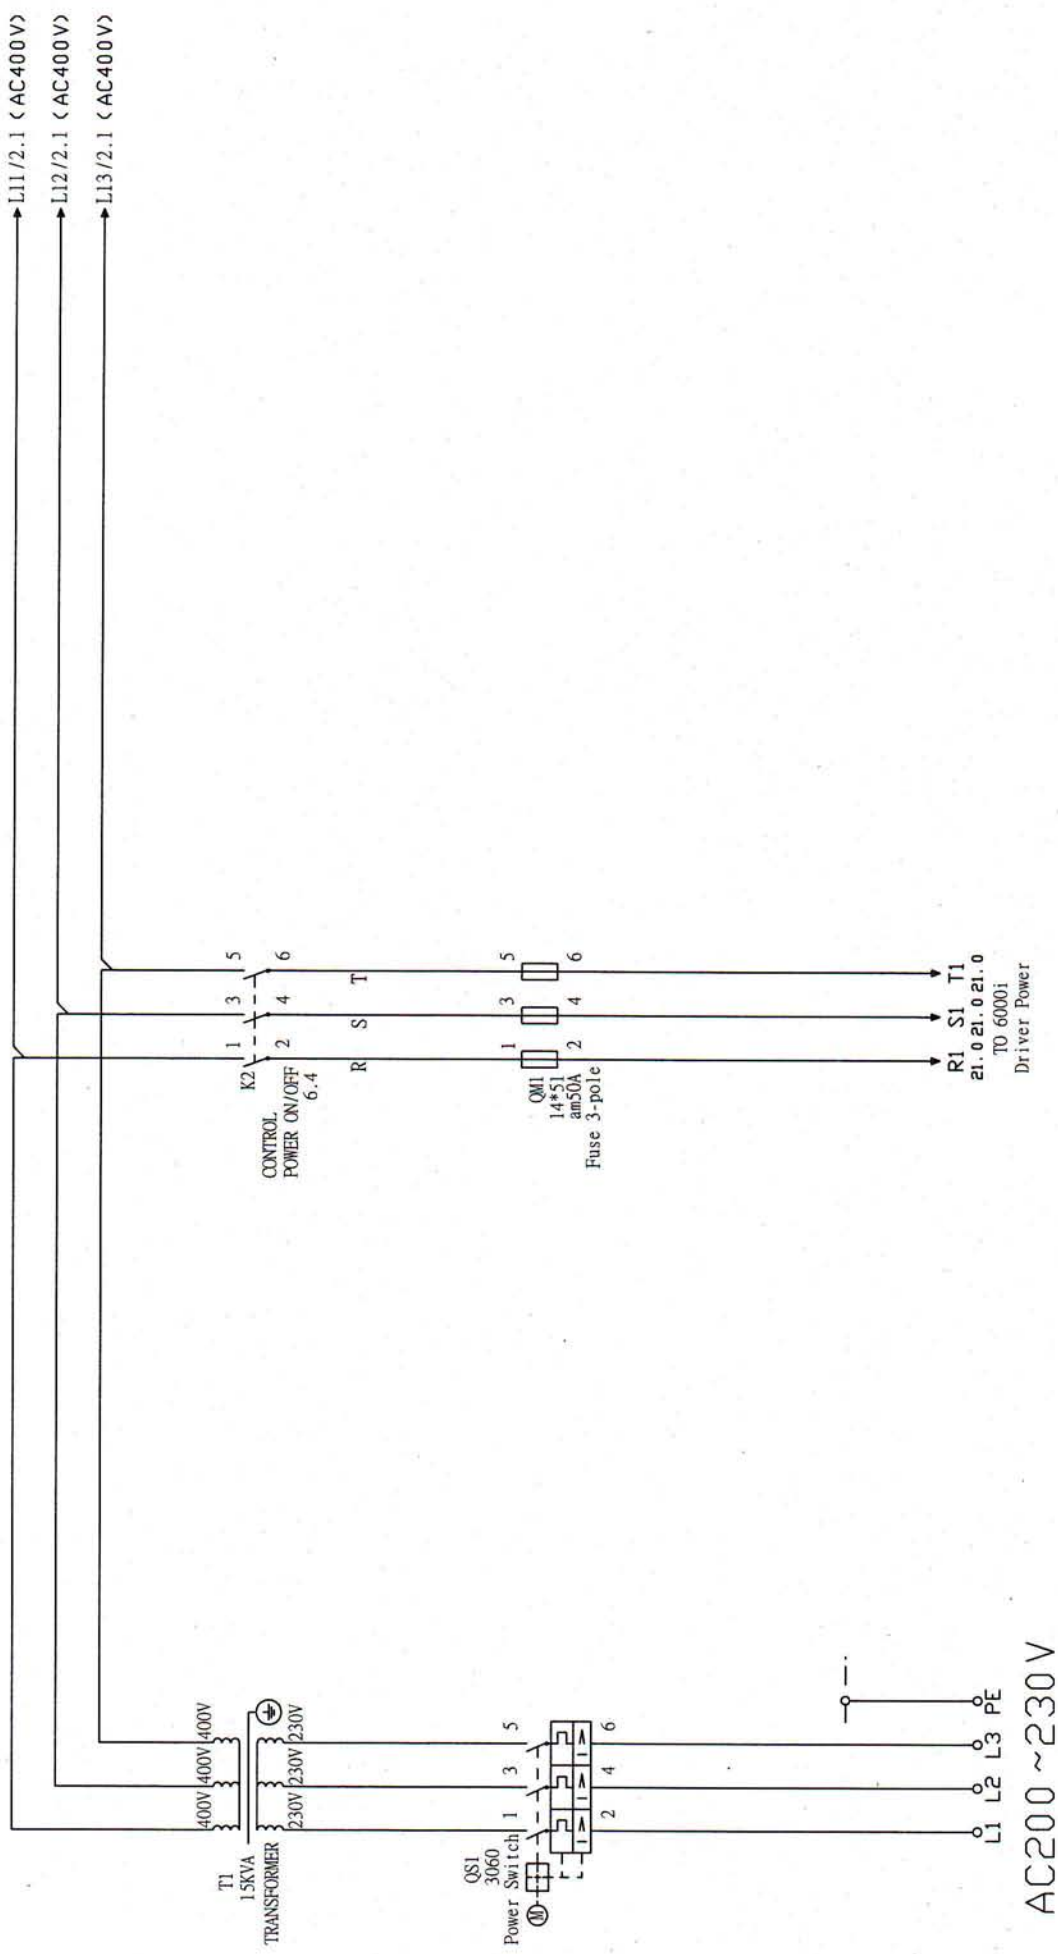


(AC400V) 1.8/ L11
 (AC400V) 1.8/ L12
 (AC400V) 1.8/ L13


L11/3.1
 L12/3.1
 L13/3.1

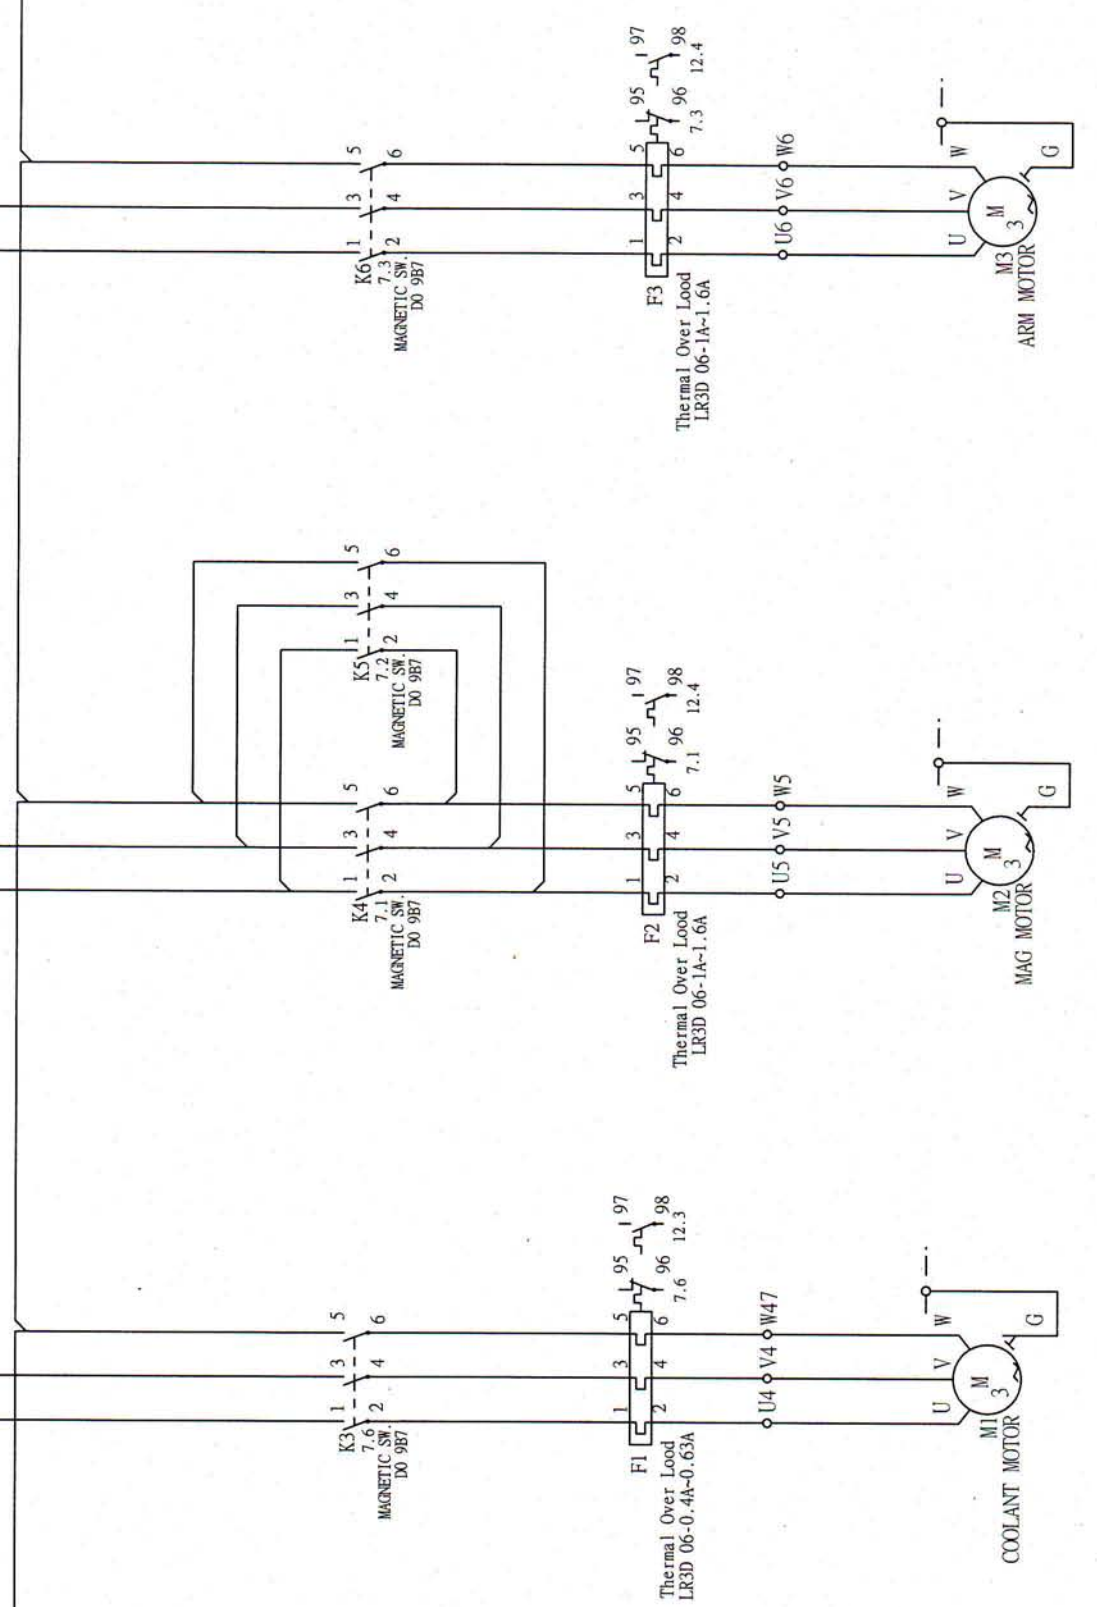

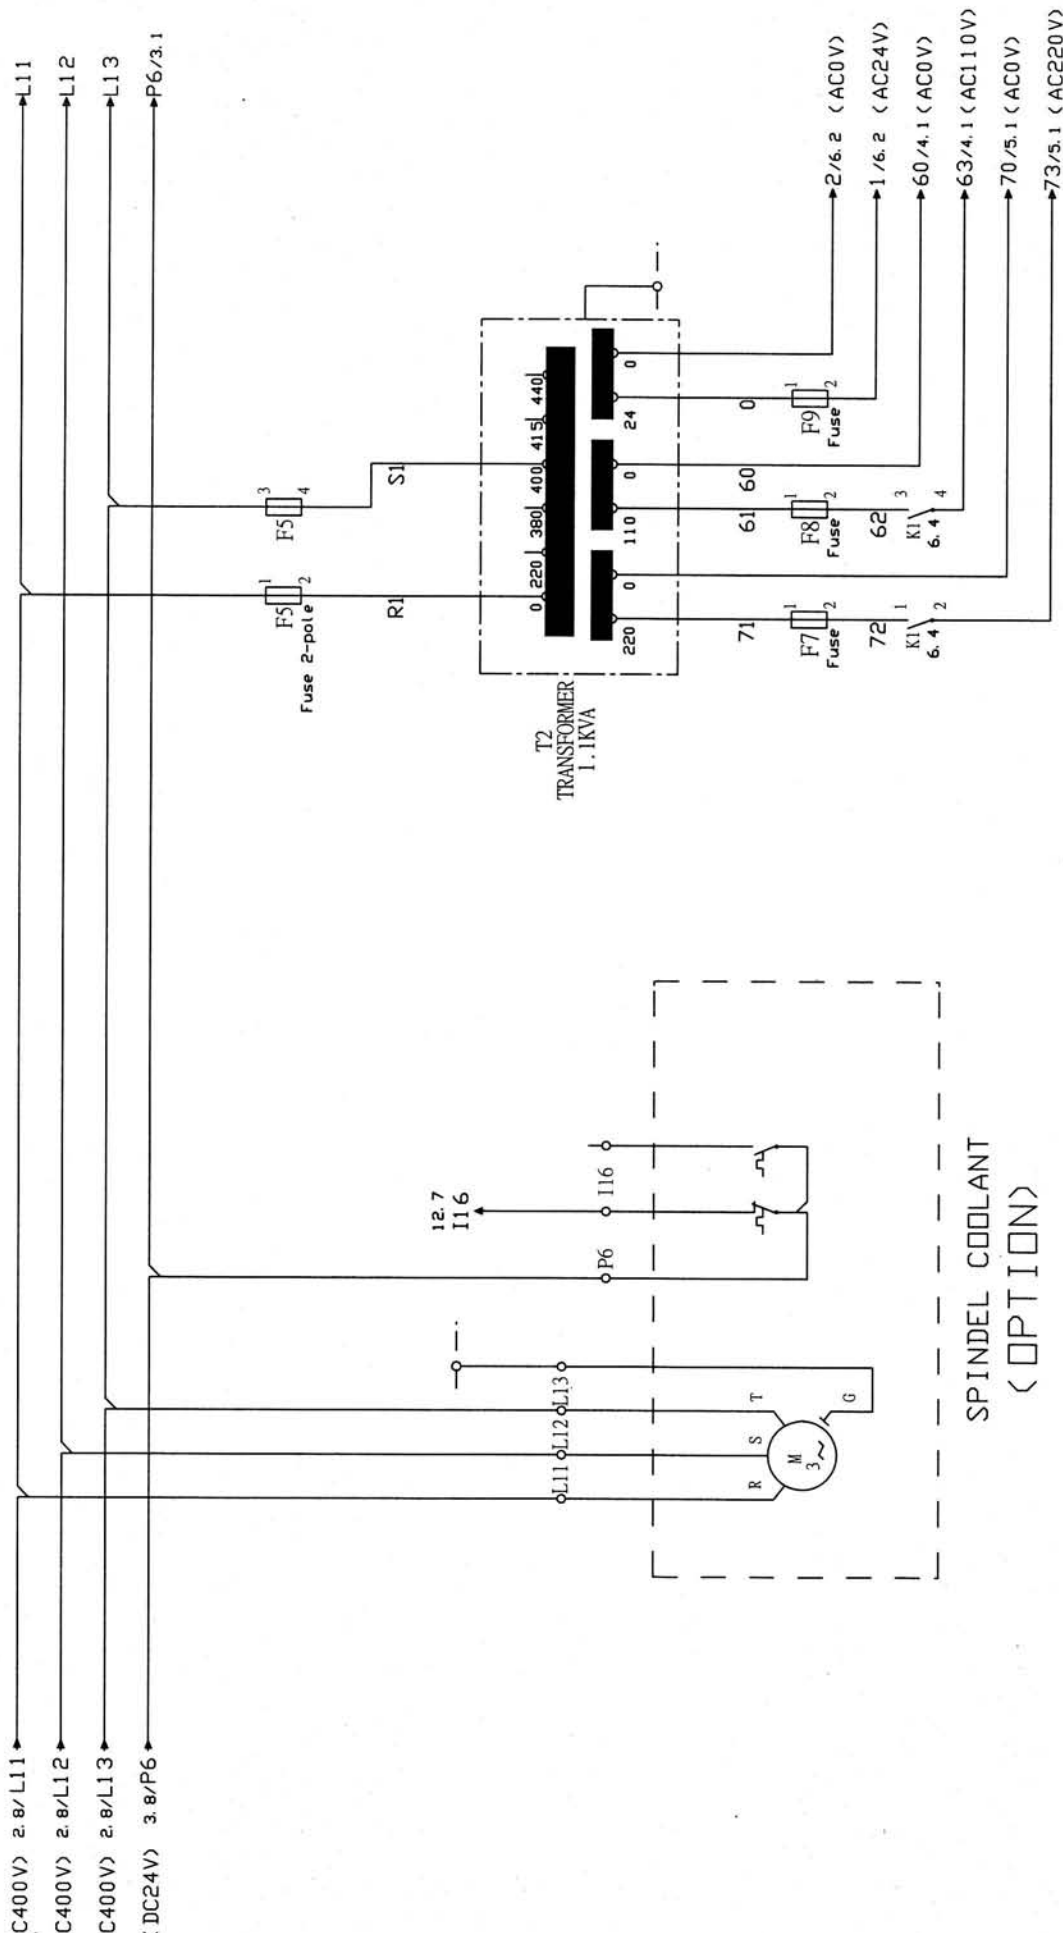

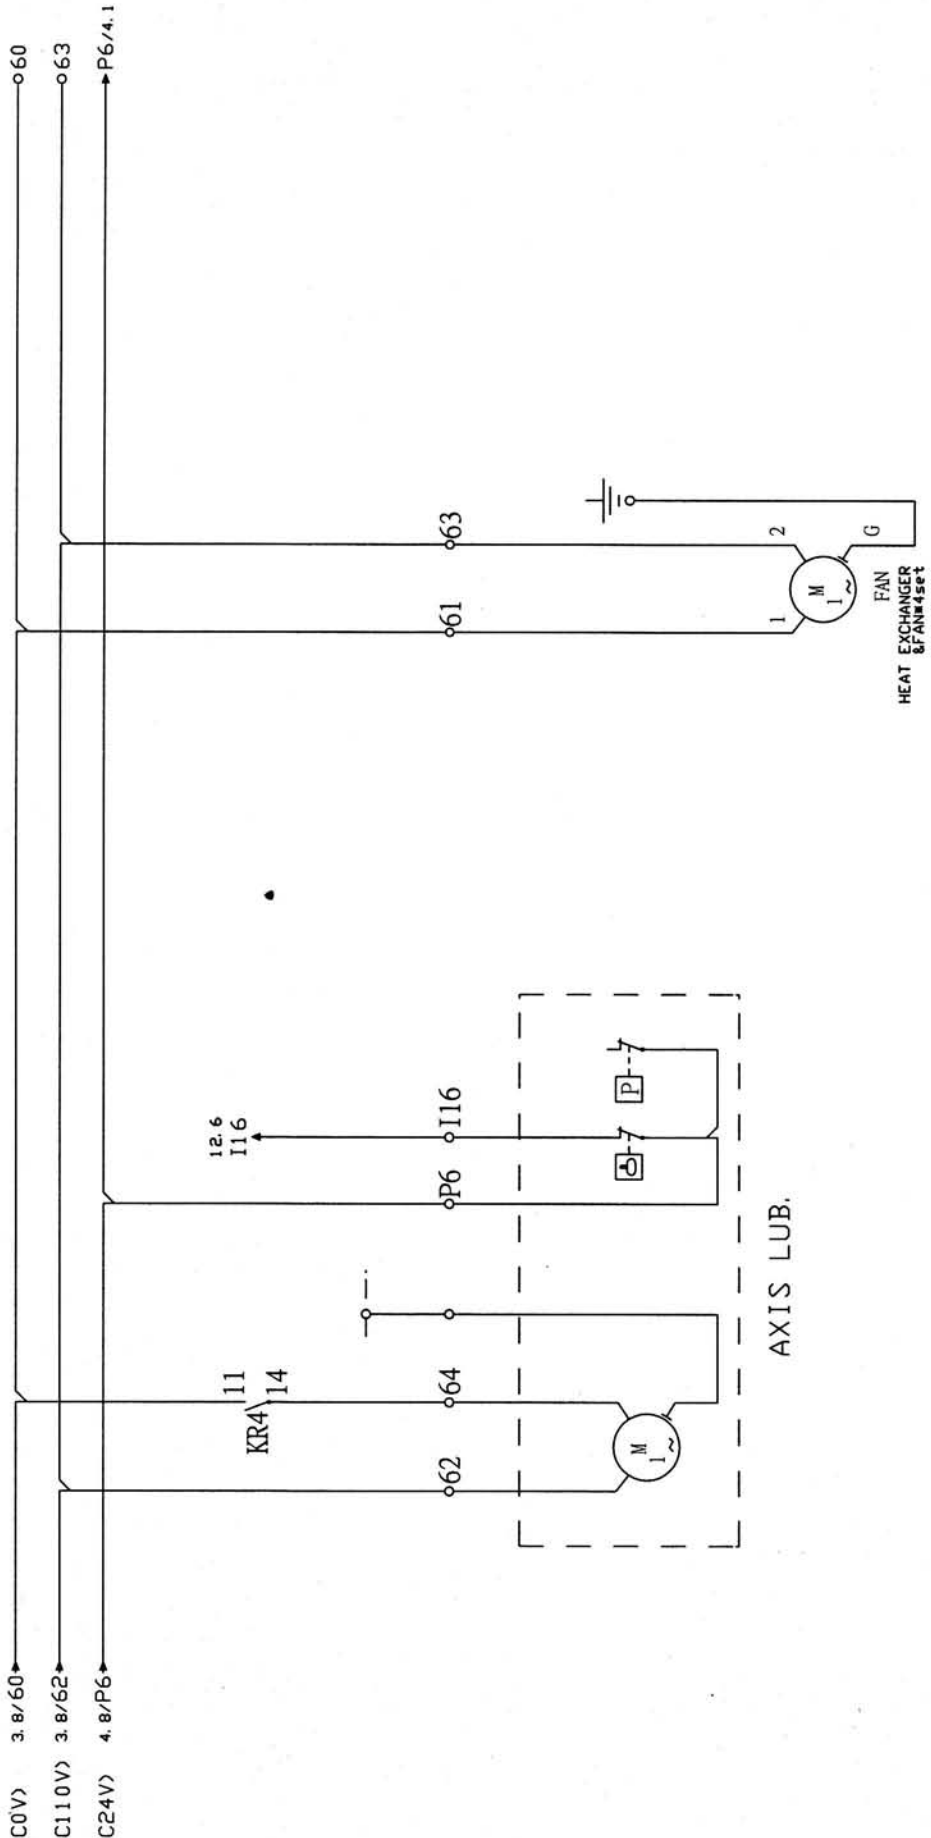

R GROUP	TITLE : POWER-110V-1	MACHINE MODEL EMC-2240A	CONTROL : ANILAM 6000i	Date: 01. APR. 200
---------	----------------------	----------------------------	---------------------------	-----------------------

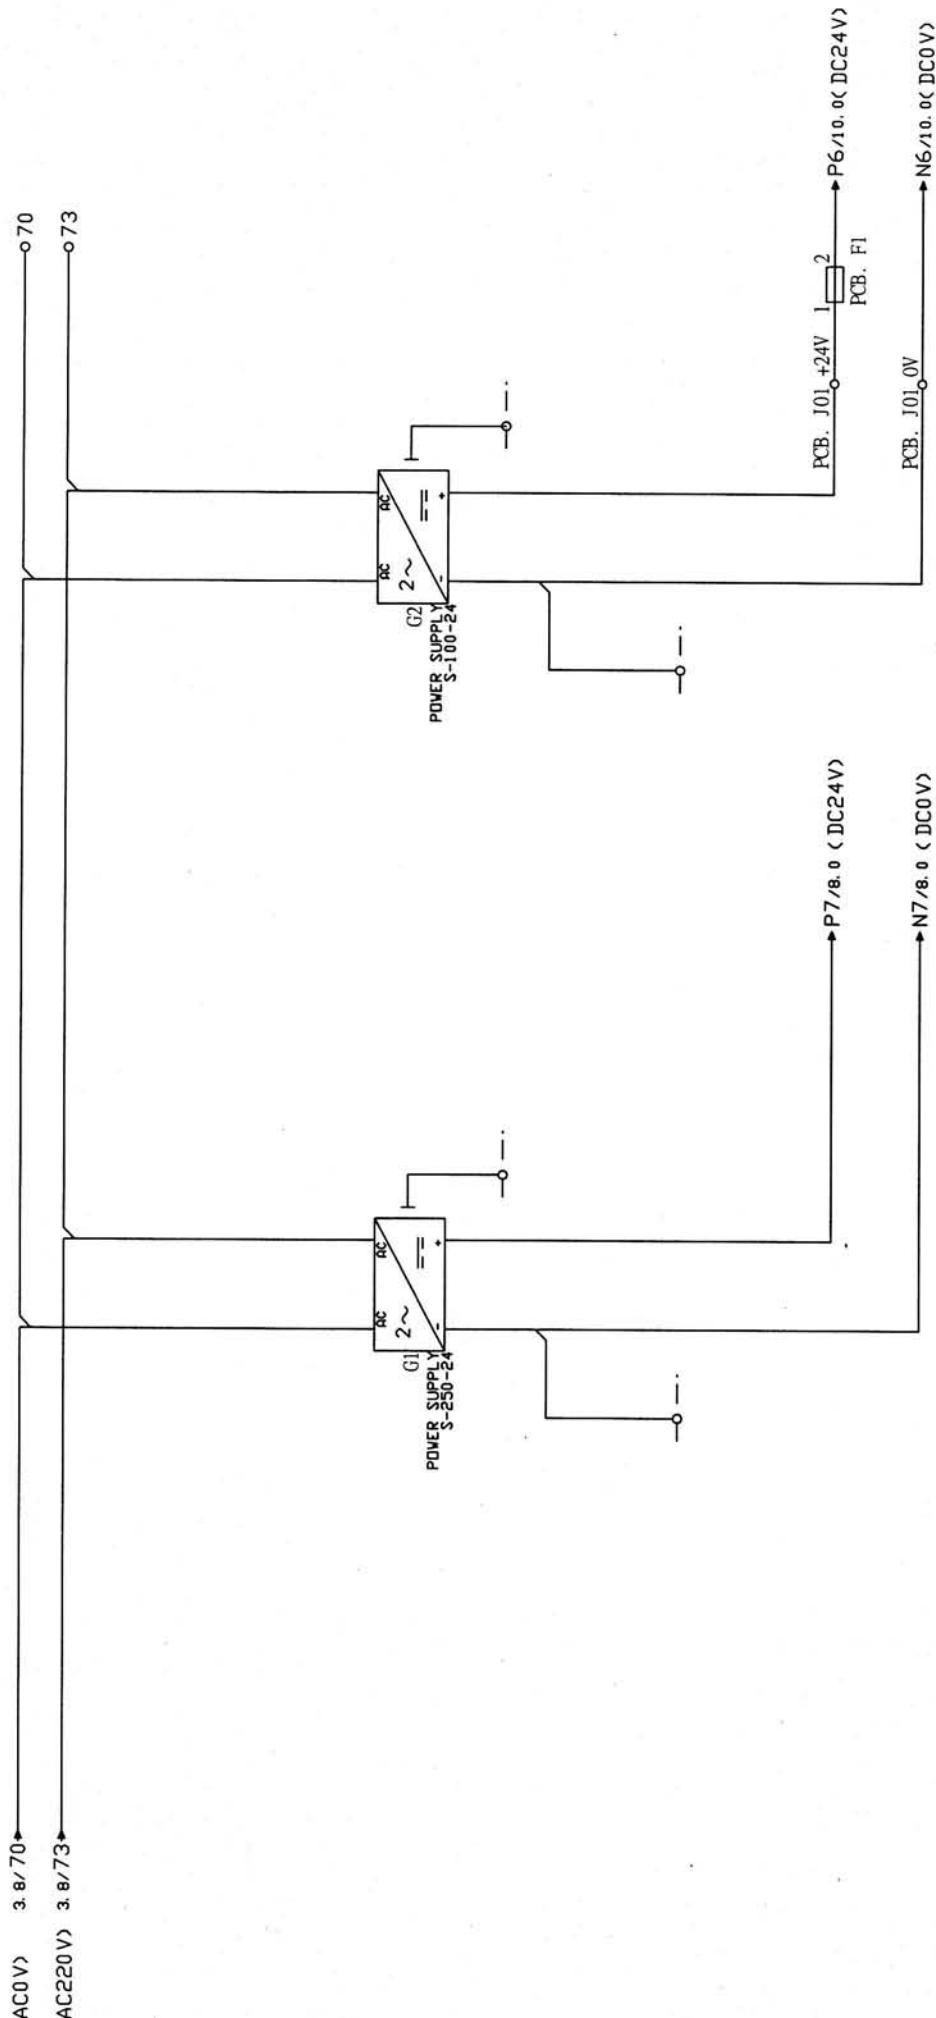

R GROUP

TITLE : POWER 220V-1

MACHINE MODEL
EMC-2240A


CONTROL :
ANILAM 6000i

Date:


01. APR. 2008

PAGE


5

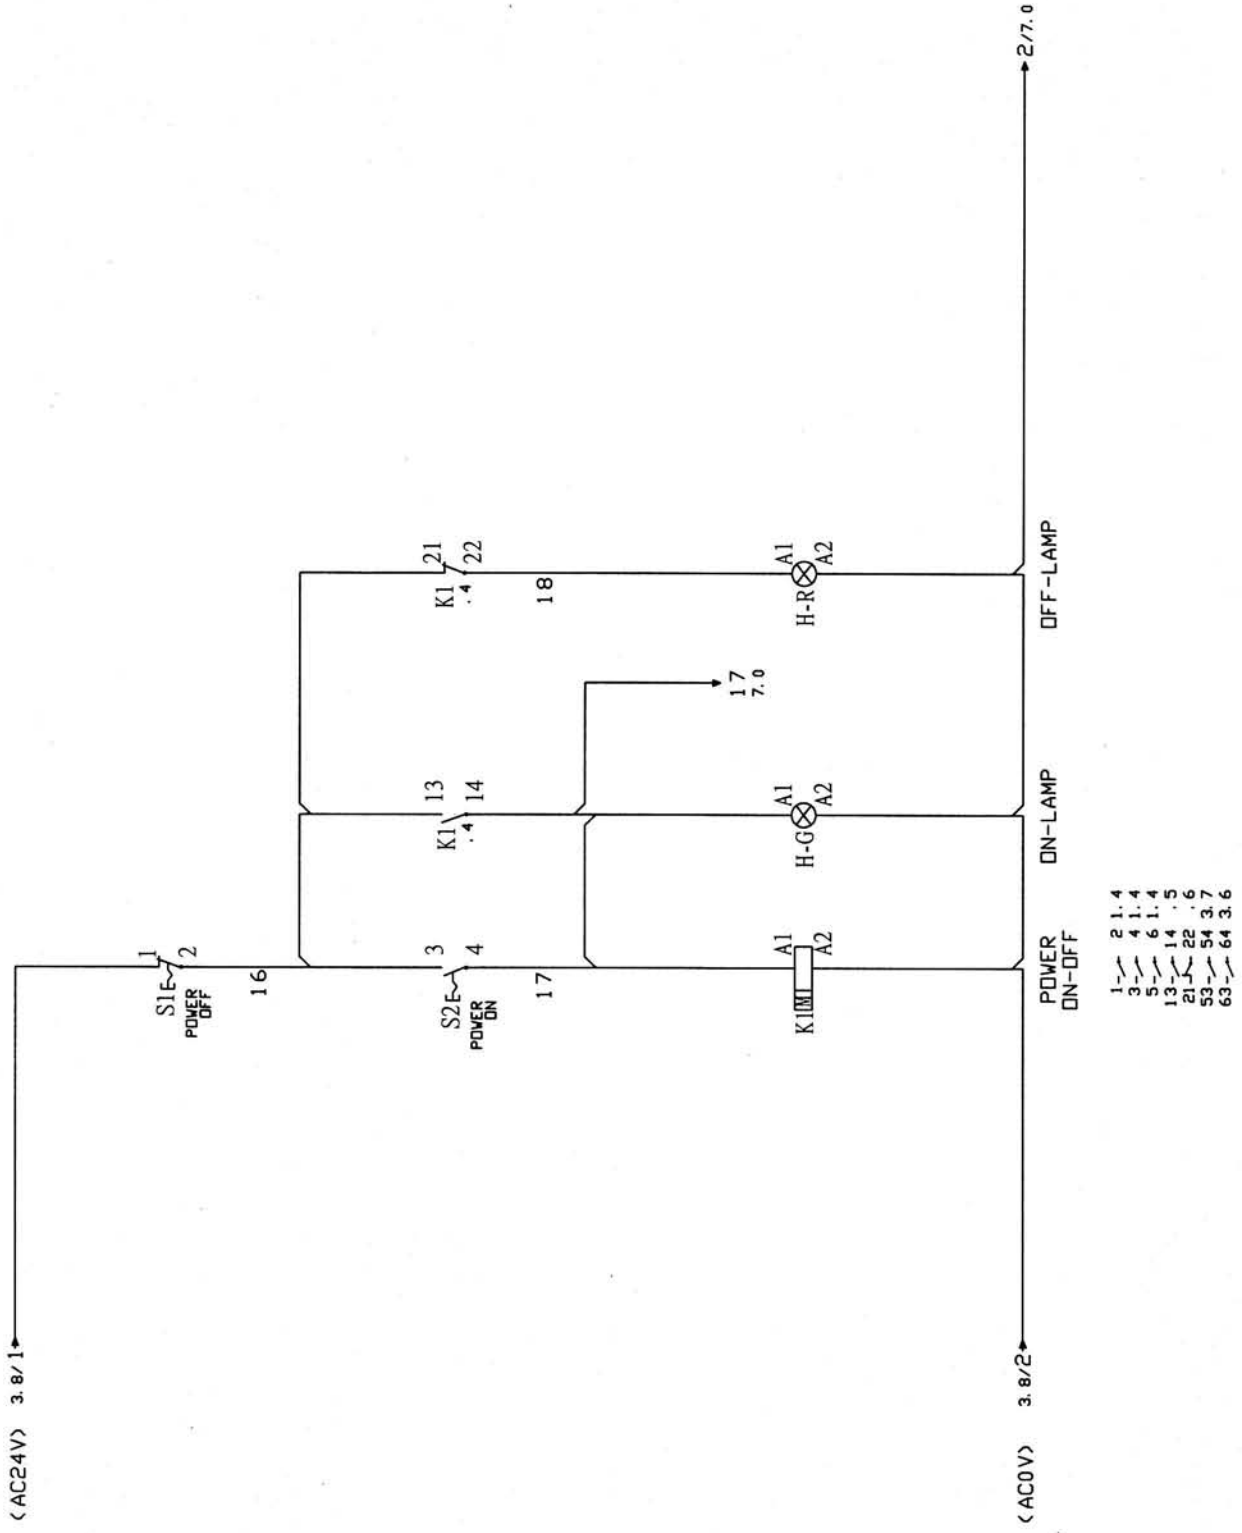

R GROUP	TITLE : CNC CONTROL UNIT(AC)-1	MACHINE MODEL	CONTROL :	Date:	PAGE 6
		EMC-2240A	ANILAM 6000i	01. APR. 2008	

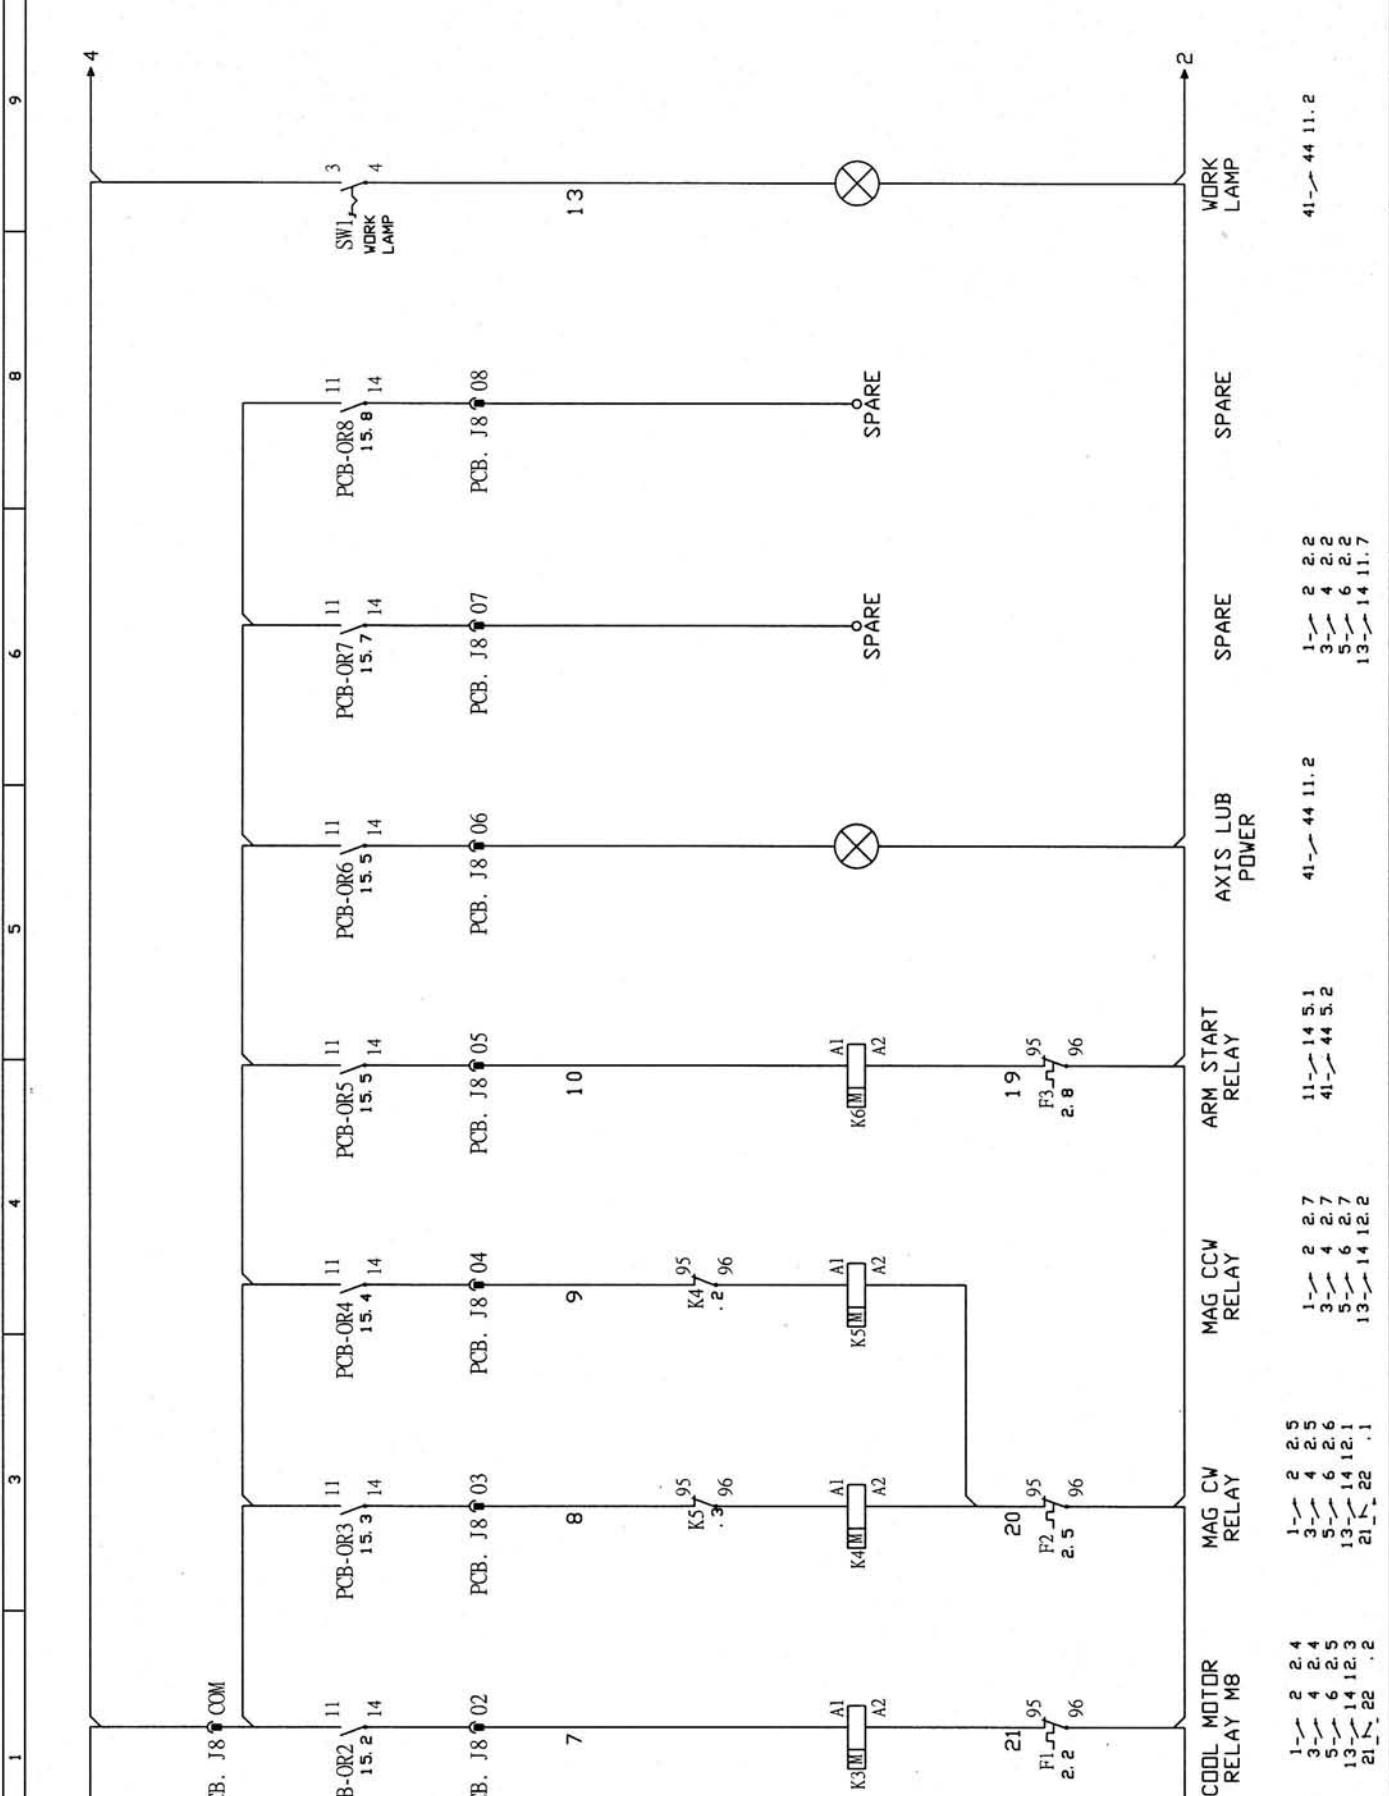

Terminal	Component	Wiring
2	CNC POWER ON	41-44 11.3
4	COMMON	
6	COOL MOTOR RELAY M8	1-2 2.4 3-4 2.4 5-6 2.5 13-14 12.3 21-22 .2
8	MAG CW RELAY	1-2 2.5 3-4 2.5 5-6 2.6 13-14 12.1 21-22 .1
9	MAG CCW RELAY	1-2 2.7 3-4 2.7 5-6 2.7 13-14 12.2
10	ARM START RELAY	11-14 5.1 41-44 5.2
13	AXIS LUB POWER	41-44 11.2
14	SPARE	1-2 2.2 3-4 2.2 5-6 2.2 13-14 11.7
15	SPARE	
19	FUSE	
20	FUSE	
21	FUSE	
41-44	WORK LAMP	41-44 11.2

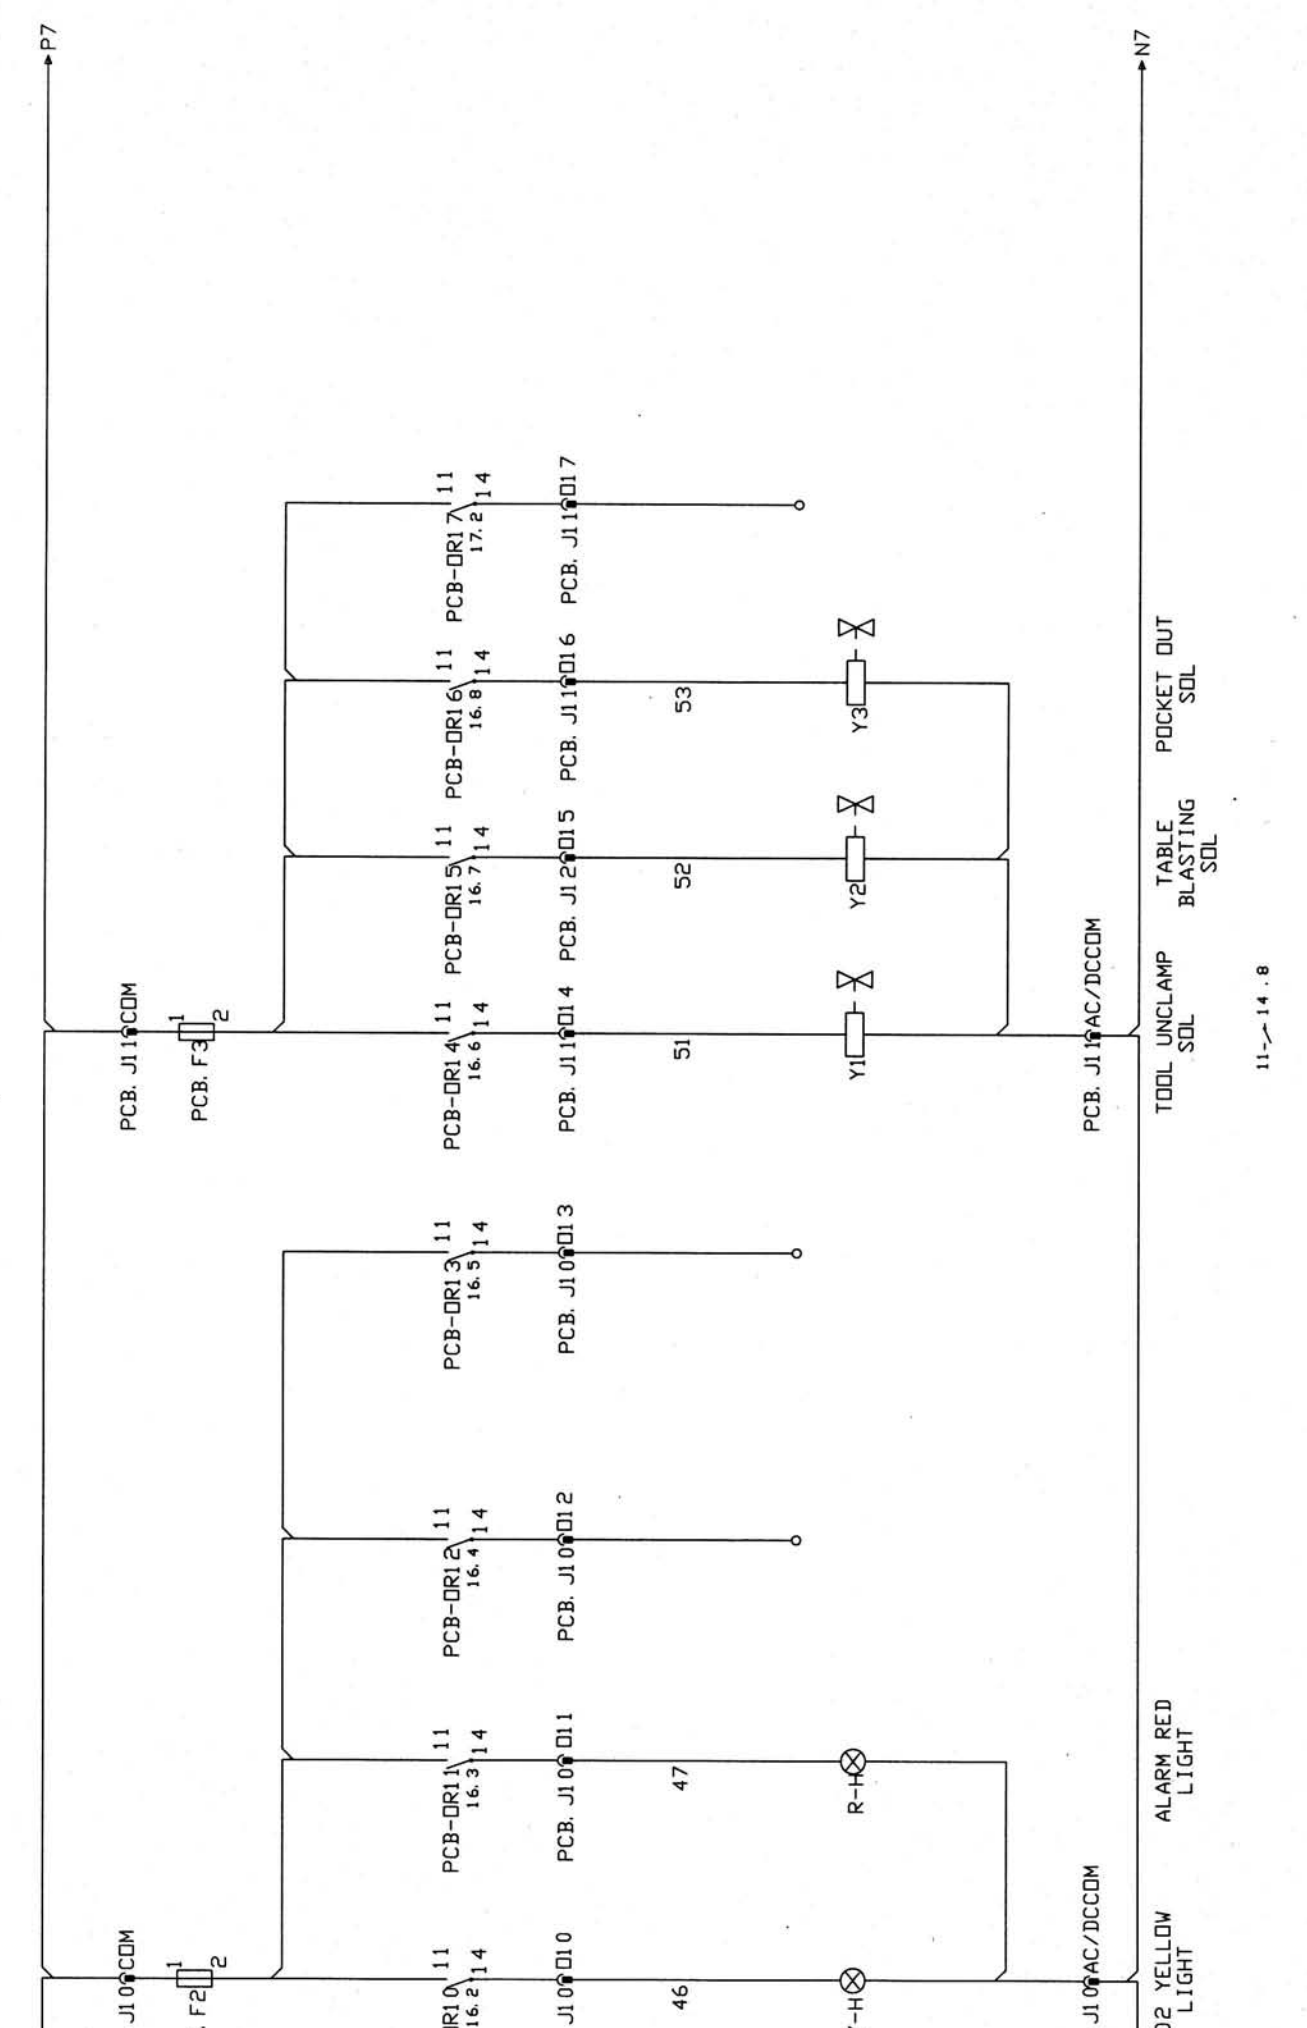


11-14.8

9	MACHINE MODEL	CONTROL :	Date:
R GROUP	TITLE : CNC CONTROL UNIT(SOL)-1	EMC-2240A	01. APR. 2008
		ANILAM 6000i	PAGE 8

V>8. 9/P7 → P7

 PCB. J12 CDM



PCB-DR18
11 14
17.3

PCB-DR19
11 14
17.4

PCB-DR20
11 14
17.5

PCB-DR21
11 14
17.6

PCB. J12 DI10

PCB. J12 DI11

PCB. J12 DI12

PCB. J12 DI13

PCB. J12 AC/DCCDM

V>8. 9/N7 → N7

R GROUP

TITLE : CNC CONTROL UNIT(SOL) -2

10

MACHINE MODEL
EMC-2240A

CONTROL :
ANILAM 6000i

Date:

01. APR. 2008

PAGE

9


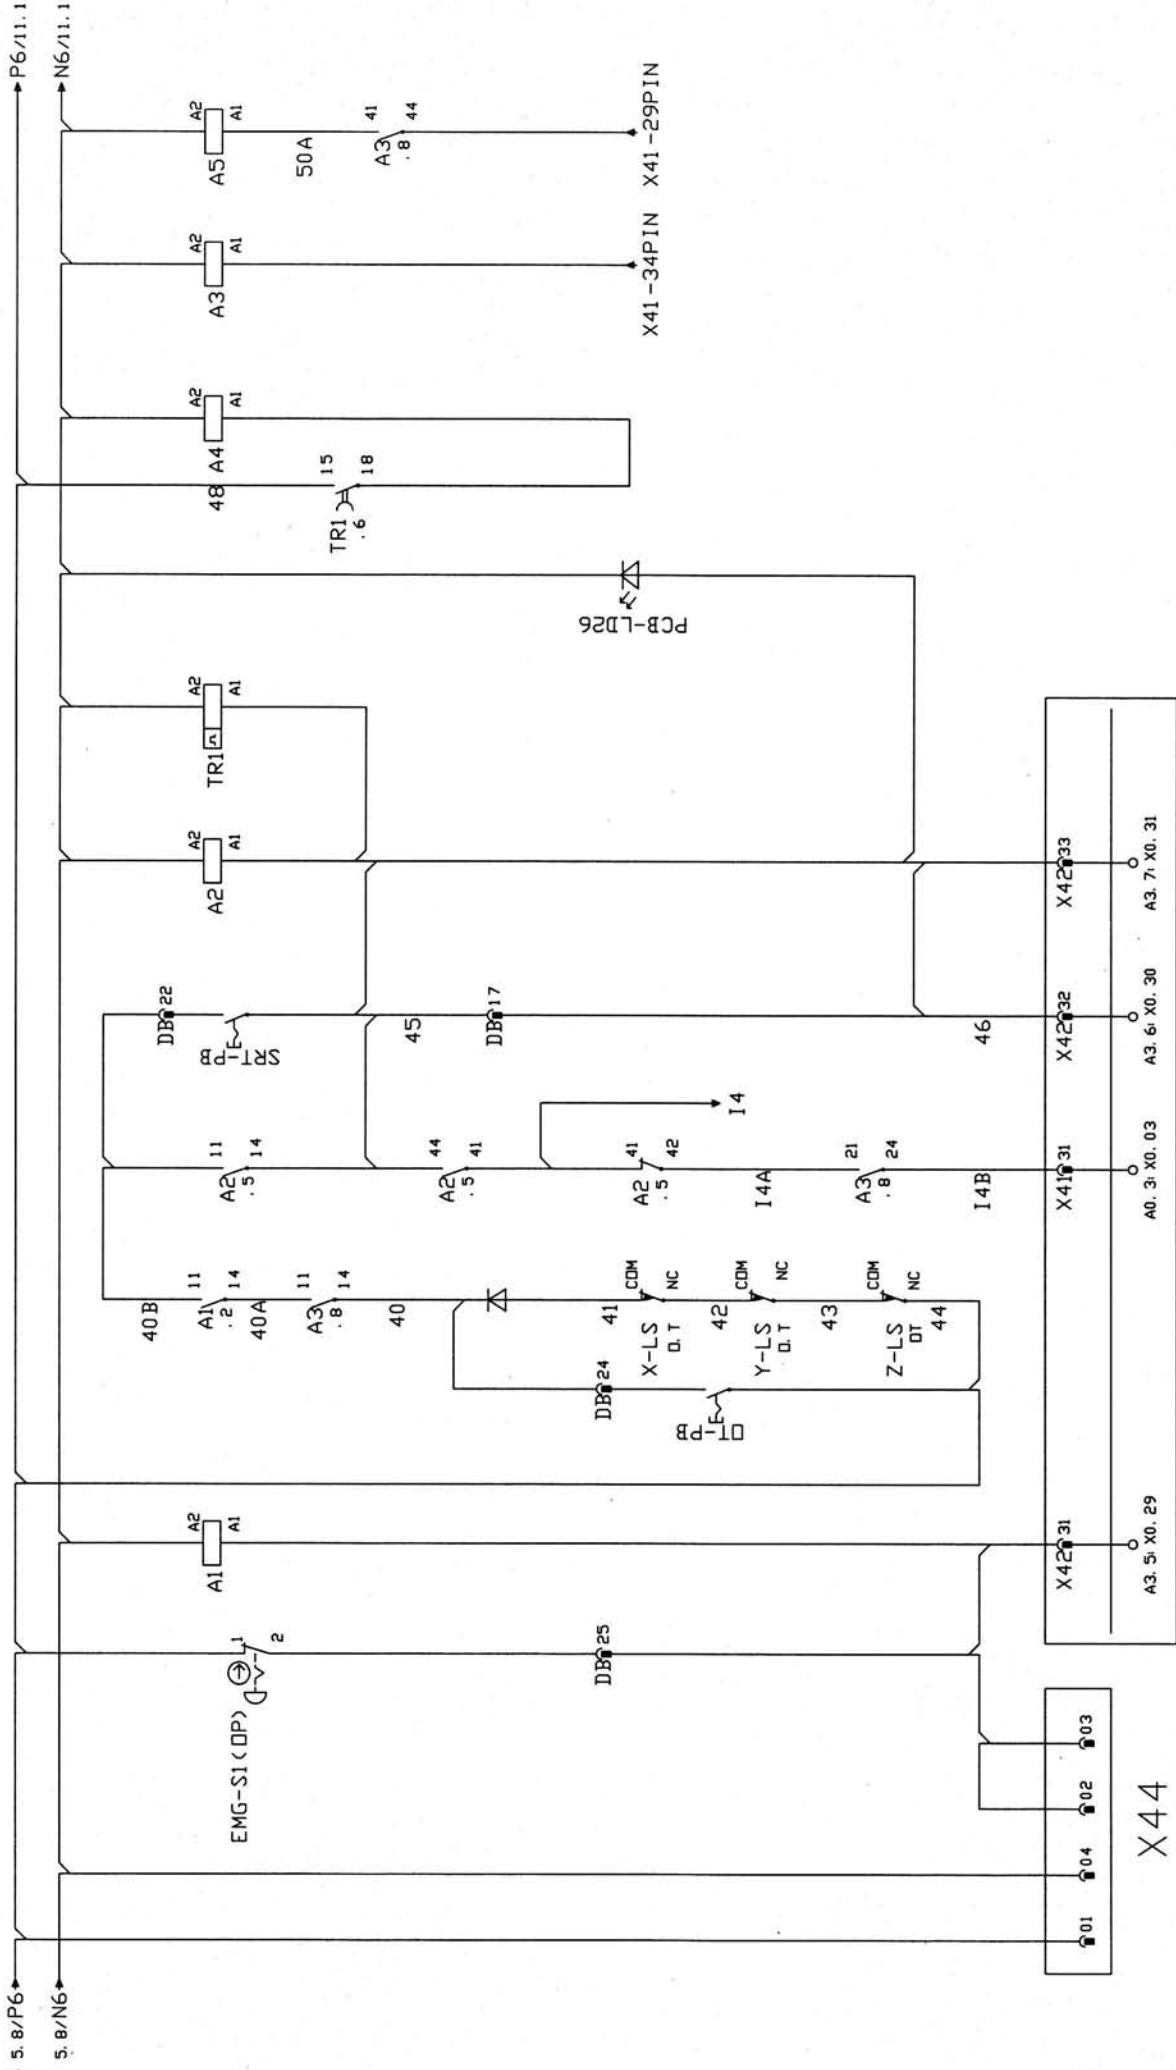


IMAGE OF E-STOP 11-14.3
 CNCACK IMAGE OF DRV ENABLE 11-14.4
 *SYSTEM DRV ENABLE HARDWARE 41-44.4, 41-42.4
 X42 33 15-18.7
 X42 32 A3.6, X0.30 A3.7, X0.31
 X41 31 A0.3, X0.03 A3.7, X0.31
 X42 31 A3.5, X0.29
 X44 01, 02, 03, 04
 X41-34PIN
 X41-29PIN
 50A
 TR1 .6
 DB22
 DB24
 DB25
 DB17
 DB18
 DB19
 DB20
 DB21
 DB23
 DB26
 DB27
 DB28
 DB29
 DB30
 DB31
 DB32
 DB33
 DB34
 DB35
 DB36
 DB37
 DB38
 DB39
 DB40
 DB41
 DB42
 DB43
 DB44
 DB45
 DB46
 DB47
 DB48
 DB49
 DB50
 DB51
 DB52
 DB53
 DB54
 DB55
 DB56
 DB57
 DB58
 DB59
 DB60
 DB61
 DB62
 DB63
 DB64
 DB65
 DB66
 DB67
 DB68
 DB69
 DB70
 DB71
 DB72
 DB73
 DB74
 DB75
 DB76
 DB77
 DB78
 DB79
 DB80
 DB81
 DB82
 DB83
 DB84
 DB85
 DB86
 DB87
 DB88
 DB89
 DB90
 DB91
 DB92
 DB93
 DB94
 DB95
 DB96
 DB97
 DB98
 DB99
 DB100


24V) 10. 9P6 →
 CC0V) 10. 9N6 →

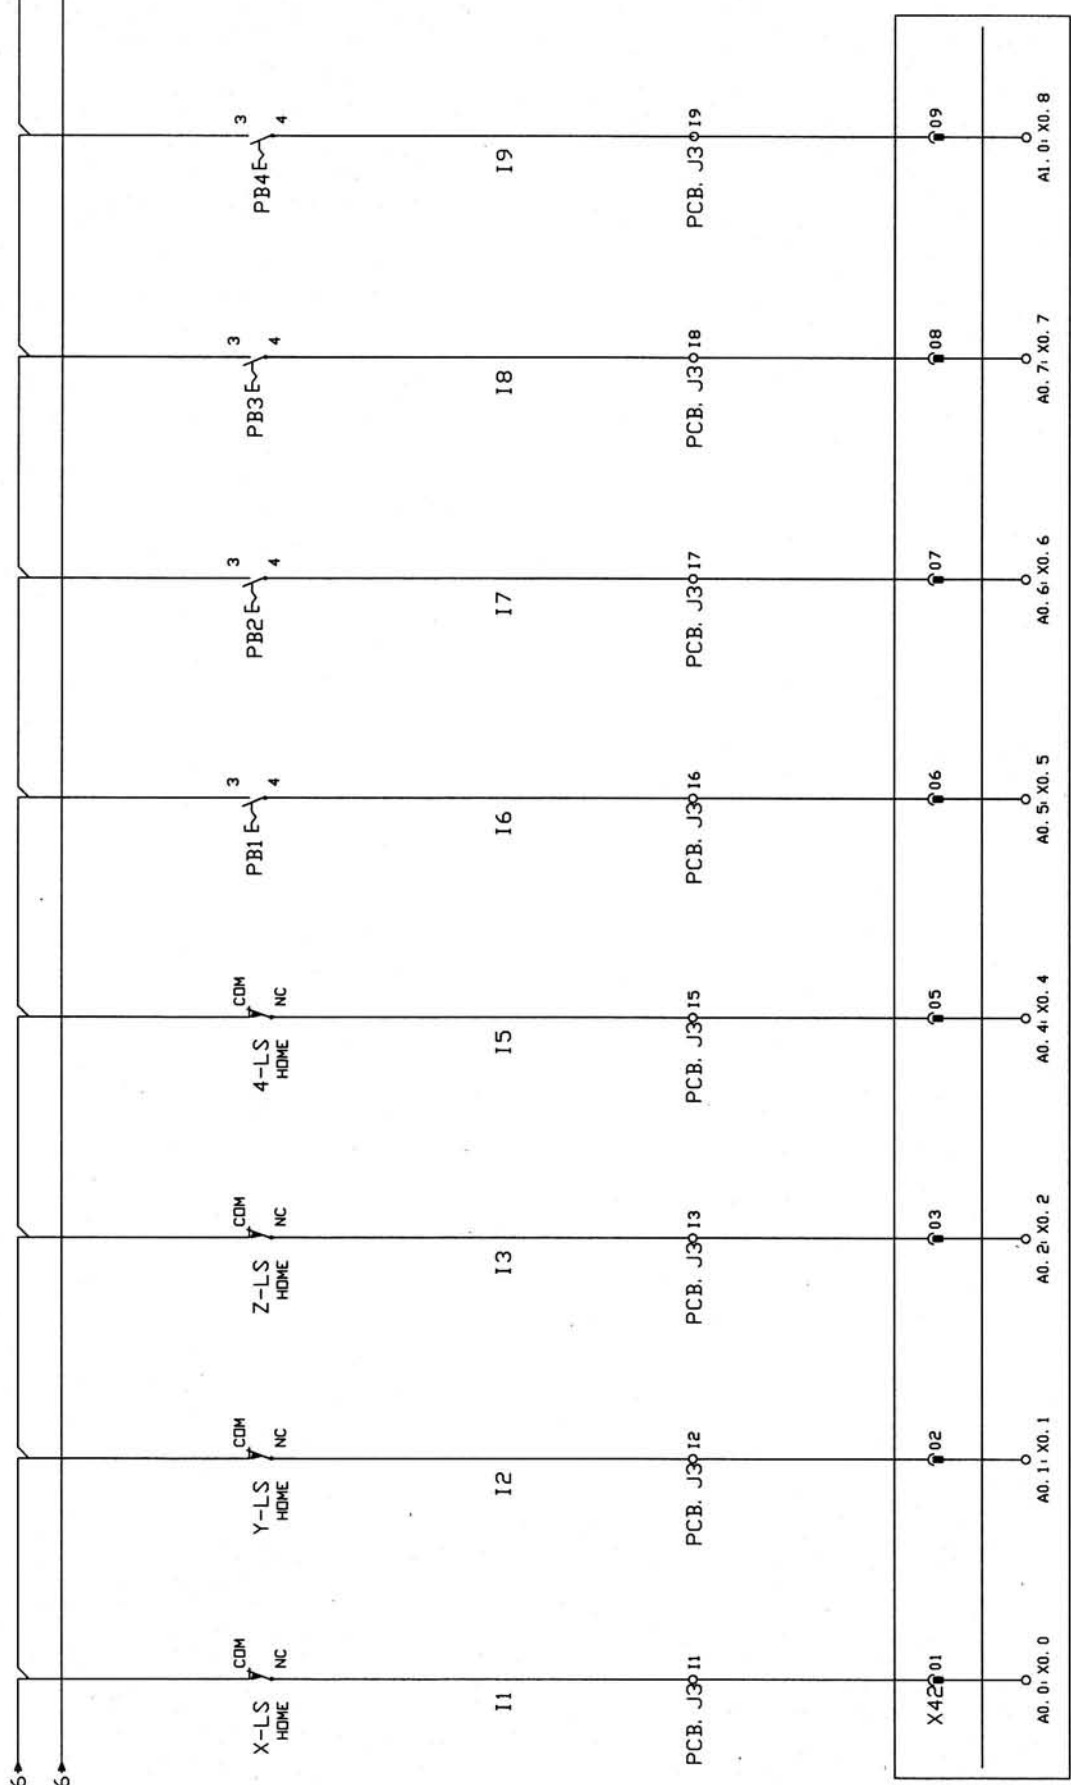

XHOME YHOME ZHOME AX4 HOME (SPARE) MAG CW PB. MAG CCW PB. MAG HOME PB. ARM SW PB.

X42
10.2

C24V)11.9P6 →
 C0V) 11.9N6 →
 P6/13.1 →
 N6/13.1 →

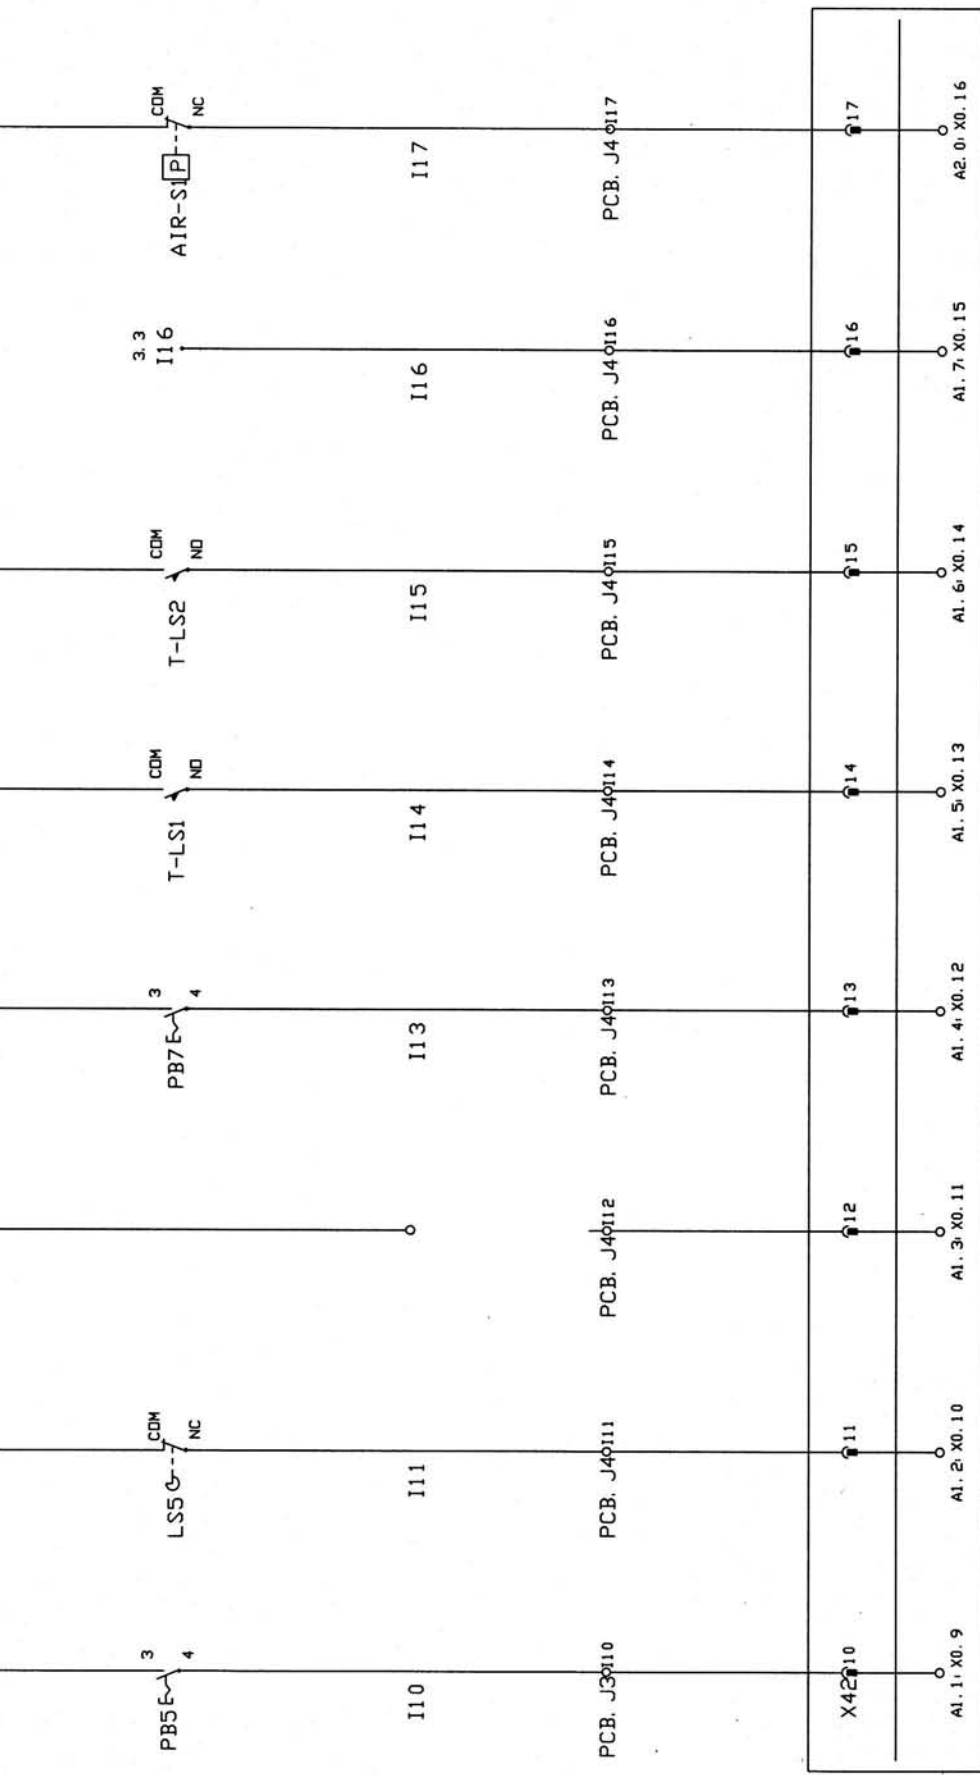

DOOR
 RESEASE
 PB.
 (OPTION)

DOOR
 LIMIT
 LS.
 (OPTION)

TOOL
 UNCLAMP
 PB.


TOOL IN
 SWITCH

TOOL OUT
 SWITCH

MAG HOME
 PB


ARM SW
 PB.

X42
 10.2

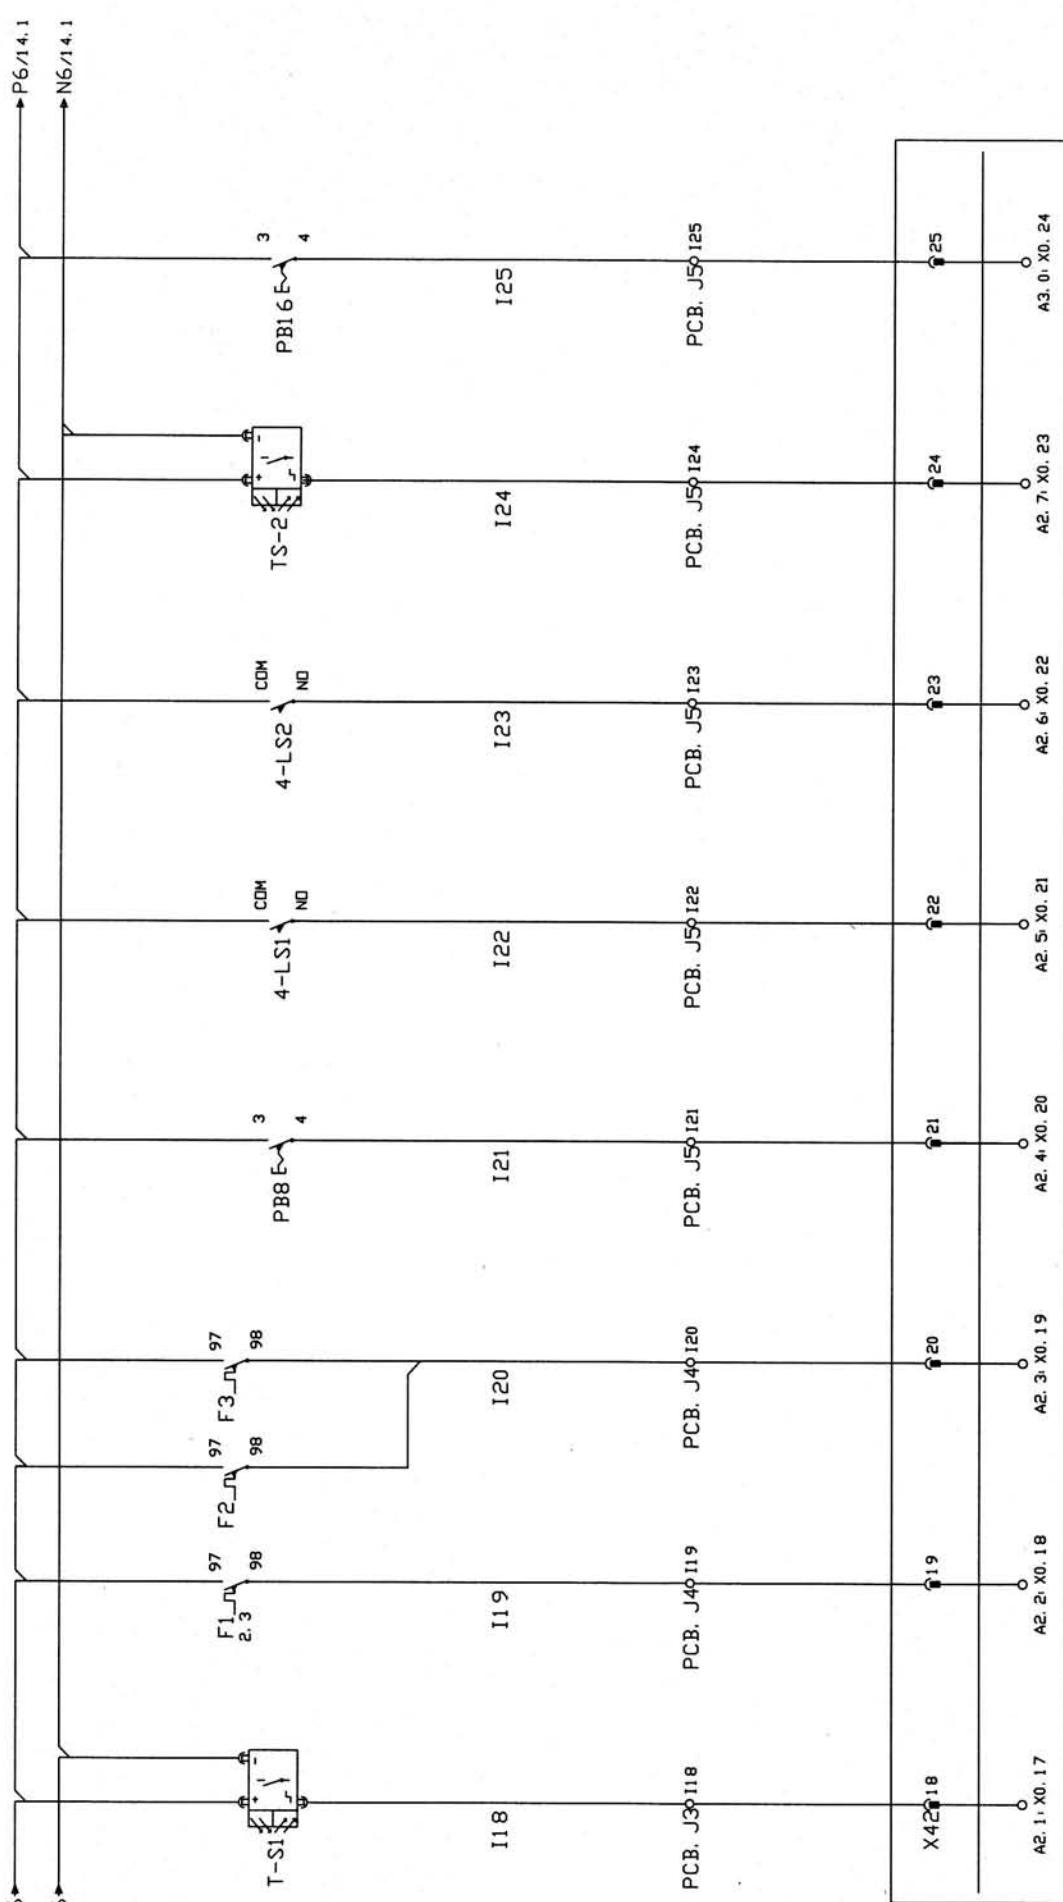

MAG COMPUTER SENSOR (SPARE)
 ALL MOTOR OVERLOAD
 TABLE BLASL AIR PB.
 4TH UCLP LIM SW (POTION)
 4TH CLP LIM SW (POTION)
 MAG HOME SENSOR
 COOLANT PUMP PB.

X42
10.2

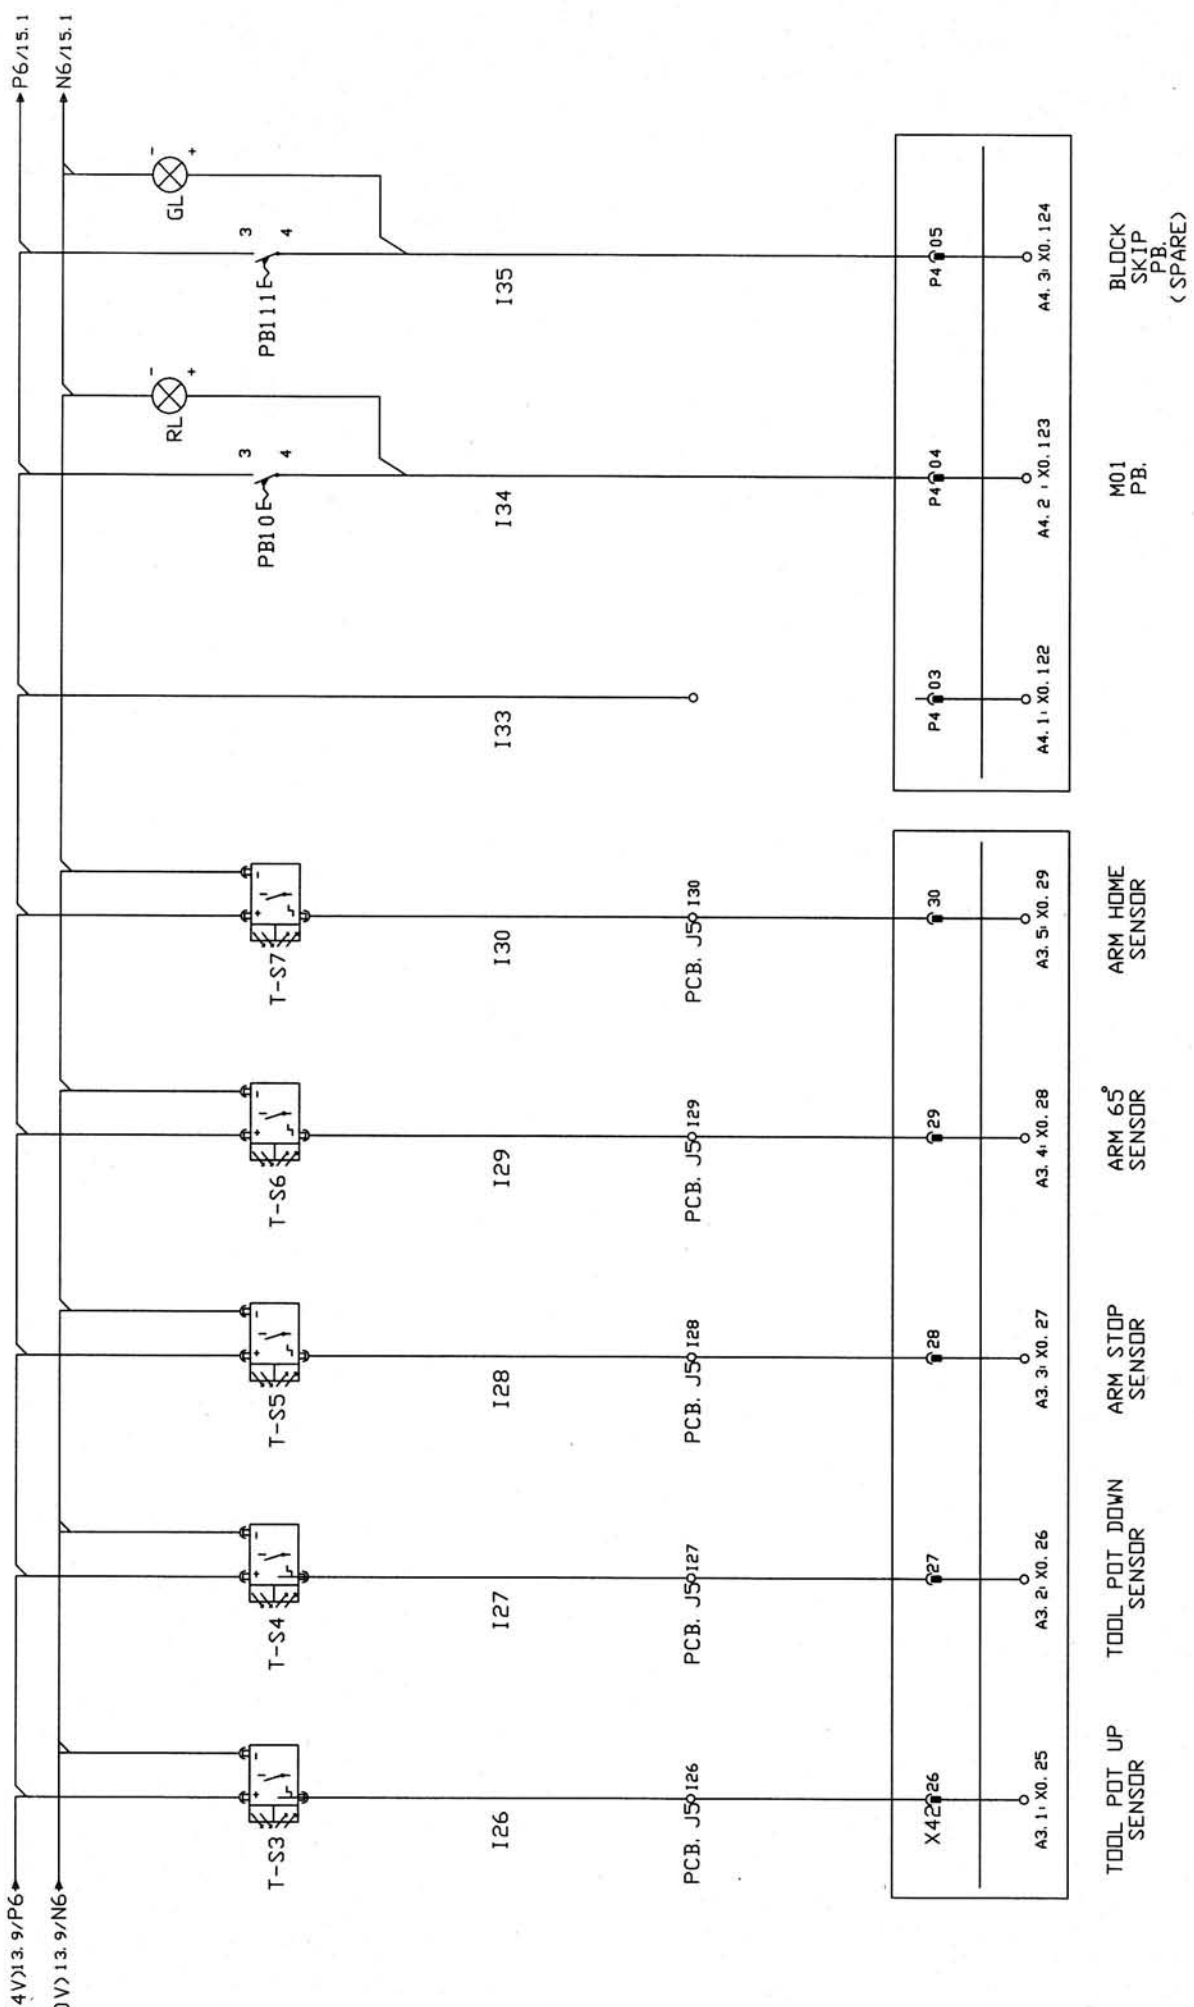


X42
10.2

GROUP TITLE : CNC I/O(INPUT) -4	MACHINE MODEL EMC-2240A	CONTROL : ANILAM 6000i	Date: 01. APR. 2008	15
			PAGE 14	


- TOOL POT UP SENSOR
- TOOL POT DOWN SENSOR
- ARM STOP SENSOR
- ARM 65° SENSOR
- ARM HOME SENSOR
- M01 PB.
- BLOCK SKIP PB. (SPARE)

X41
16.0

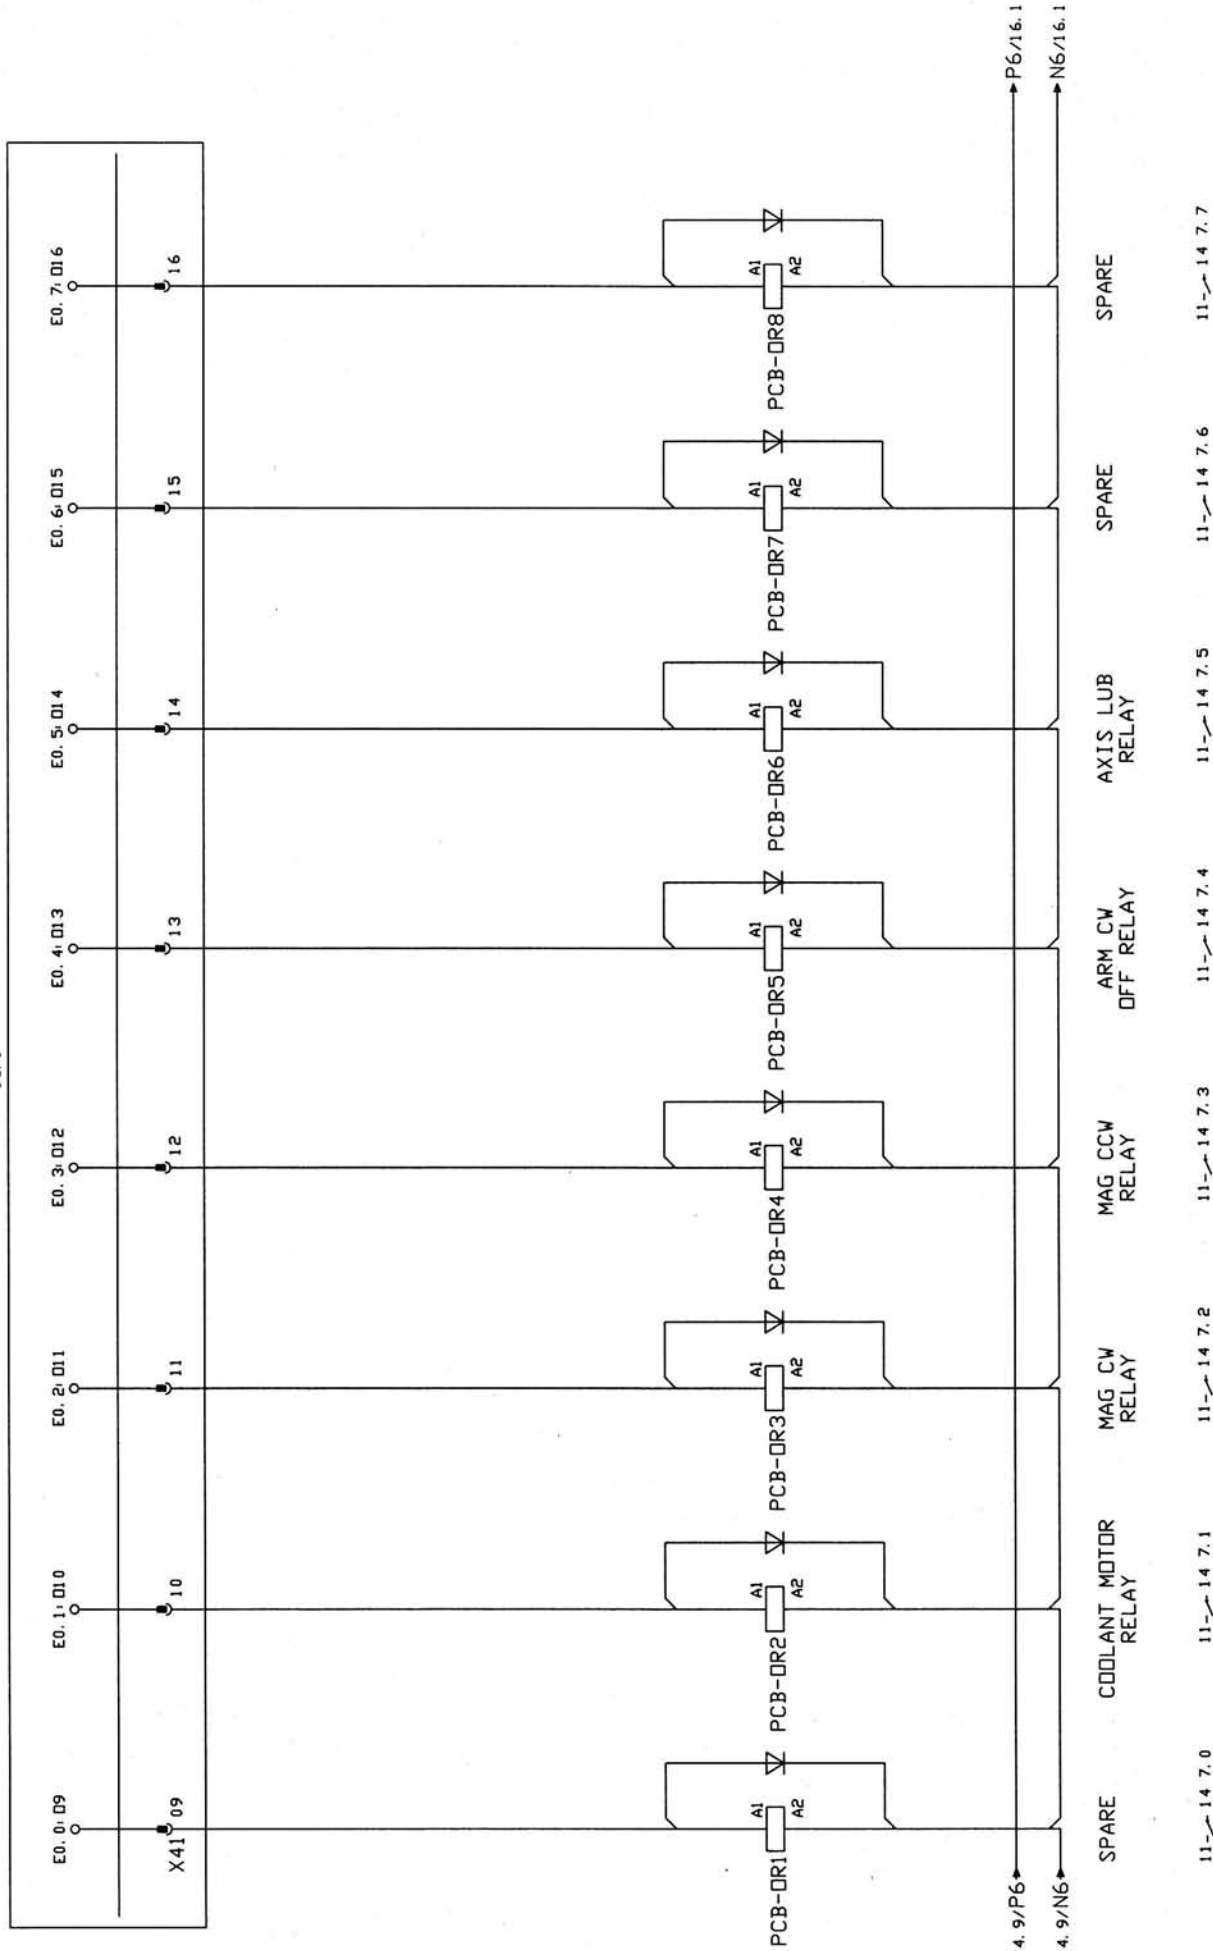


11-14 7.0	11-14 7.1	11-14 7.2	11-14 7.3	11-14 7.4	11-14 7.5	11-14 7.6	11-14 7.7
SPARE	COOLANT MOTOR RELAY	MAG CW RELAY	MAG CCW RELAY	ARM CW OFF RELAY	AXIS LUB RELAY	SPARE	SPARE

X41
15.0

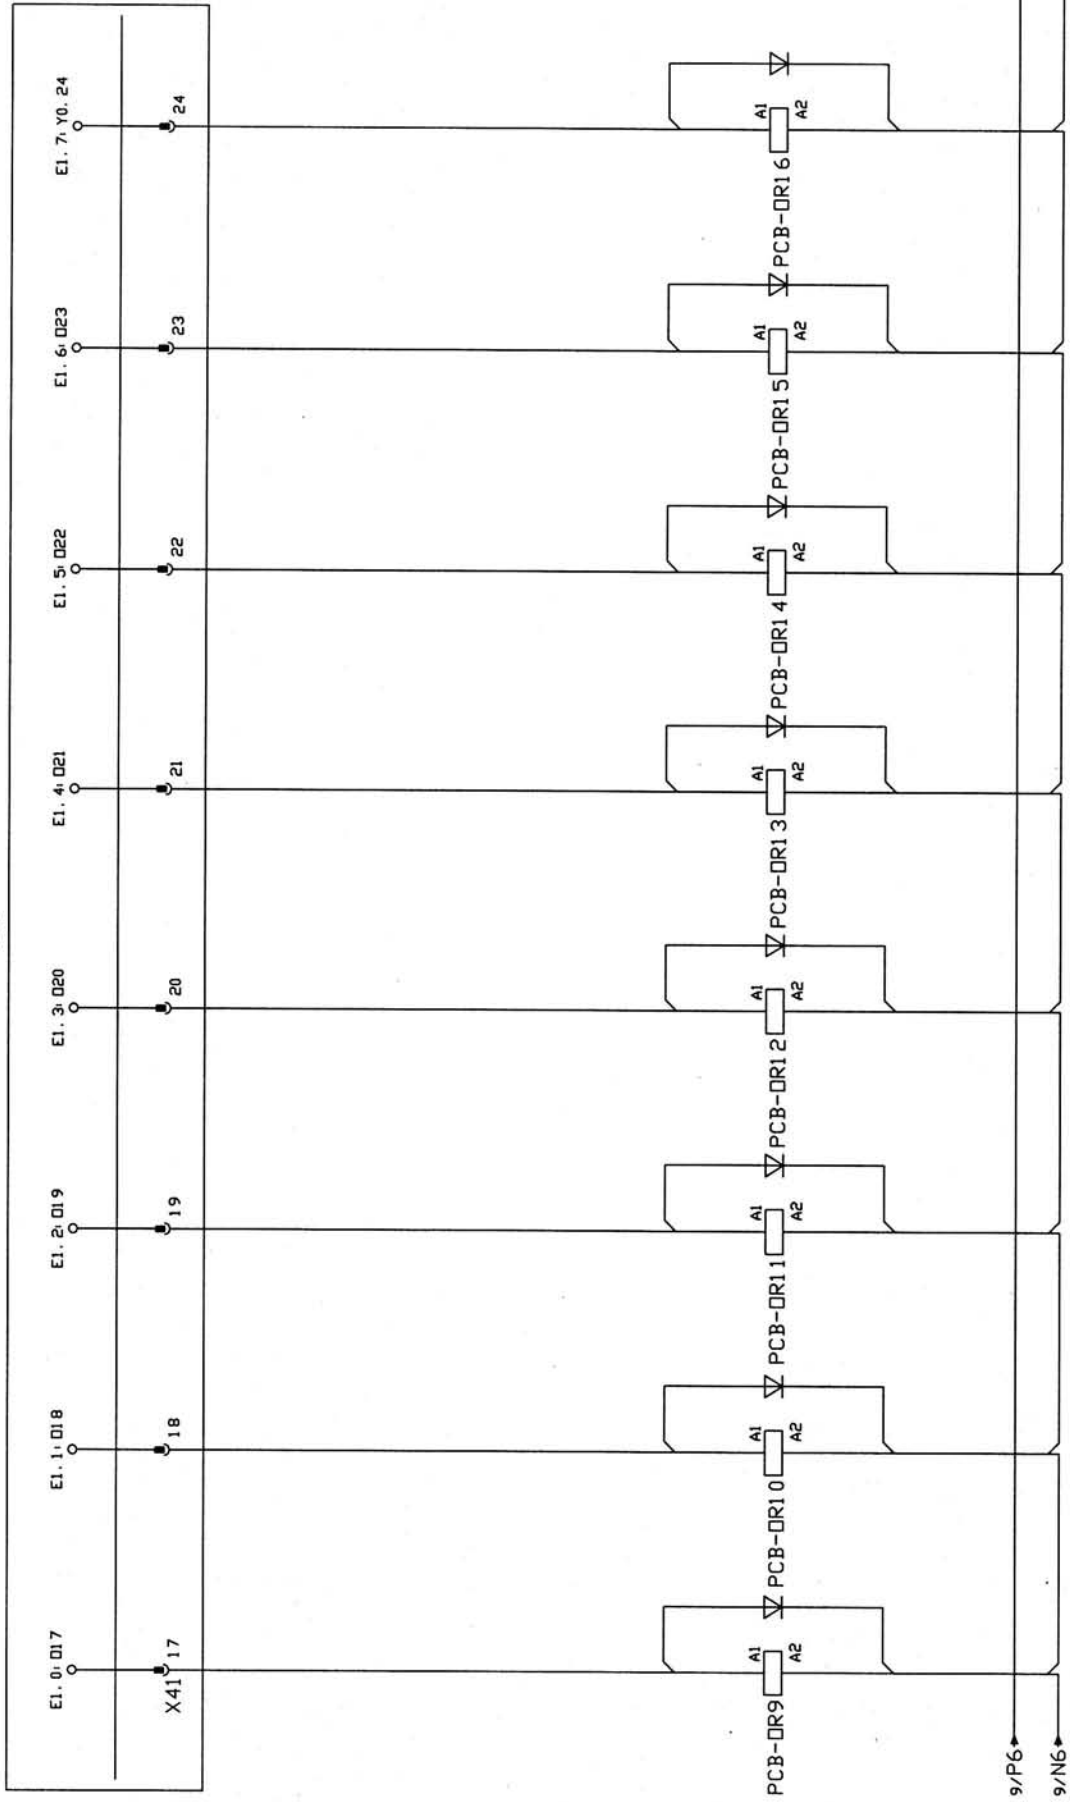



SPARE	M02 YELLOW RELAY	ALARM RED RELAY	SPARE	SPARE	TOOL DOWN RELAY	TABLE BLASTING AIR RELAY	TOOL POT DOWN RELAY
11-14 7.8	1-14 8.2	11-14 8.3	11-14 8.4	11-14 8.5	11-14 9.0	11-14 9.1	11-14 9.2

X41
16.0

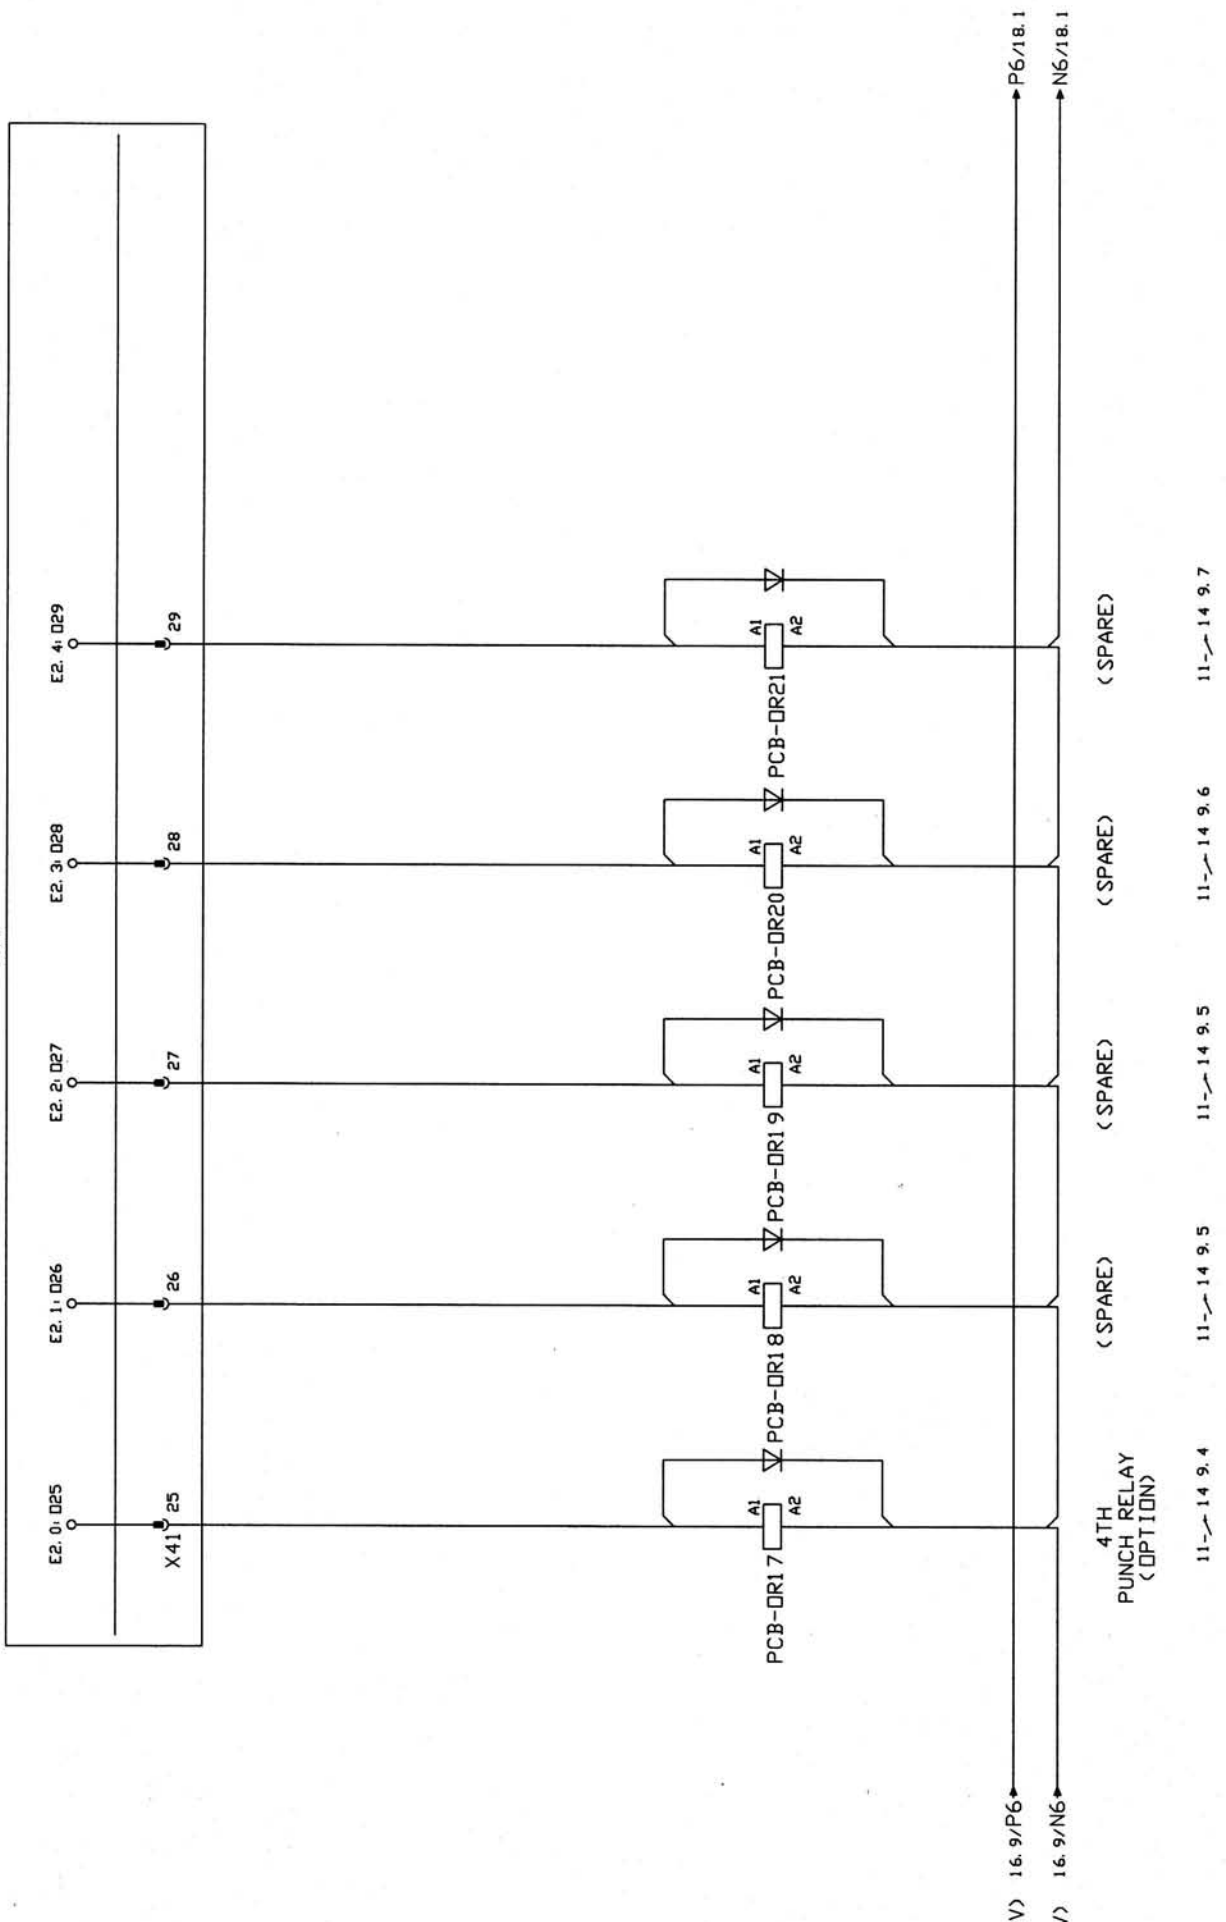


MACHINE MODEL EMC-2240A	CONTROL :	Date:	PAGE
	TITLE : CNC I/O(OUTPUT)-3	ANILAM 6000i	01. APR. 2008

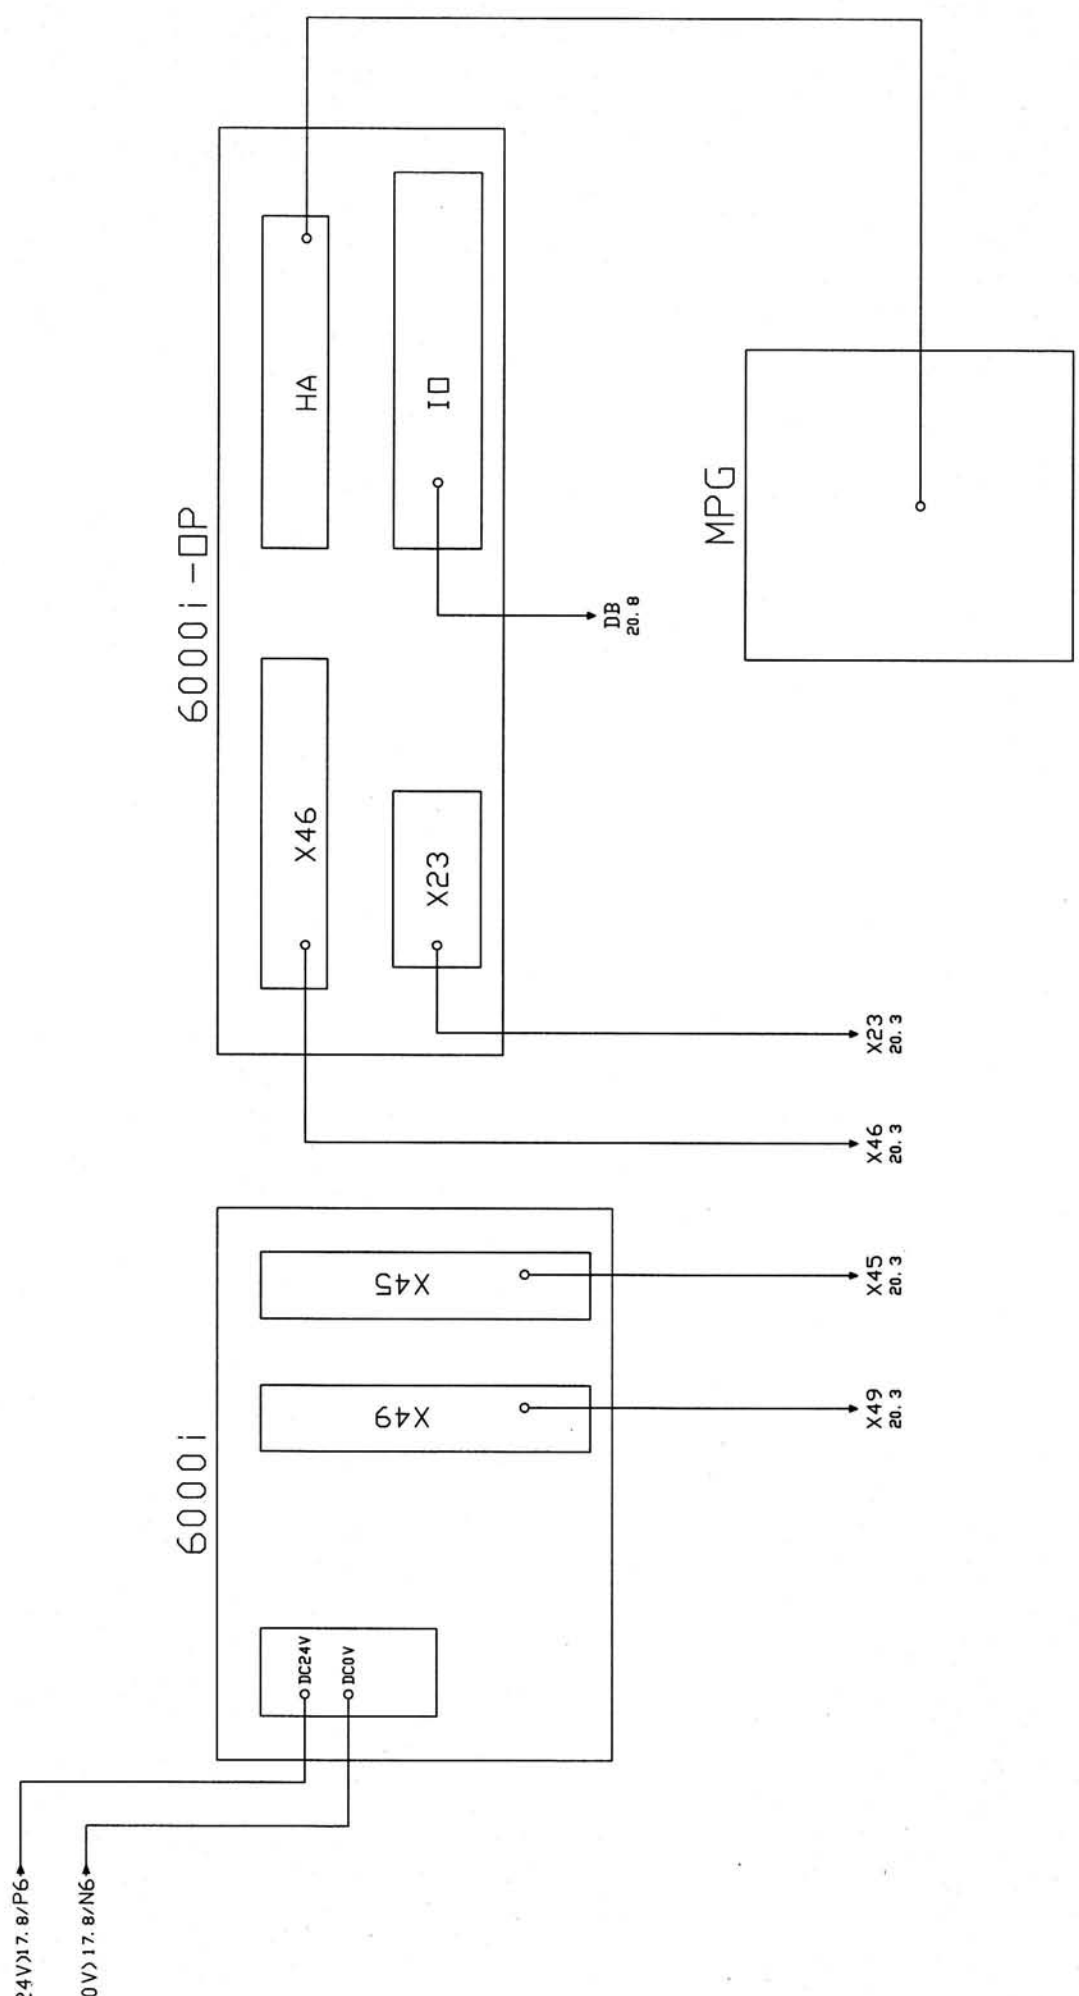


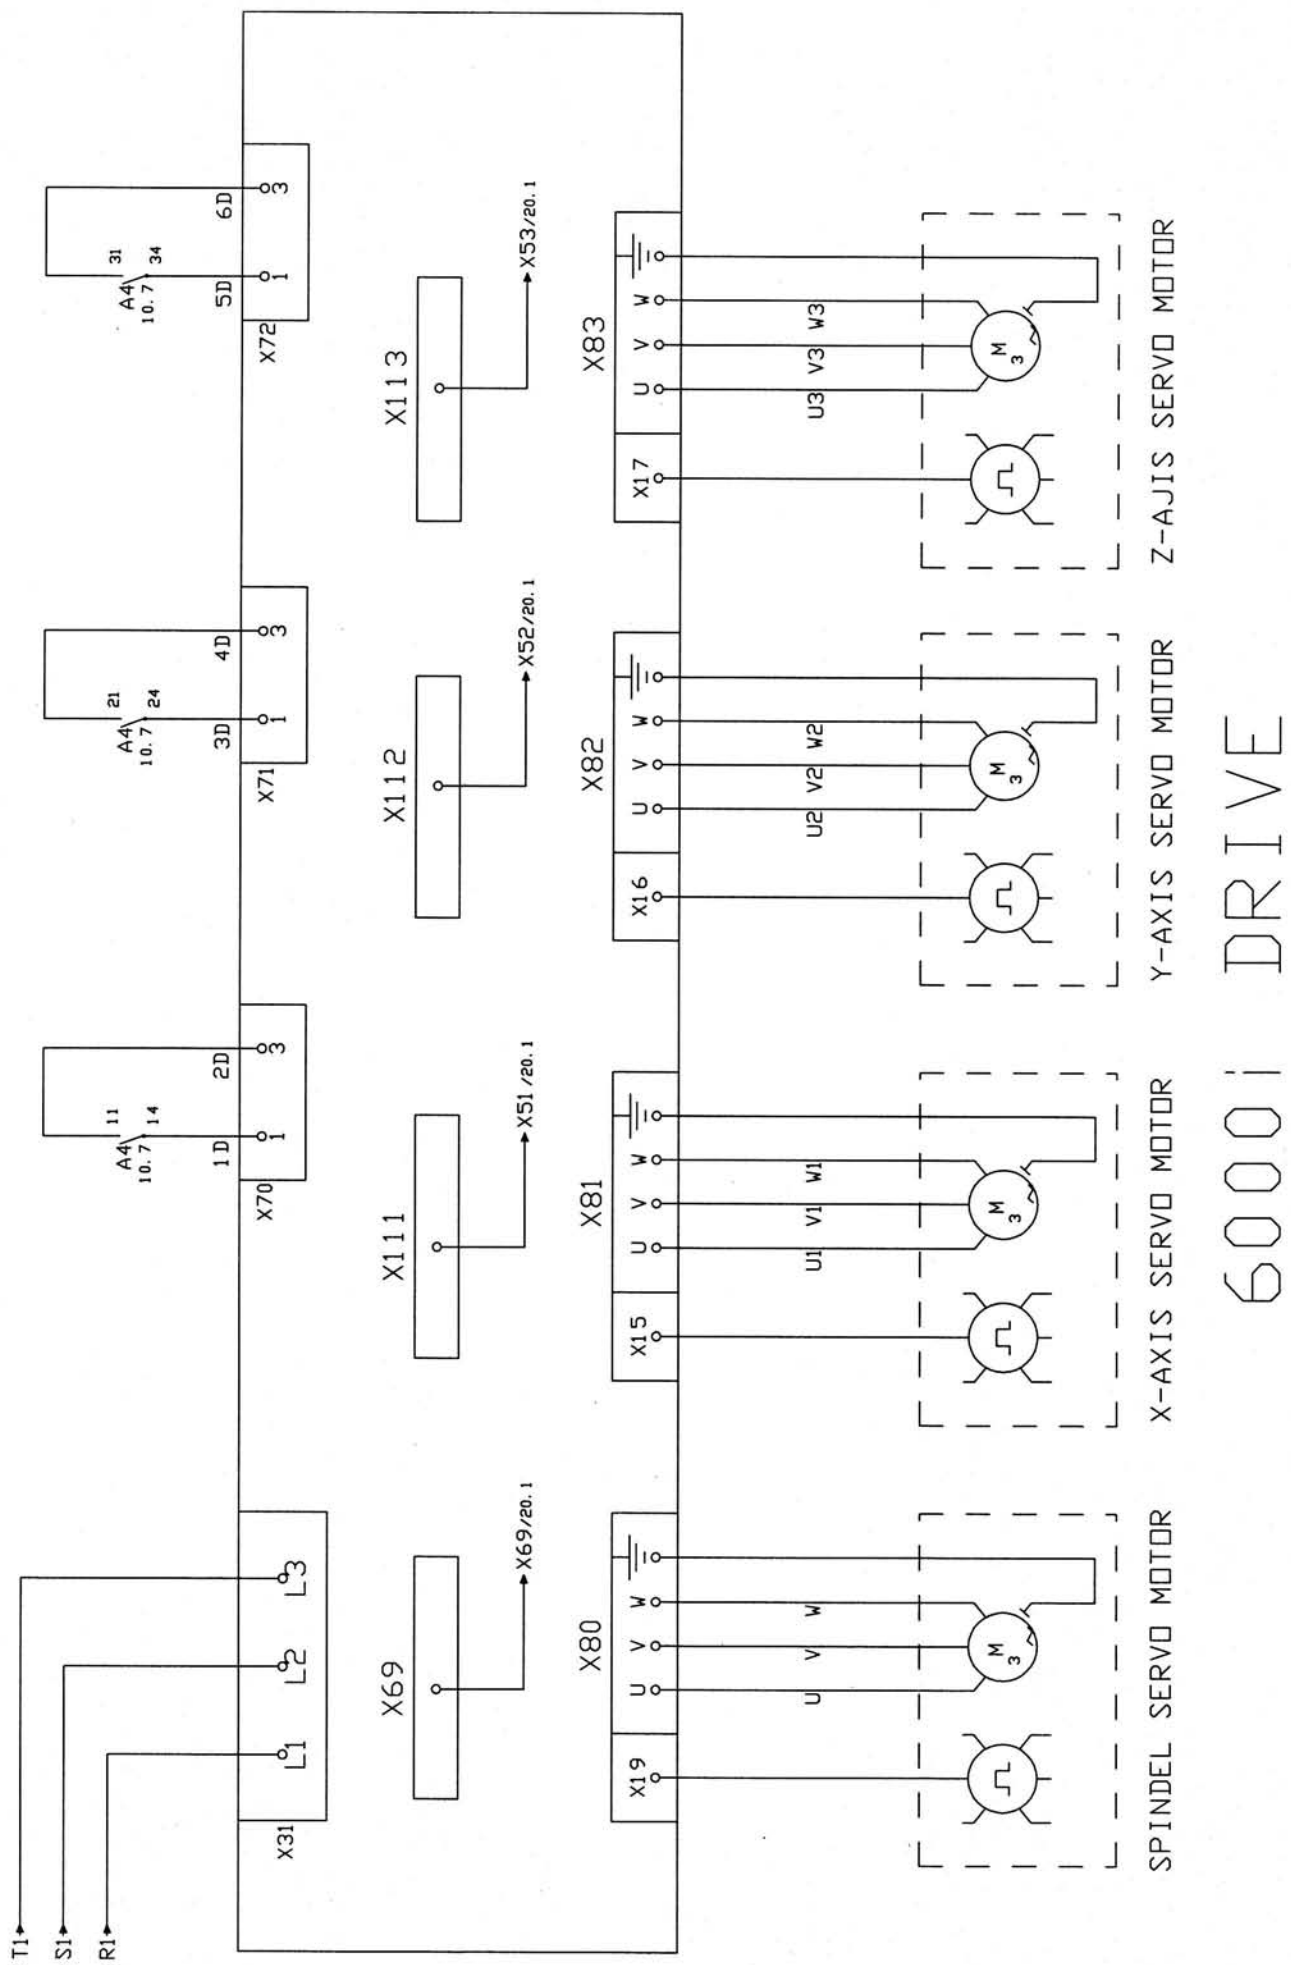

6000i DRIVE









R GROUP	TITLE : CNC 6000i DRIVER	MACHINE MODEL EMC-2240A	CONTROL : ANILAM 6000i	Date : 01. APR. 2008	PAGE	19
---------	--------------------------	----------------------------	---------------------------	-------------------------	------	----

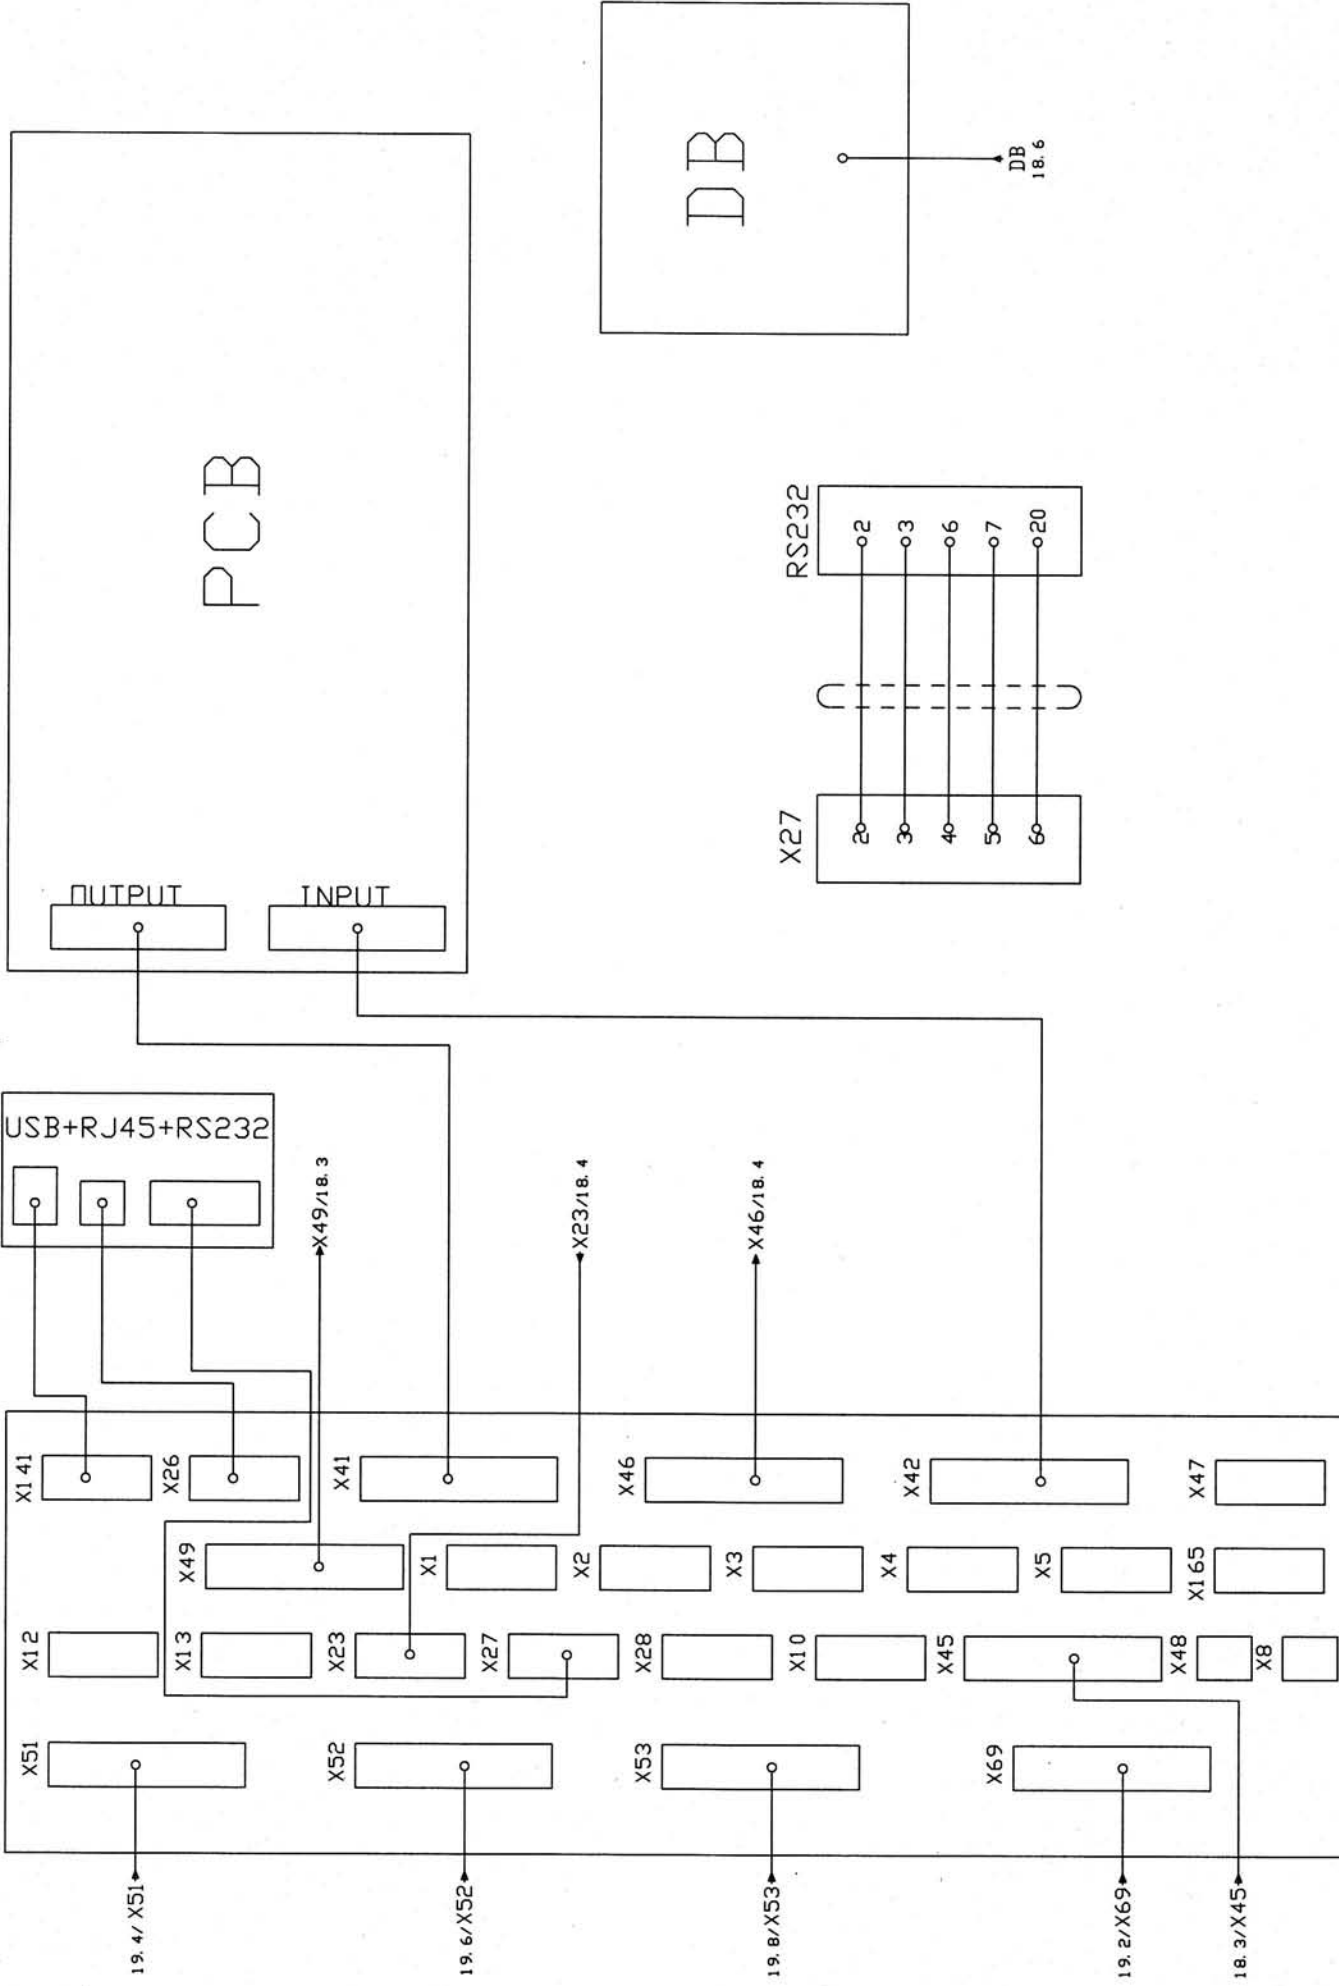



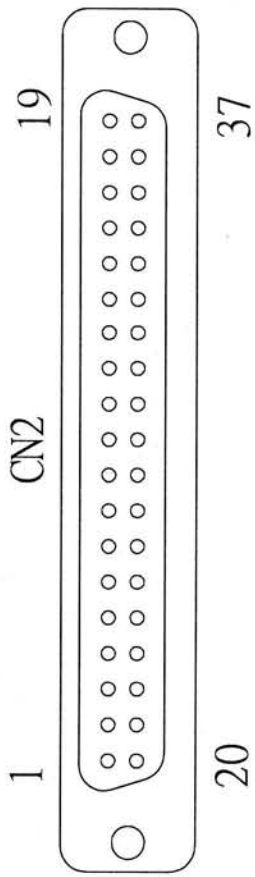



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	PE

X41-19	PE
X41-18	X41-37
X41-17	X41-36
X41-16	X41-35
X41-15	X41-34
X41-14	X41-33
X41-13	X41-32
X41-12	I4B
X41-11	X41-30
X41-10	X41-29
X41-9	X41-28
X41-8	X41-27
X41-7	X41-26
X41-6	X41-25
X41-5	X41-24
X41-4	X41-23
X41-3	X41-22
X41-2	X41-21
X41-1	X41-20

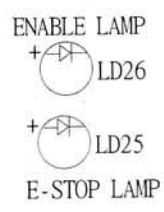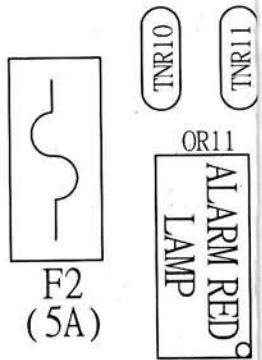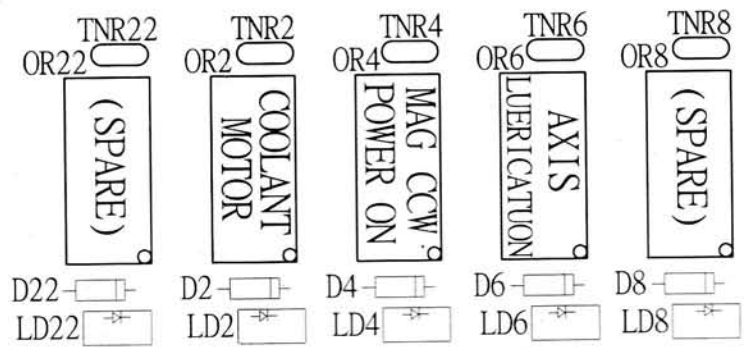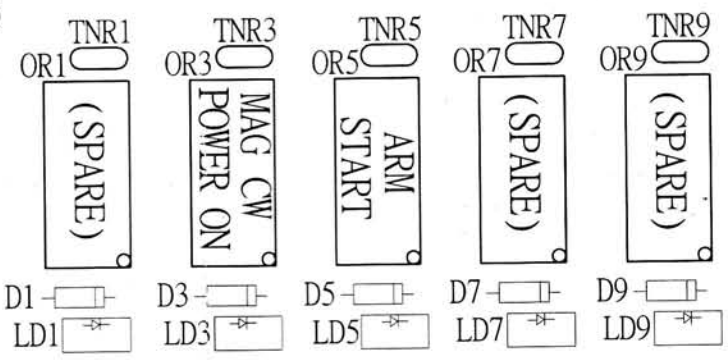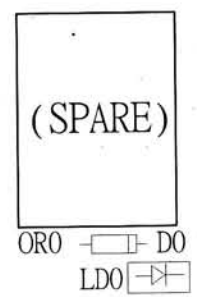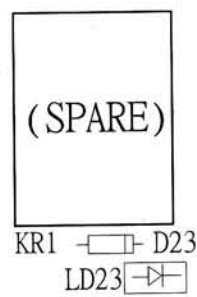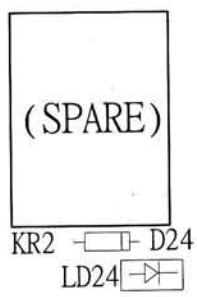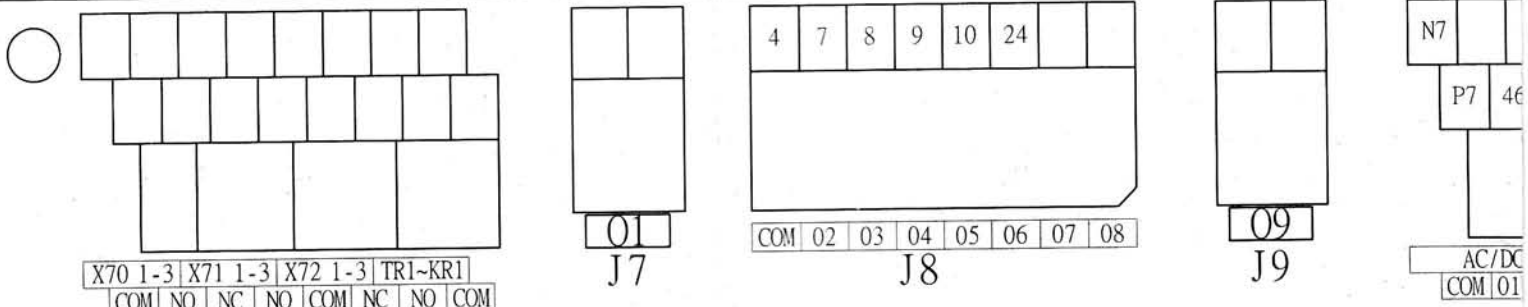


JD-001_A -FOR- EMC-2240A-6000i

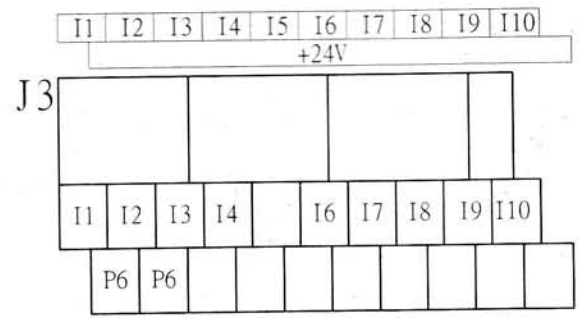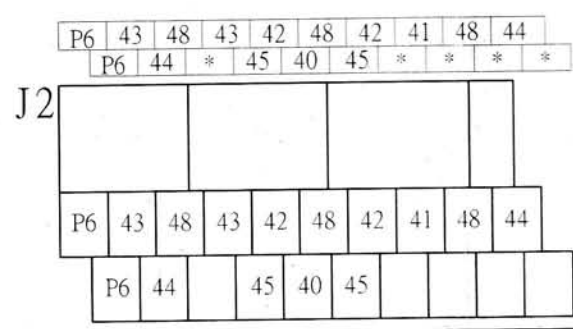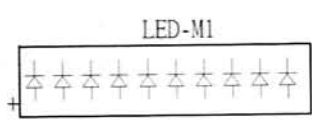


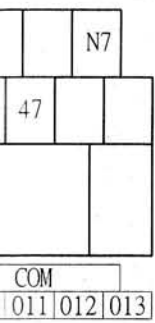






J10

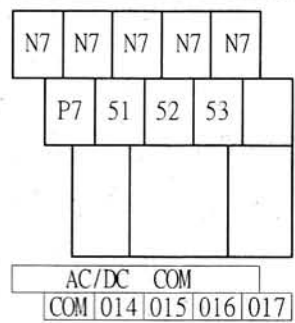








J11

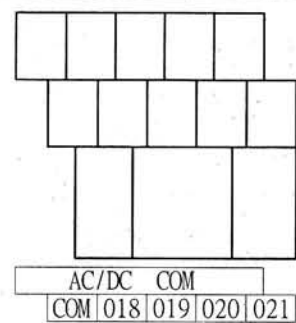











J12

 
 
 
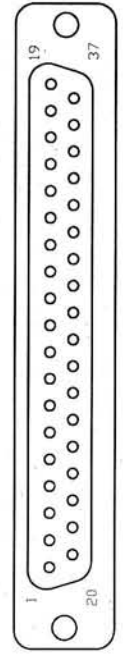
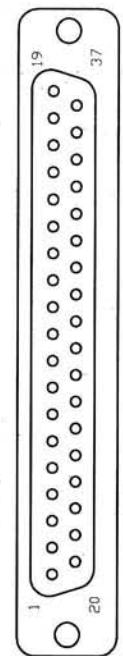


F3 (5A)

       


F4 (5A)

      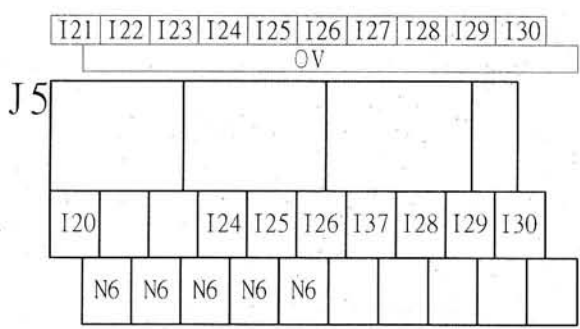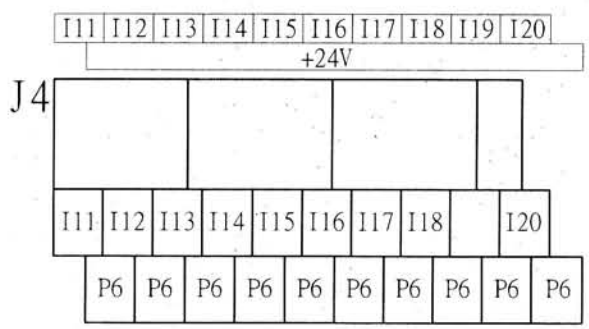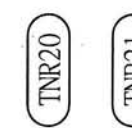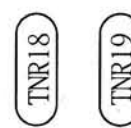

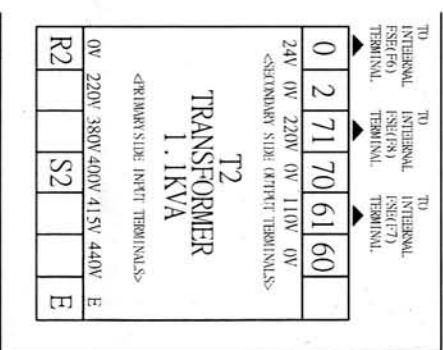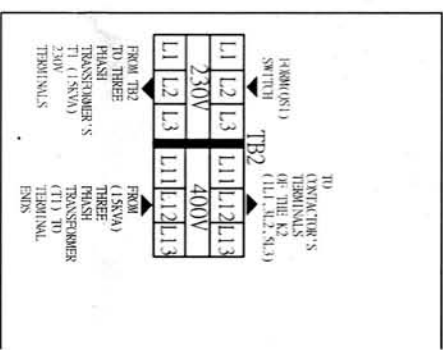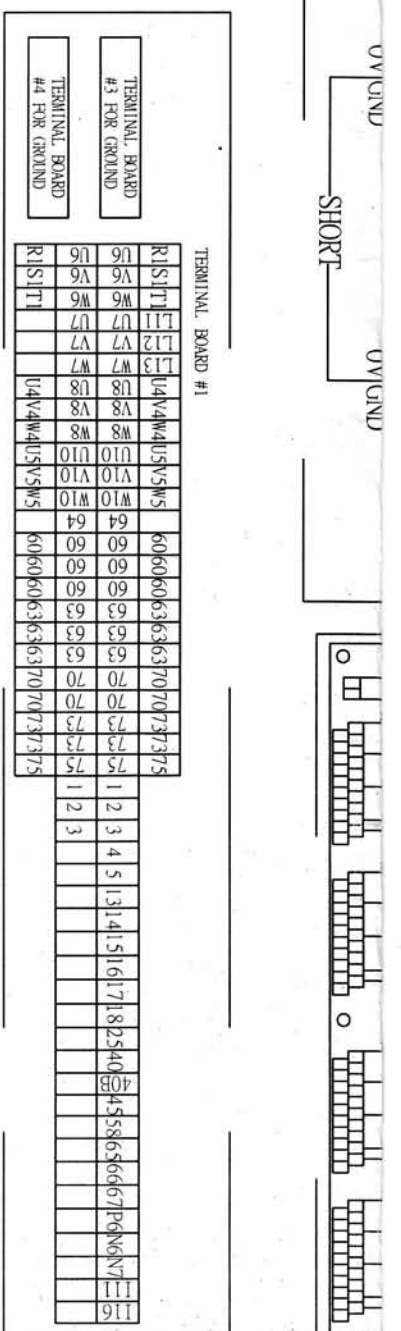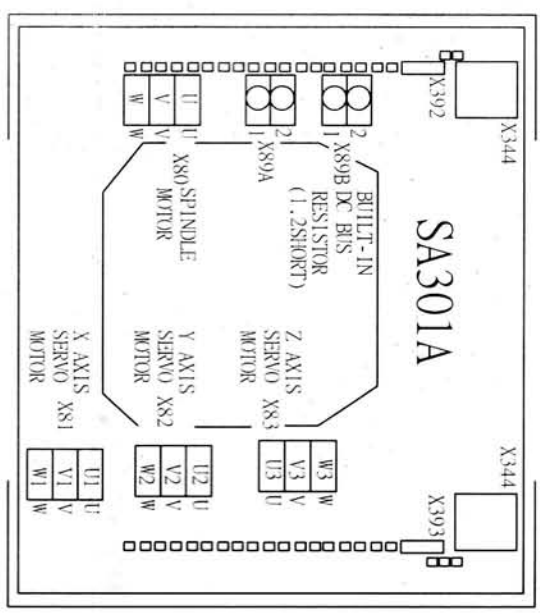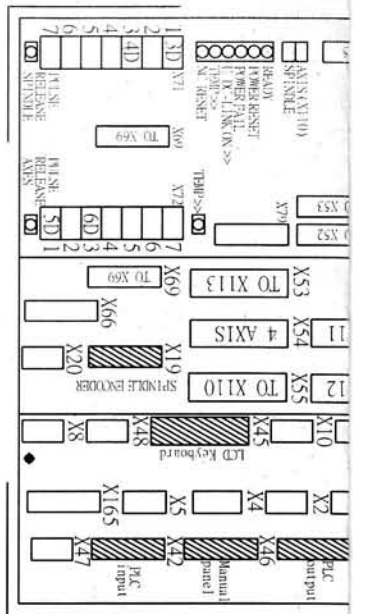

ACFR-EMC-2240A-600

63 FPN
AC 110V

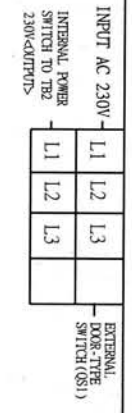

63 FPN
AC 110V

