

ACER GROUP

TITLE : POWER-1

MACHINE MODEL

EMC-3060

CONTROL :



ANILAM 6000i


Date:

12. OCT. 2007

PAGE

 
1

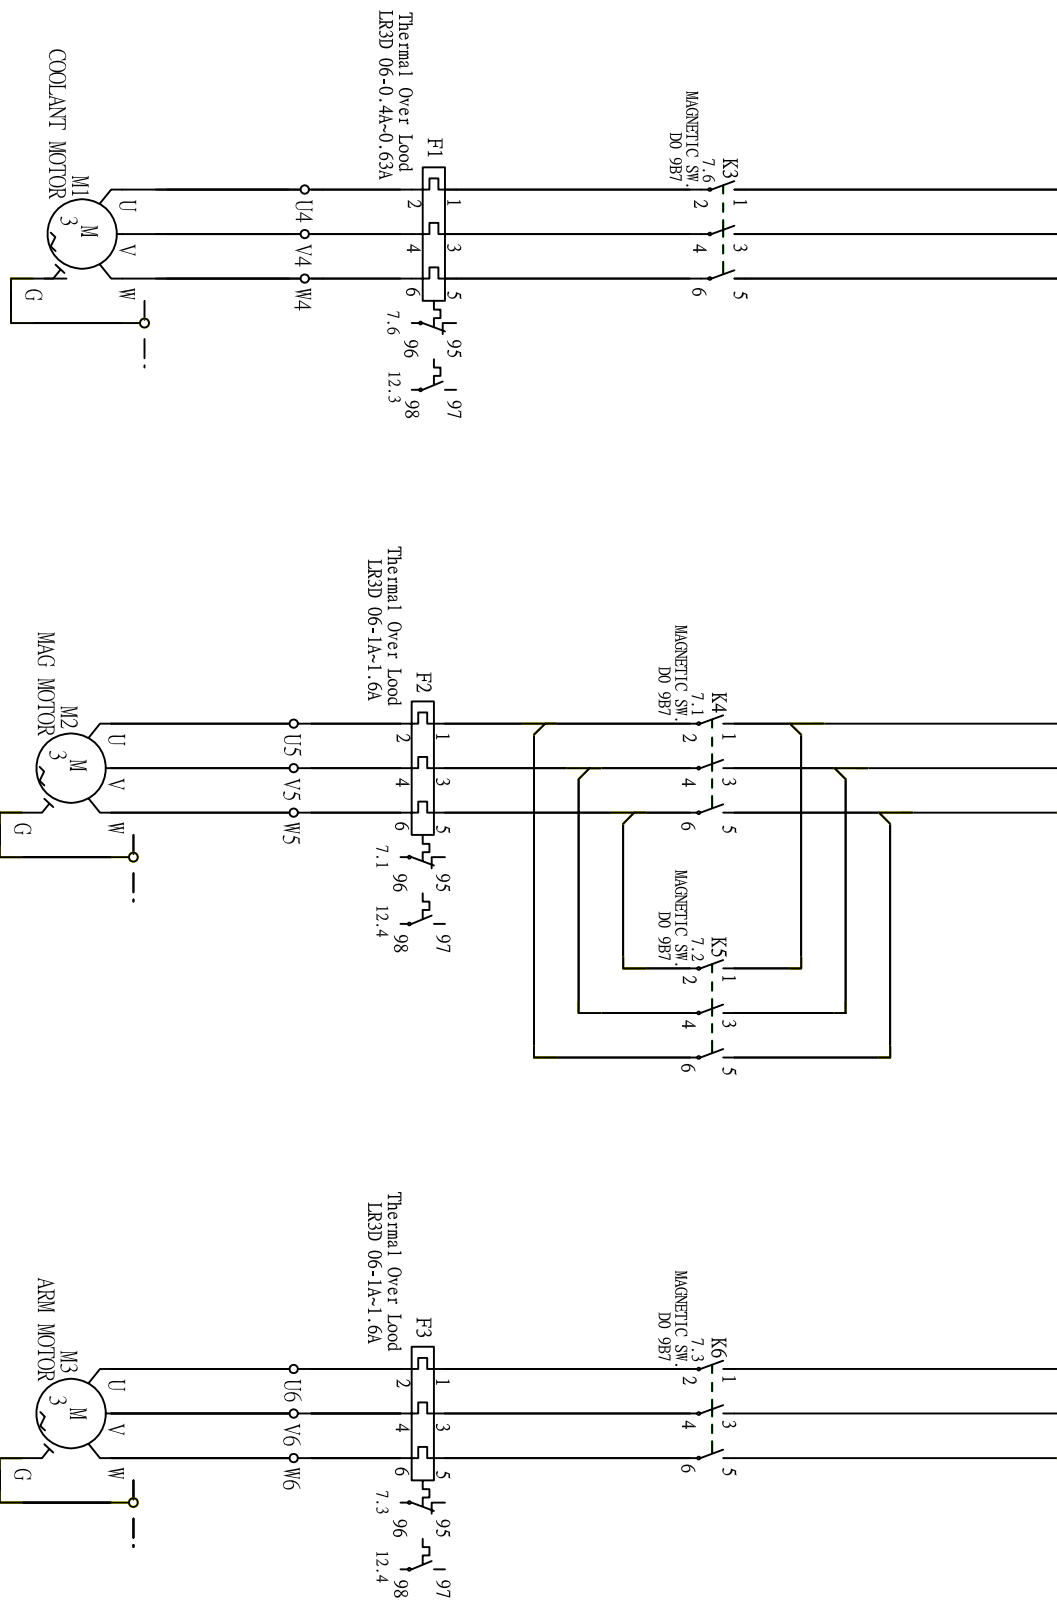

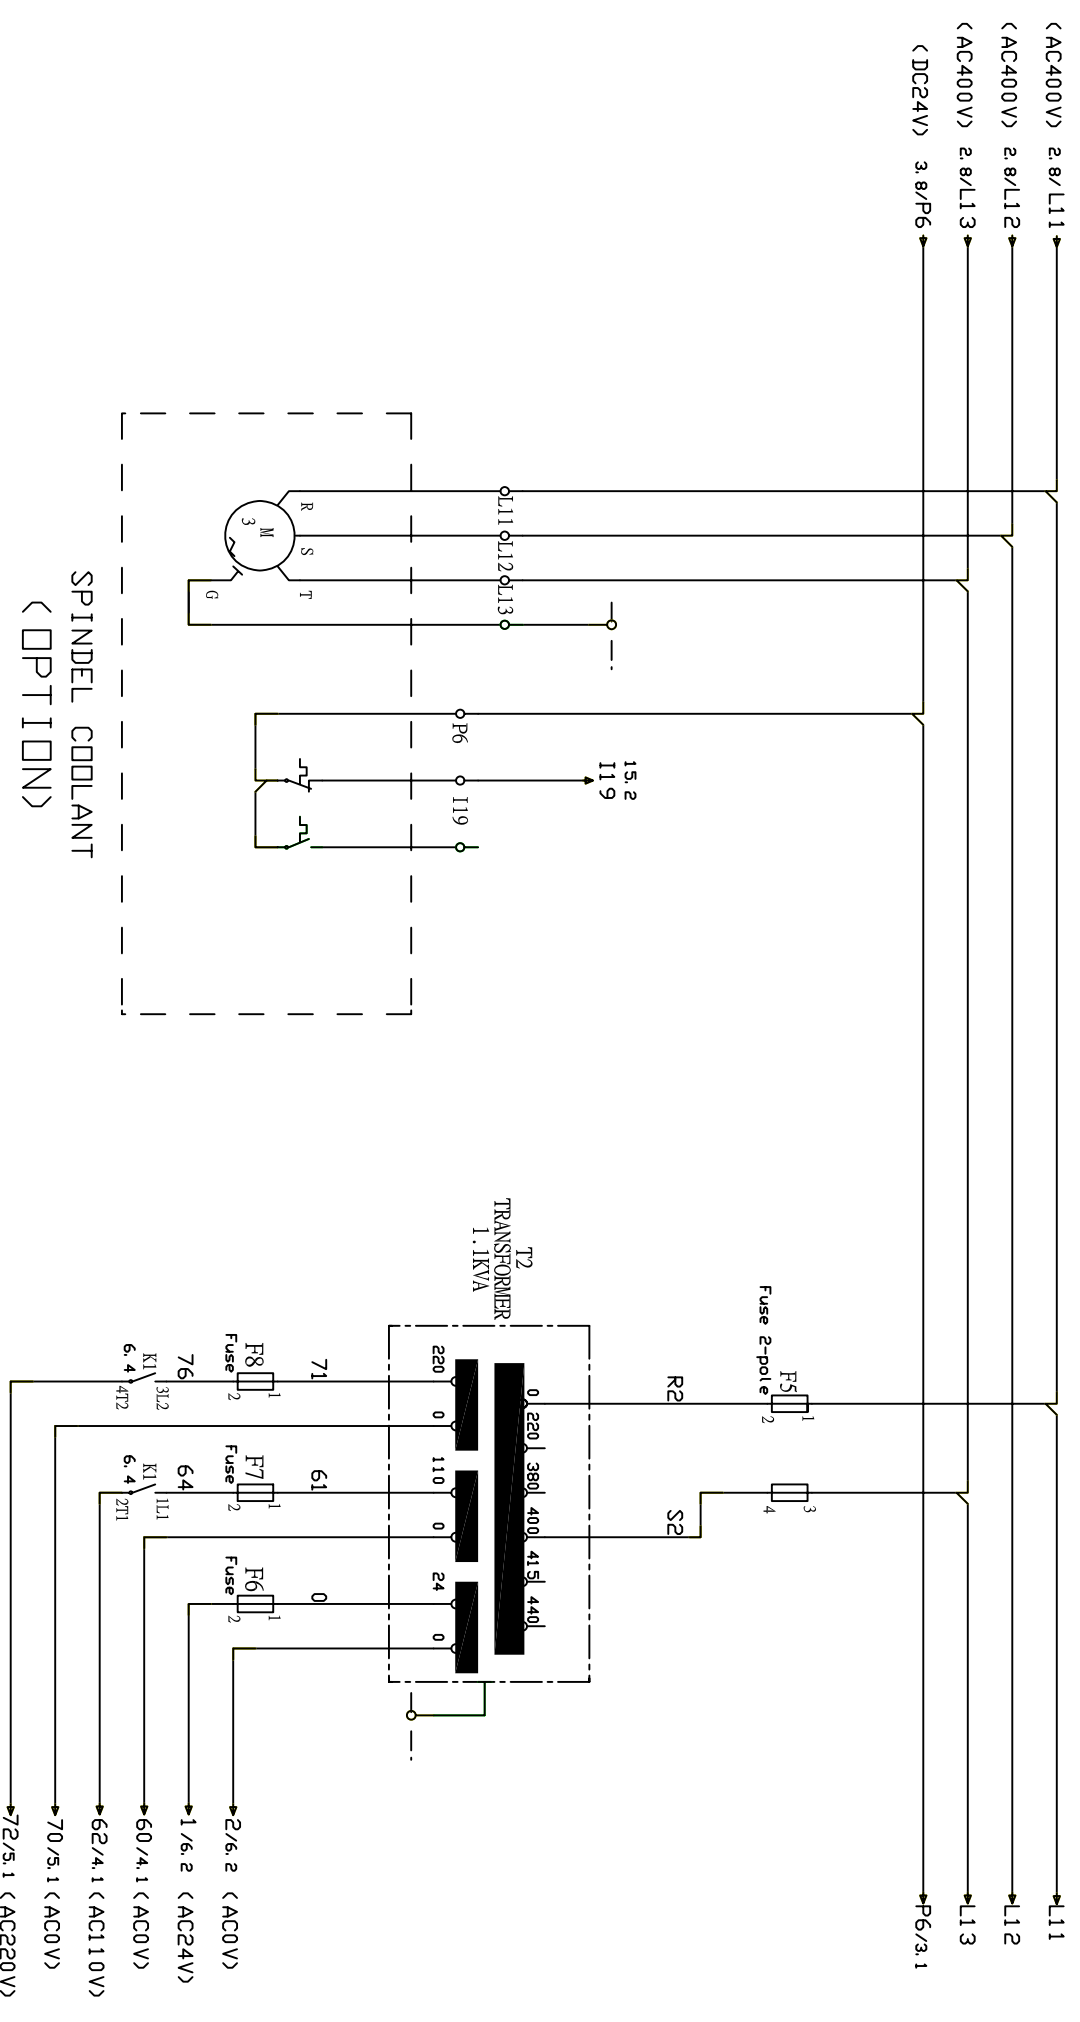

SPINDEL COOLANT
(OPTION)

ACER GROUP		TITLE : POWER-3		MACHINE MODEL		CONTROL :		Date:		PAGE	
				EMC-3060		ANILAM 6000i		10. sep. 2007		3	

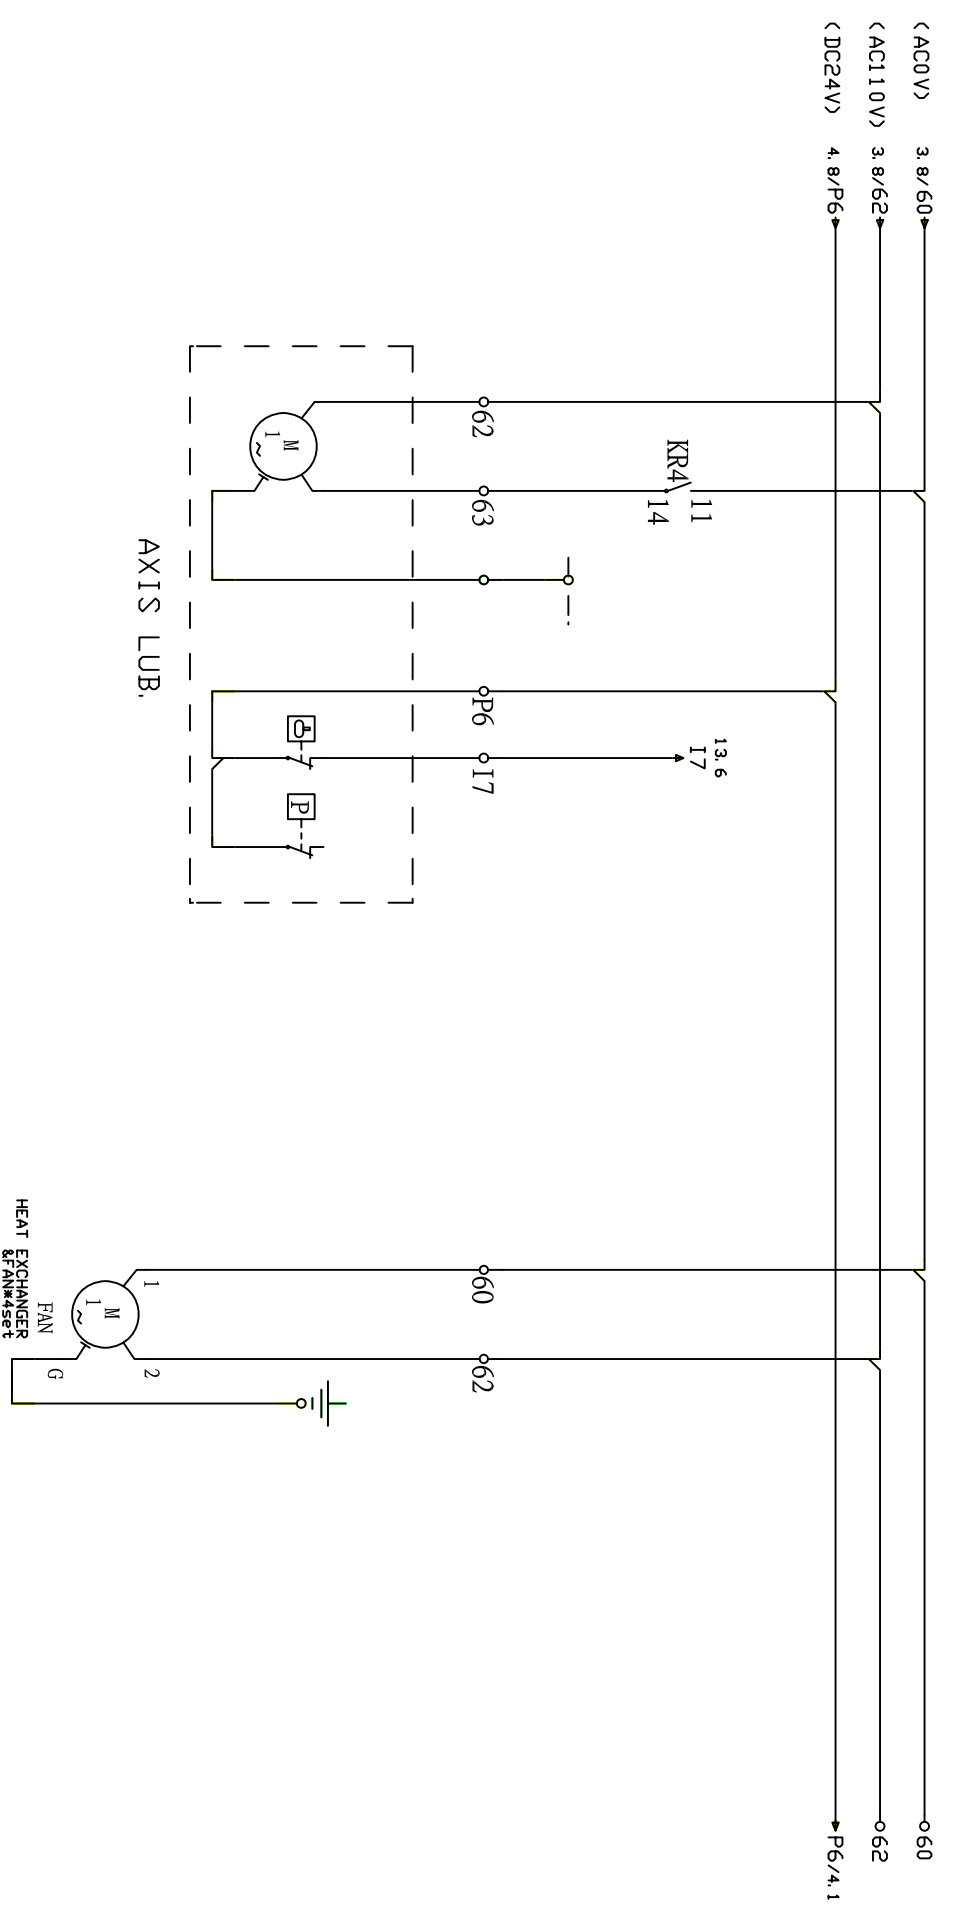

3

ACER GROUP TITLE : POWER-110V-1


MACHINE MODEL EMC-3060

CONTROL : ANILAM 6000i

Date: 10. sep. 2007

PAGE 4

5

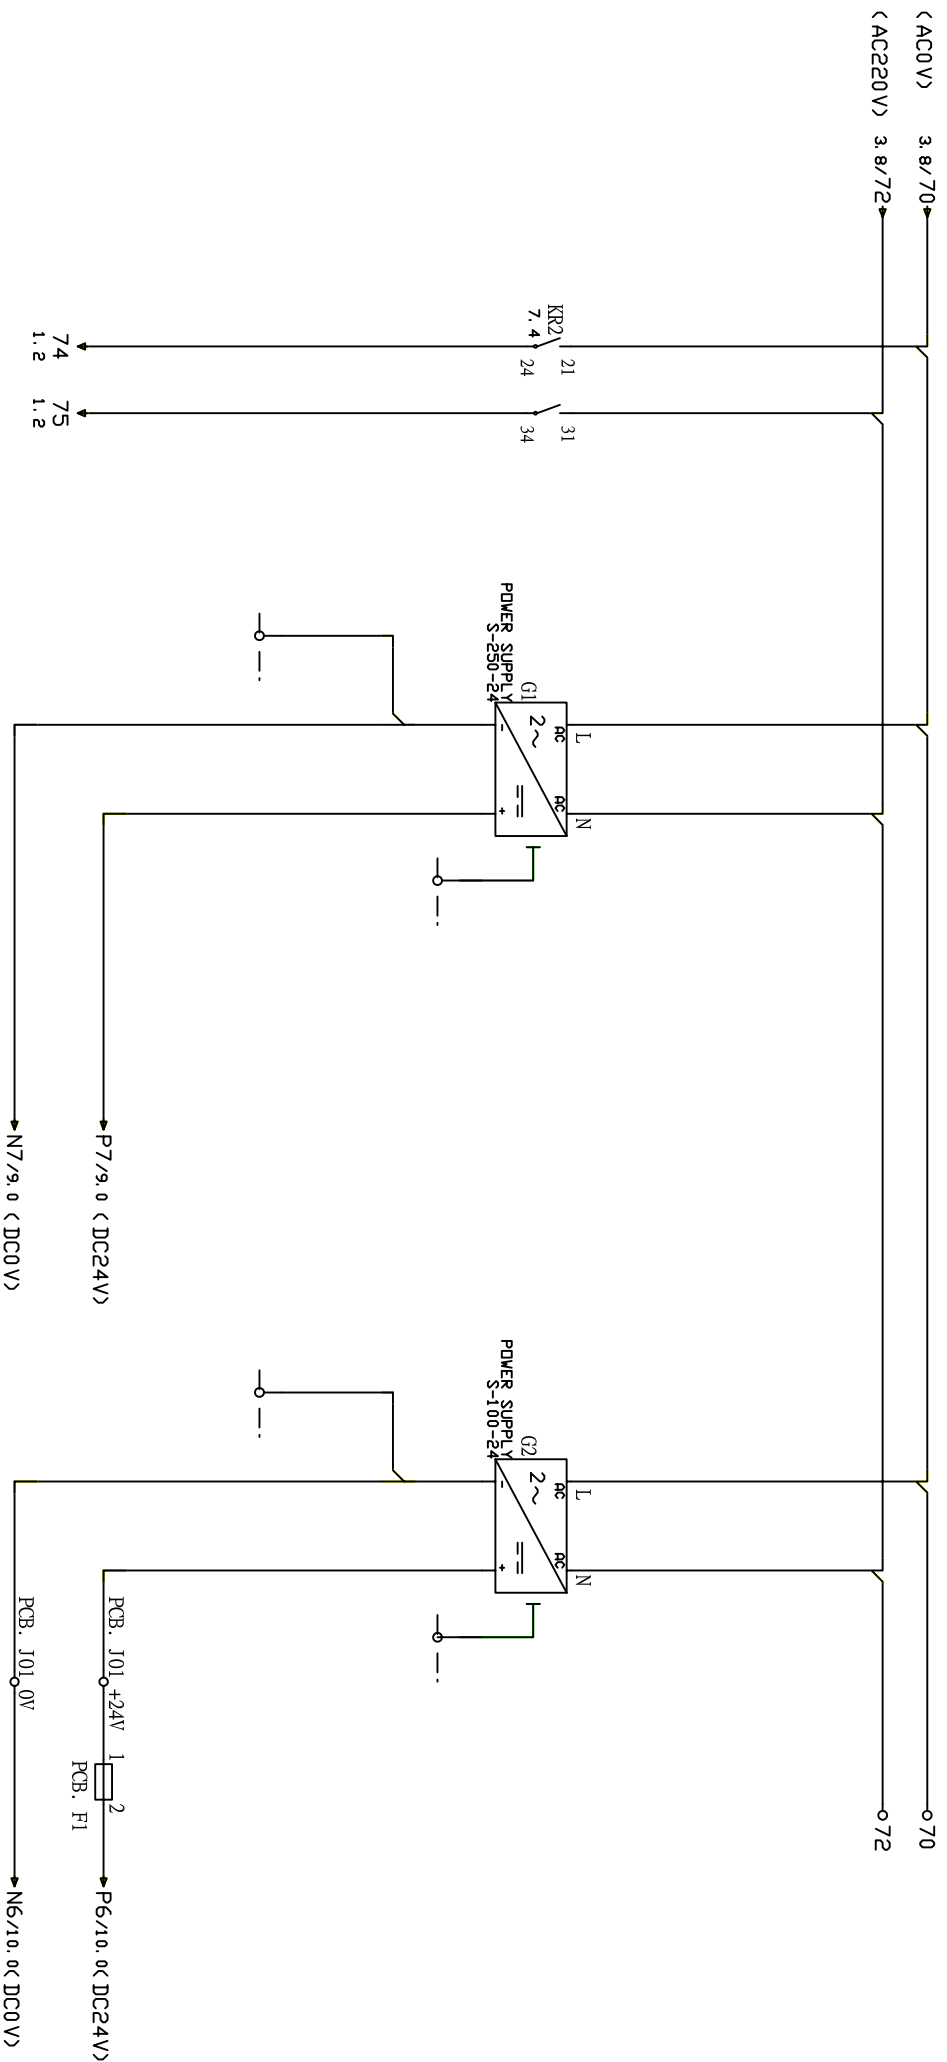

4

ACER GROUP

TITLE : POWER 220V-1

MACHINE MODEL
EMC-3060


CONTROL :
ANILAM 6000i

Date:
10. sep. 2007

PAGE


5


6

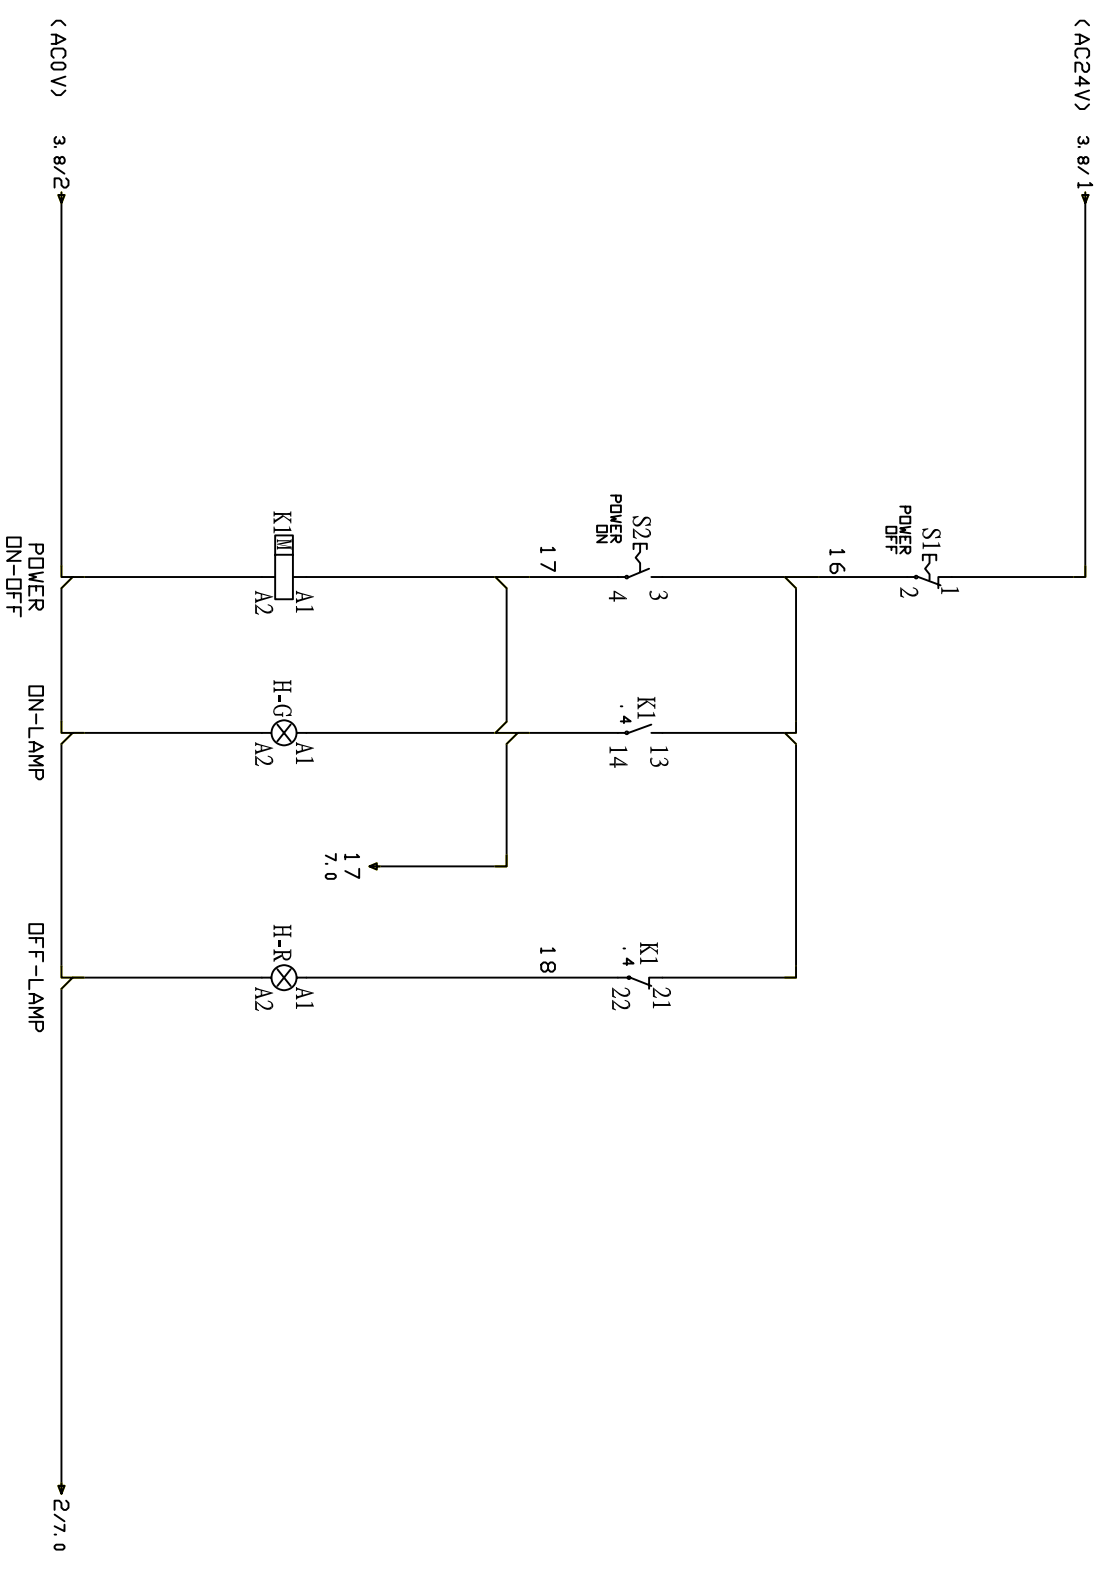

- 1- 2 1.4
- 3- 4 1.4
- 5- 6 1.4
- 13- 14 .5
- 21- 22 .6
- 53- 54 3.7
- 63- 64 3.6

ACER GROUP		TITLE : CNC CONTROL UNIT(AC) -1		MACHINE MODEL		CONTROL :		Date:		PAGE	
				EMC-3060		ANILAM 6000i		10. sep. 2007		6	

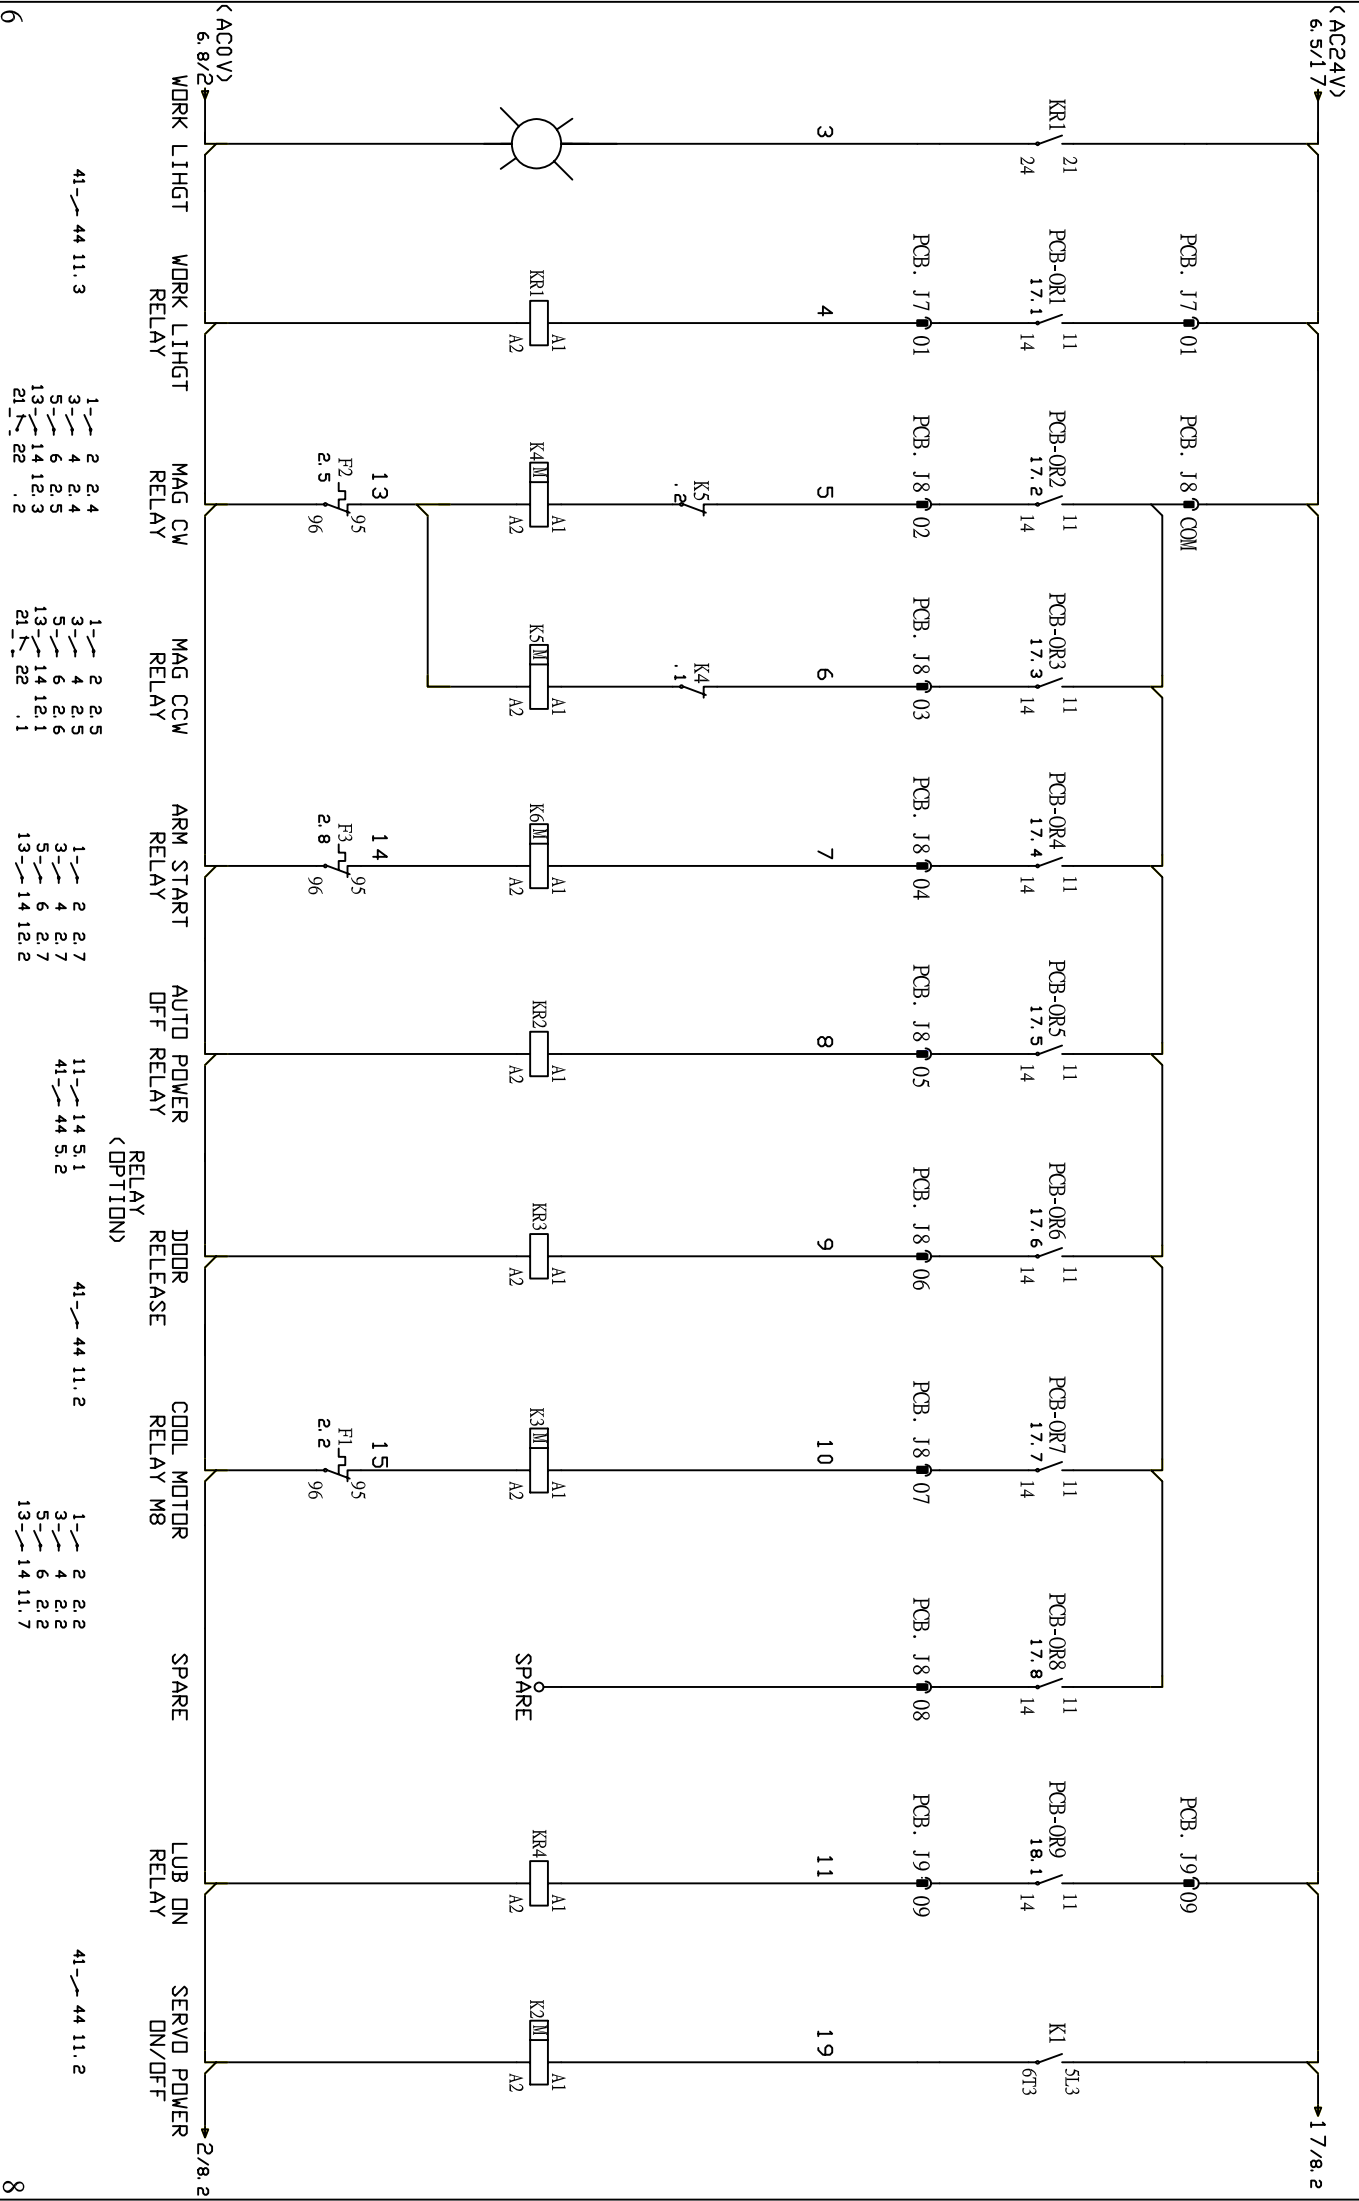

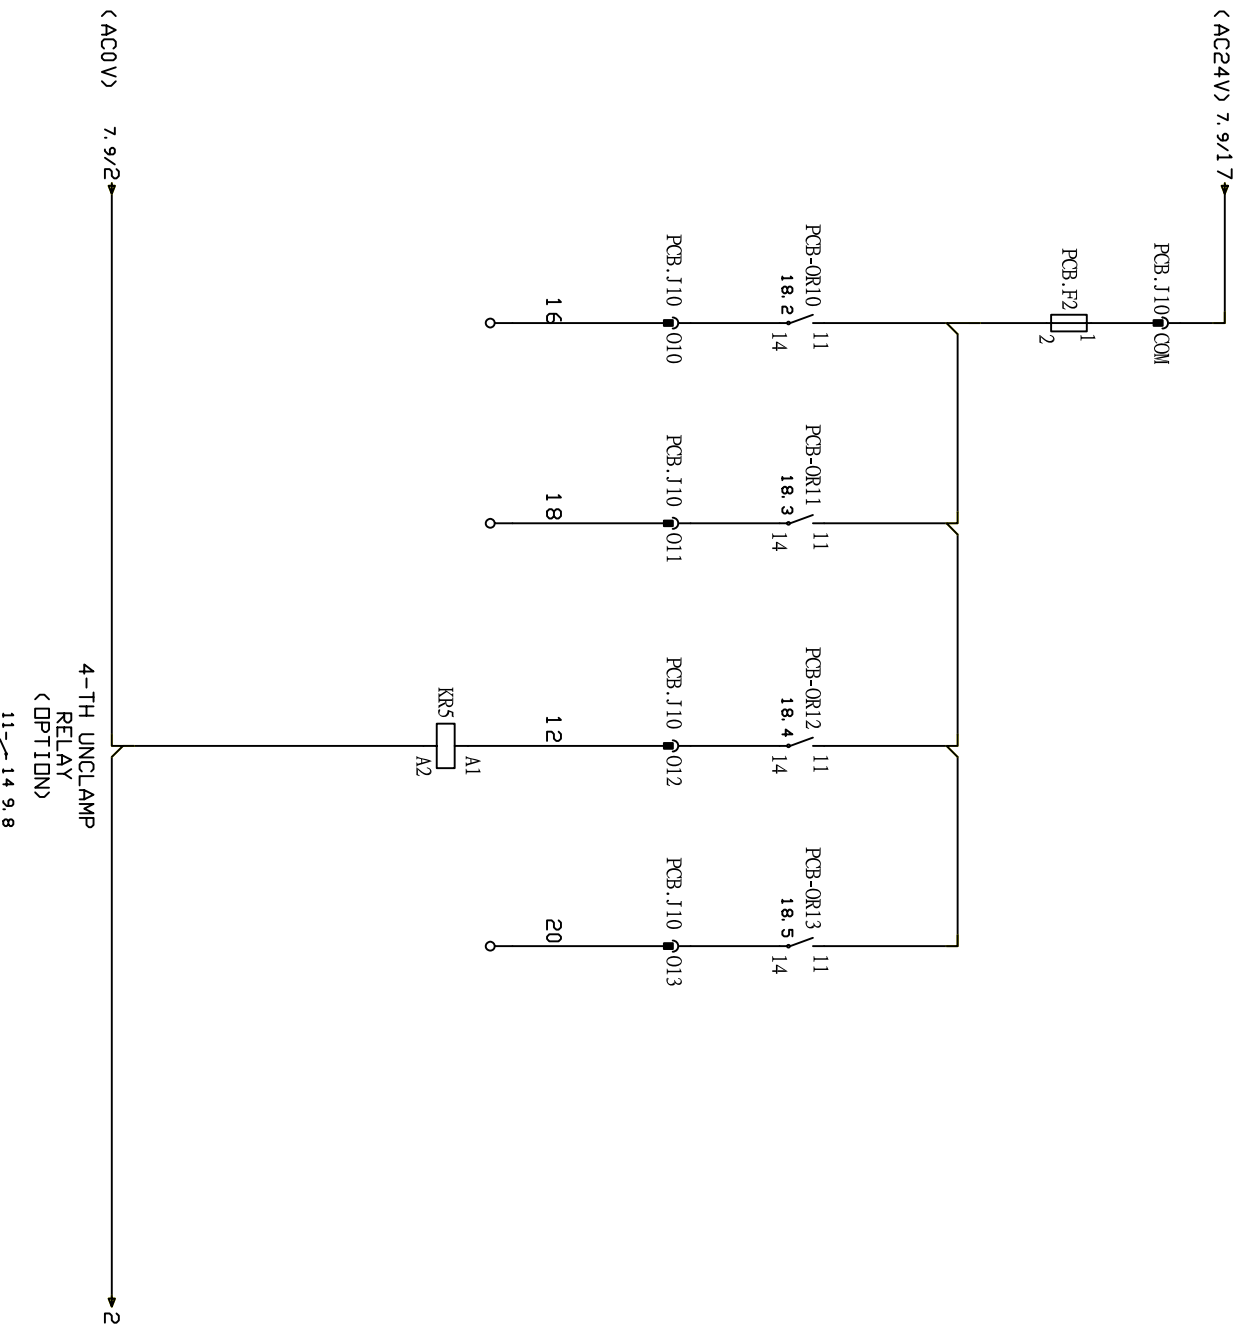

7

ACER GROUP

TITLE : CNC CONTROL UNIT(AC)-3

MACHINE MODEL

EMC-3060

CONTROL :

ANILAM 6000i


Date:

10. sep. 2007

PAGE

8

9

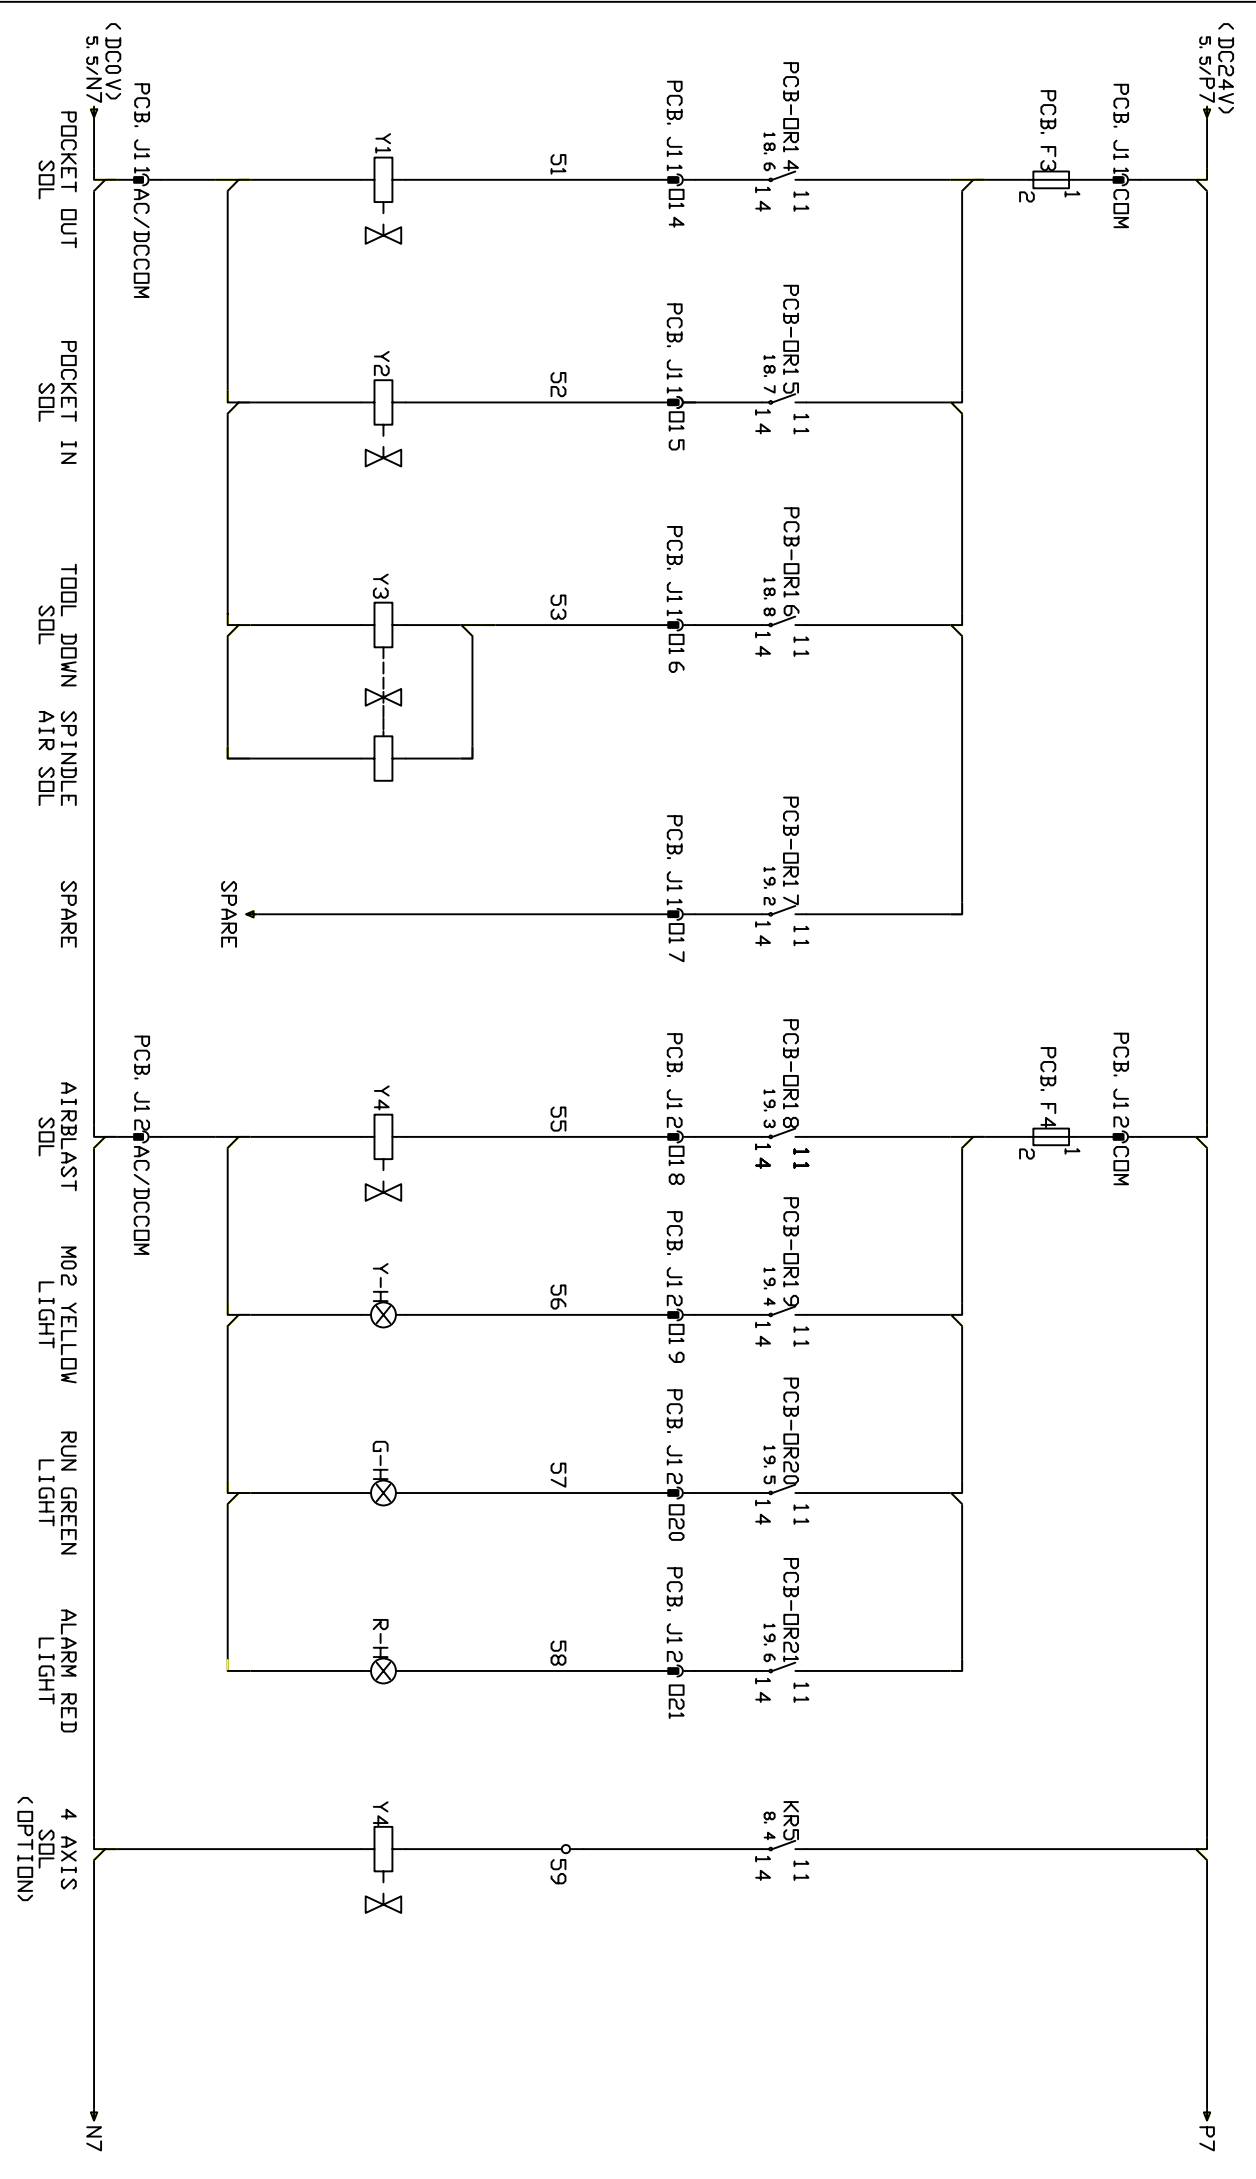

11-14.8

< DC24V > 5. 8/P6 < DC0V > 5. 8/N6 < P6/11.0 > < N6/11.0 >


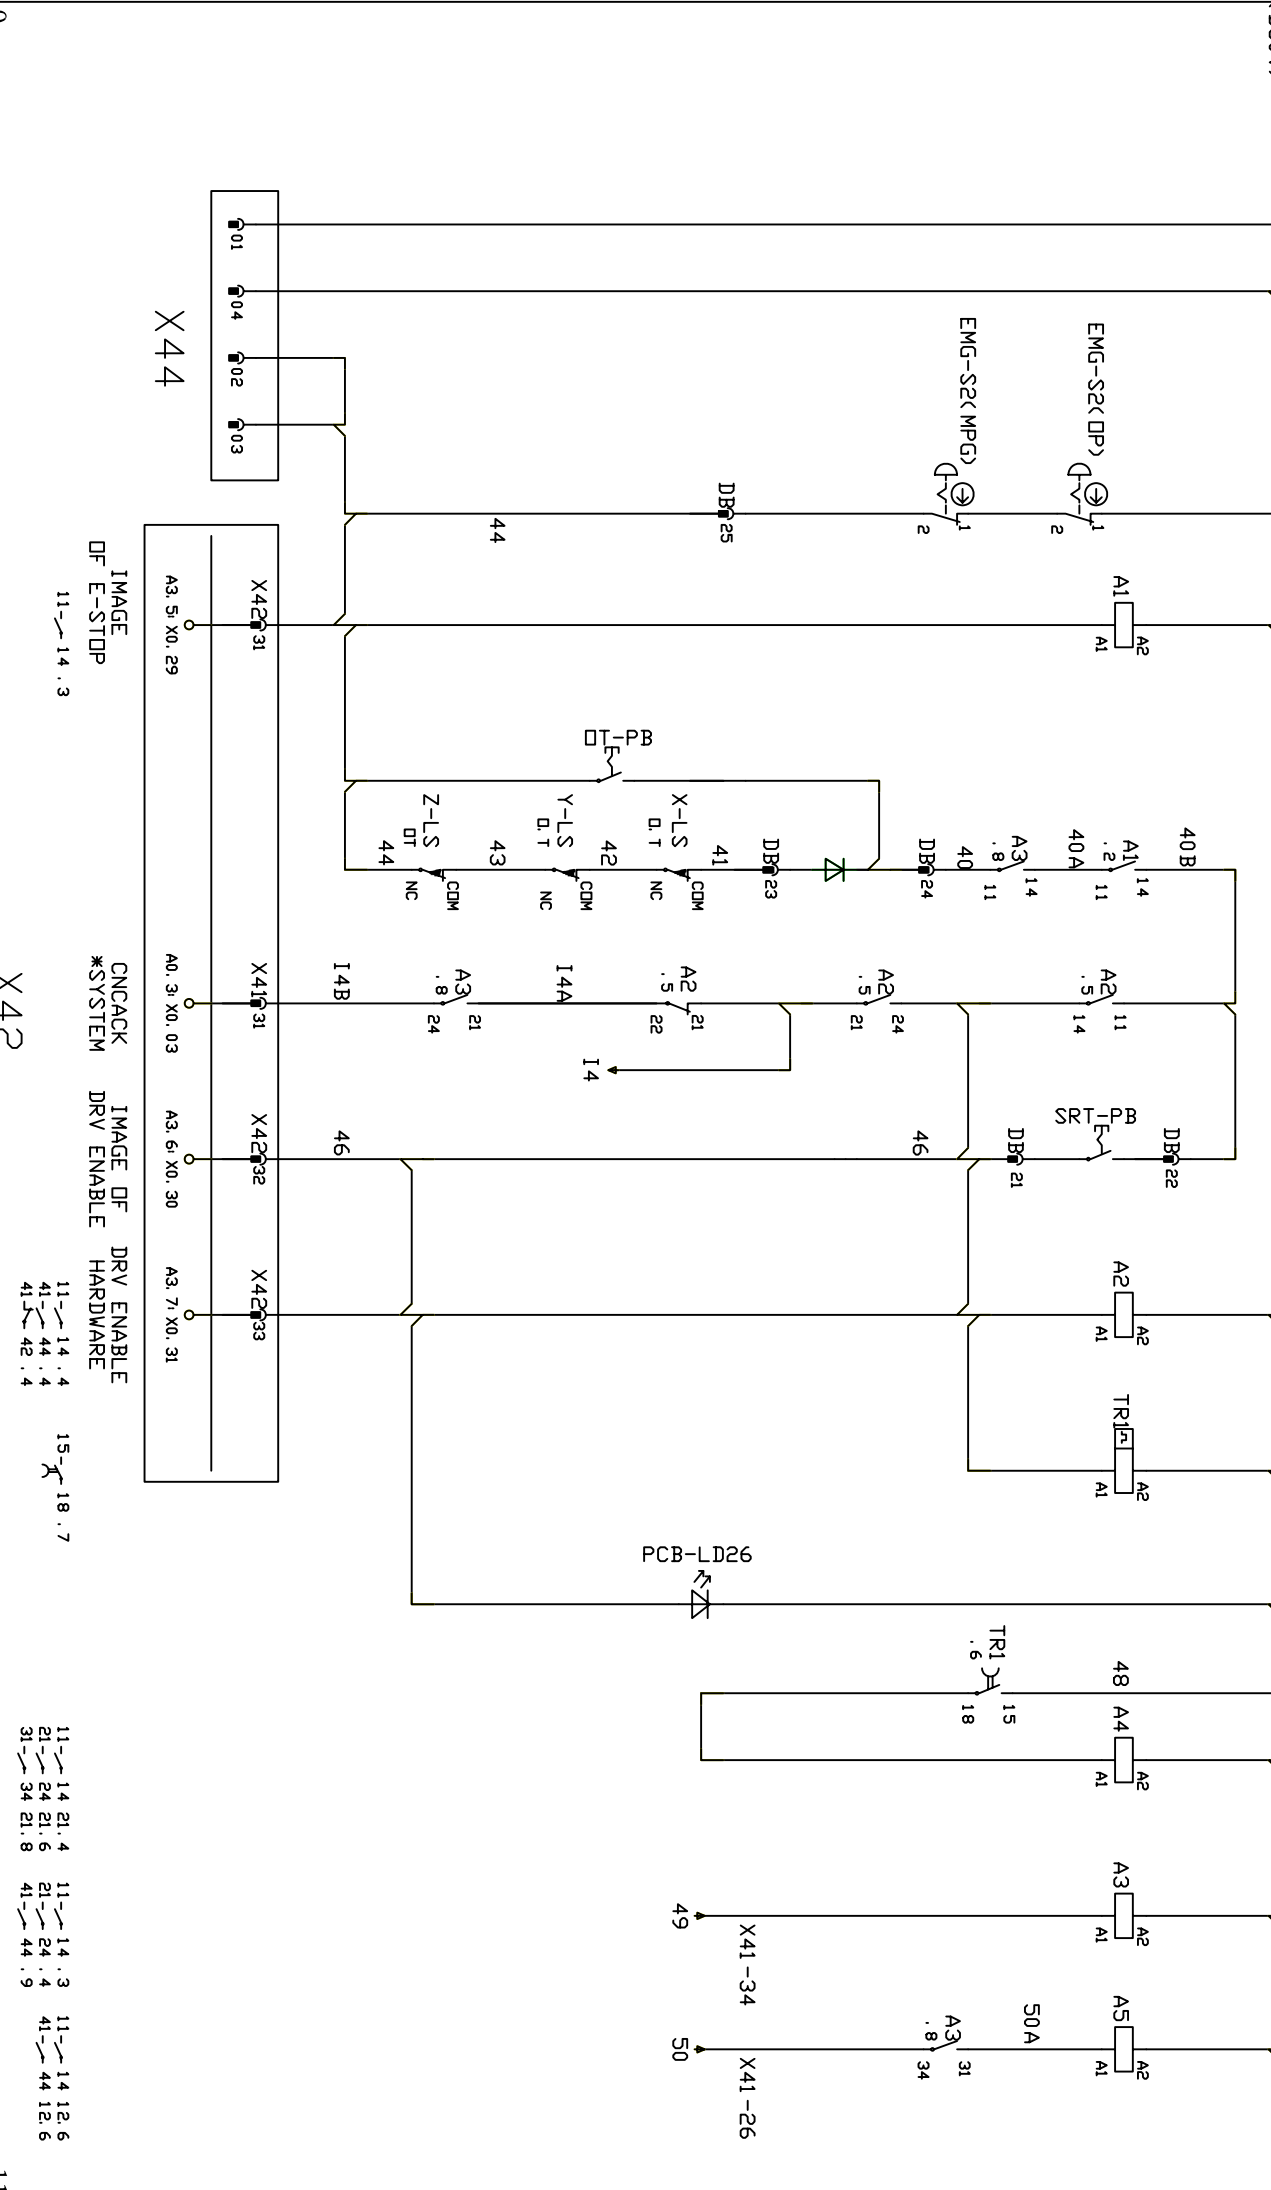



IMAGE OF E-STOP
11-14.3



CNCACK *SYSTEM IMAGE OF DRV ENABLE
11-14.4
41-44.4

DRV ENABLE HARDWARE
15-18.7

 11-14.4 11-14.3
21-24.6 21-24.4
31-34.8 41-44.9

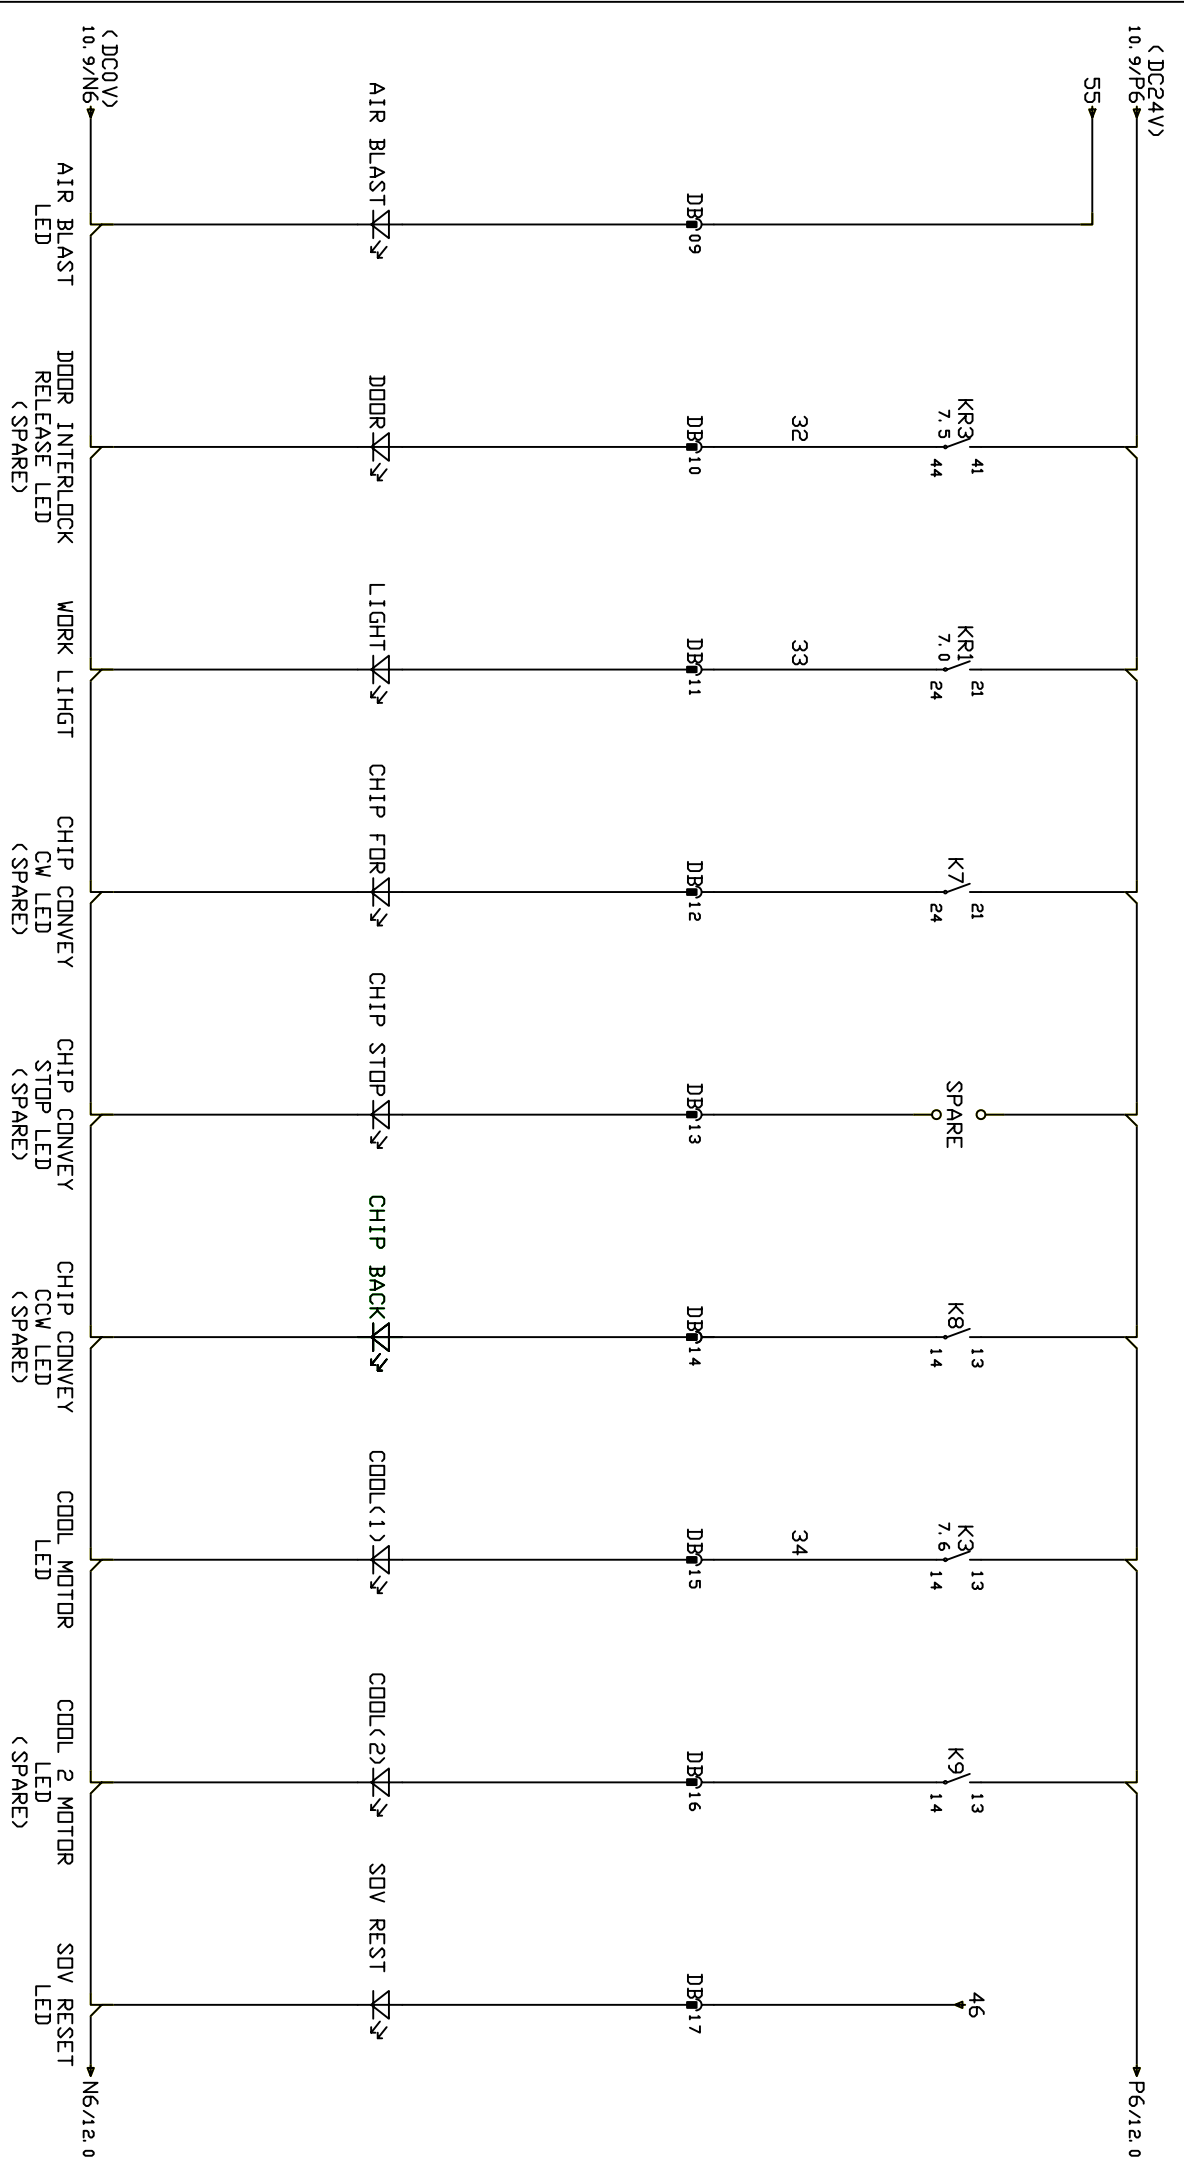

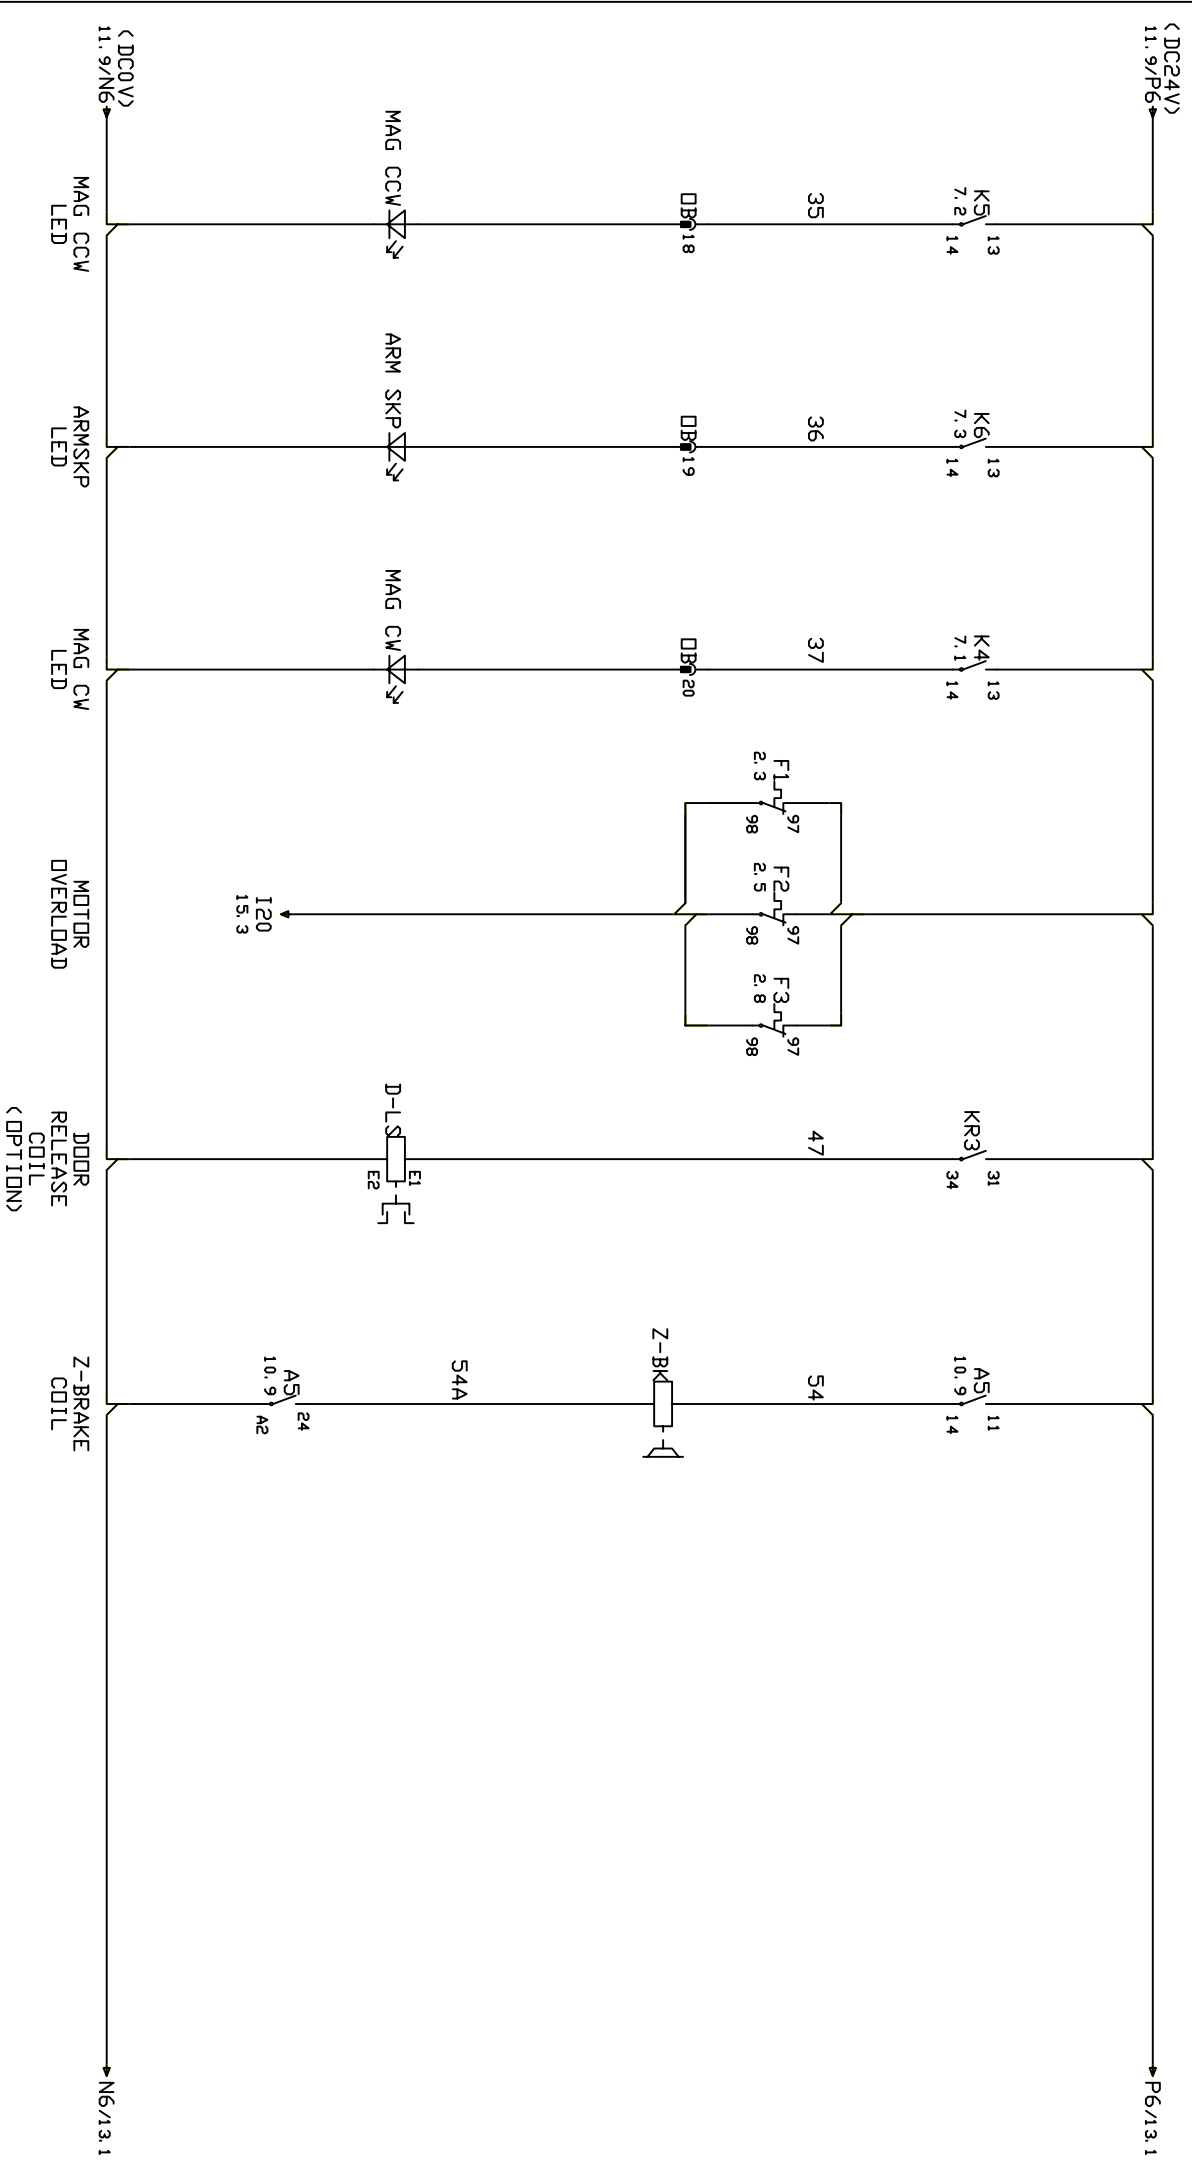

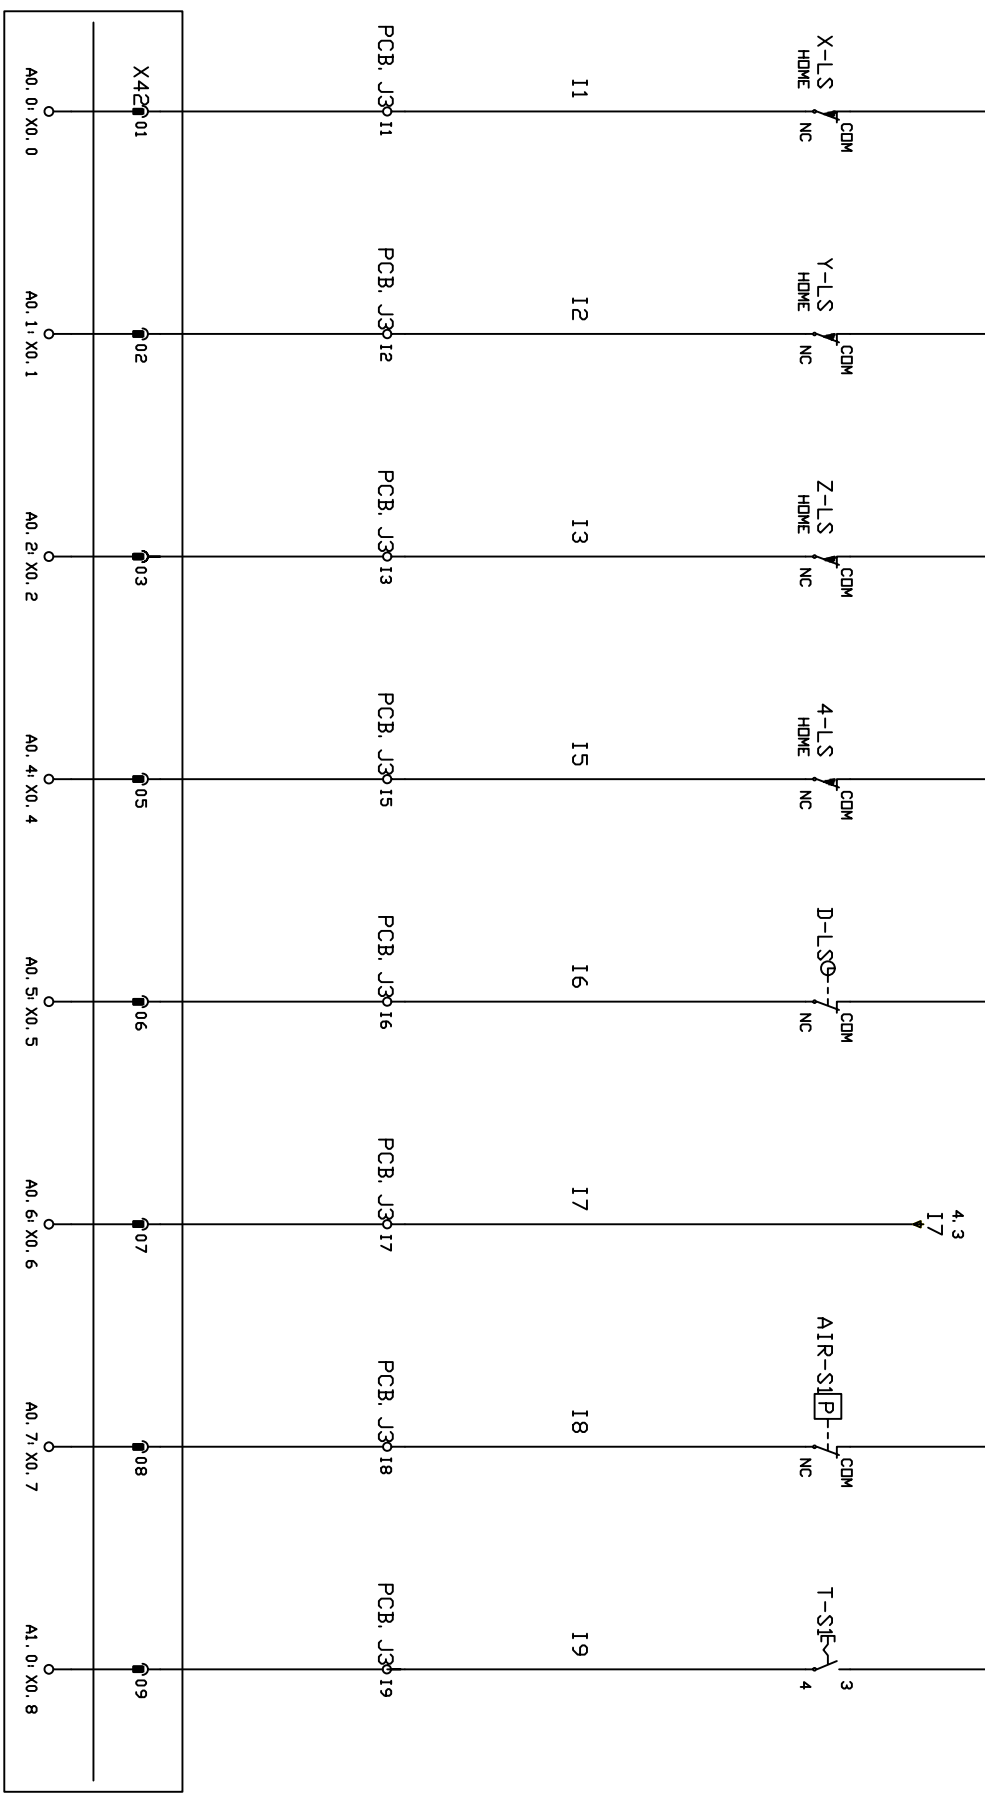


XHOME YHOME ZHOME AX4_HOME DDDR_LOCK SW. LUB_LEVEL SW. AIR_PRESSURE SW. MAN_TOTL_REL_PB

X42

12


14

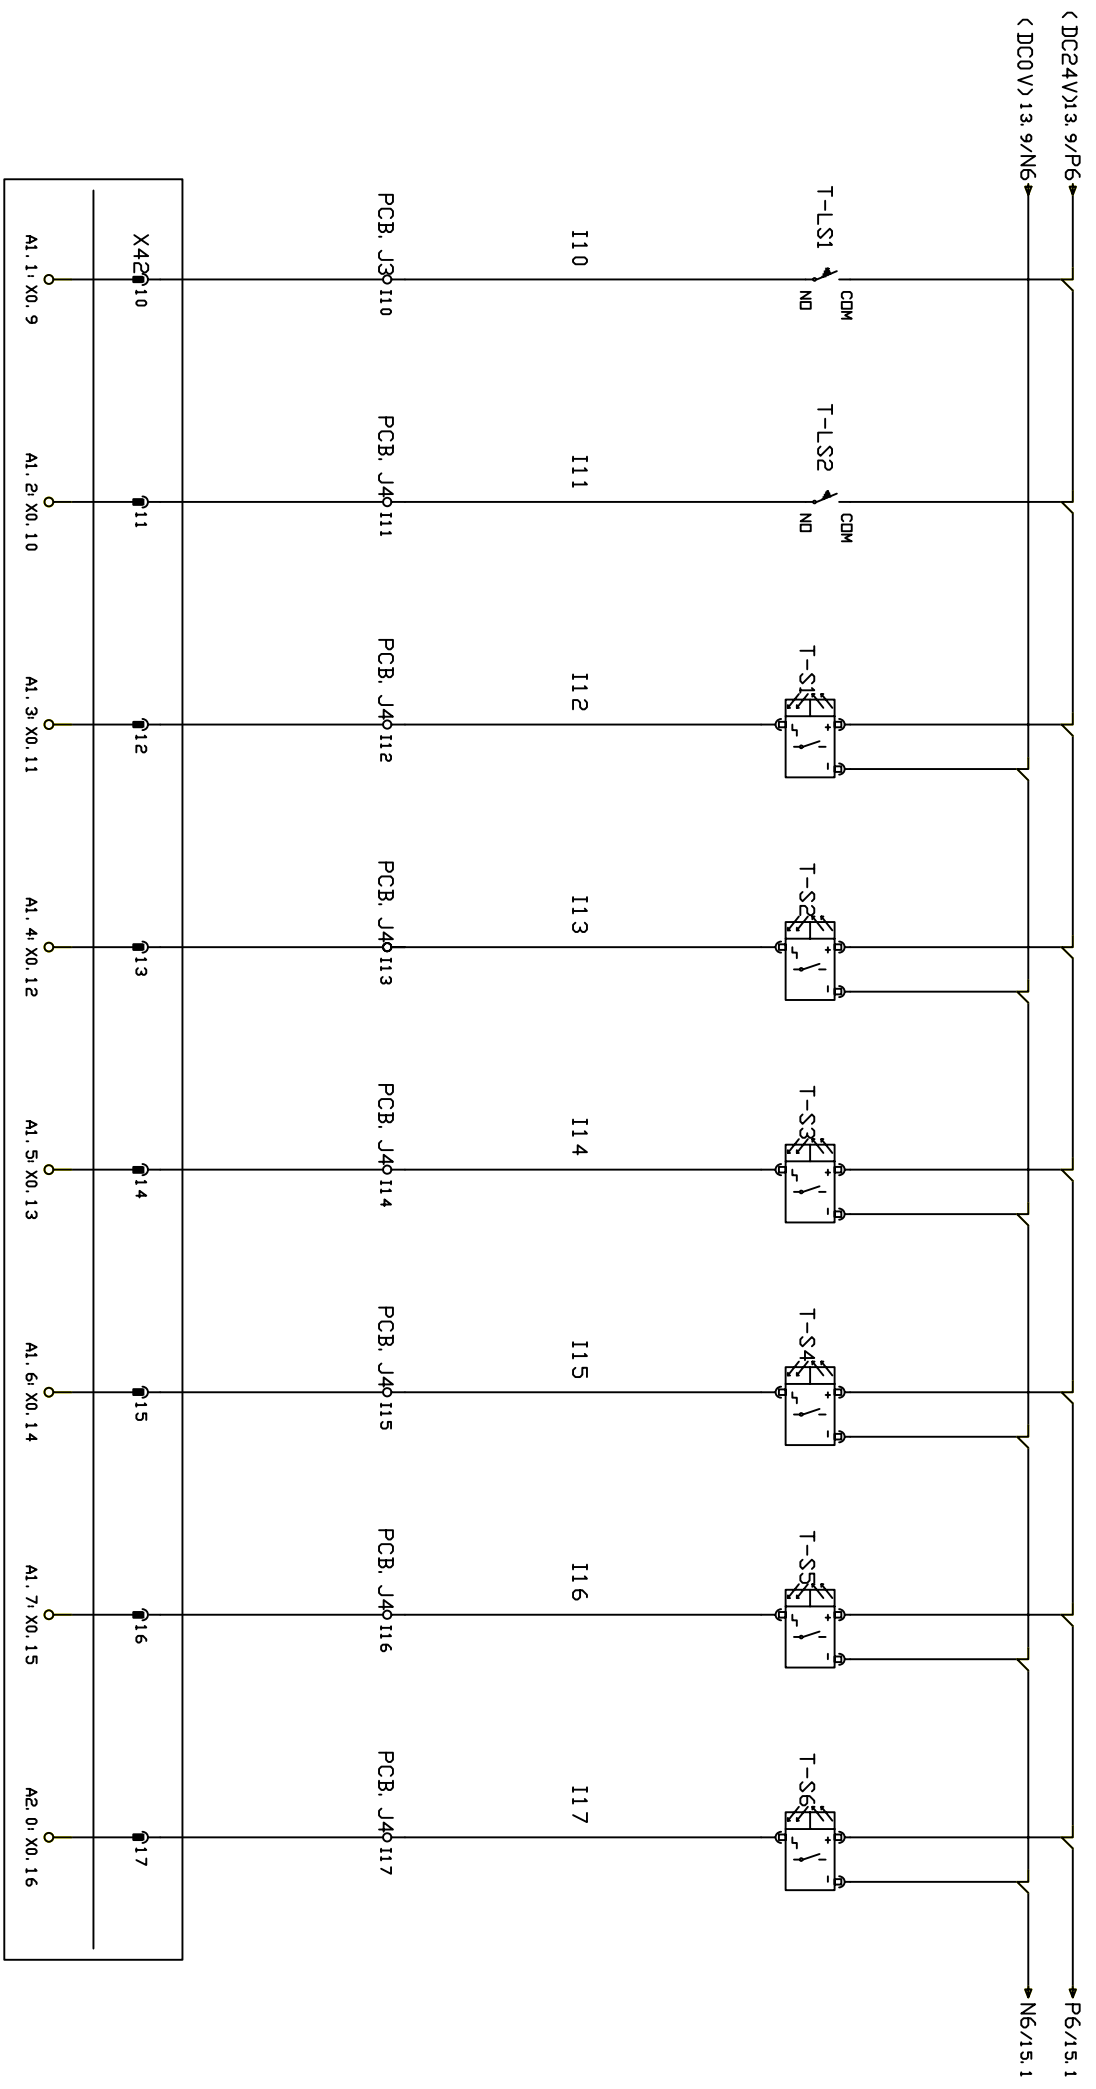

TDDL_UP SWITCH TDDL_DOWN SWITCH TDDL_POT UP SENSOR TDDL_POT_DOWN SENSOR ARM_STOP SENSOR ARM_65 SENSOR ARM_HOME SNESSOR MAG_COUNTING SENSOR



X42

< DC24V > 12.9/P6
 < DC0V > 12.9/N6
 P6/16.1
 N6/16.1

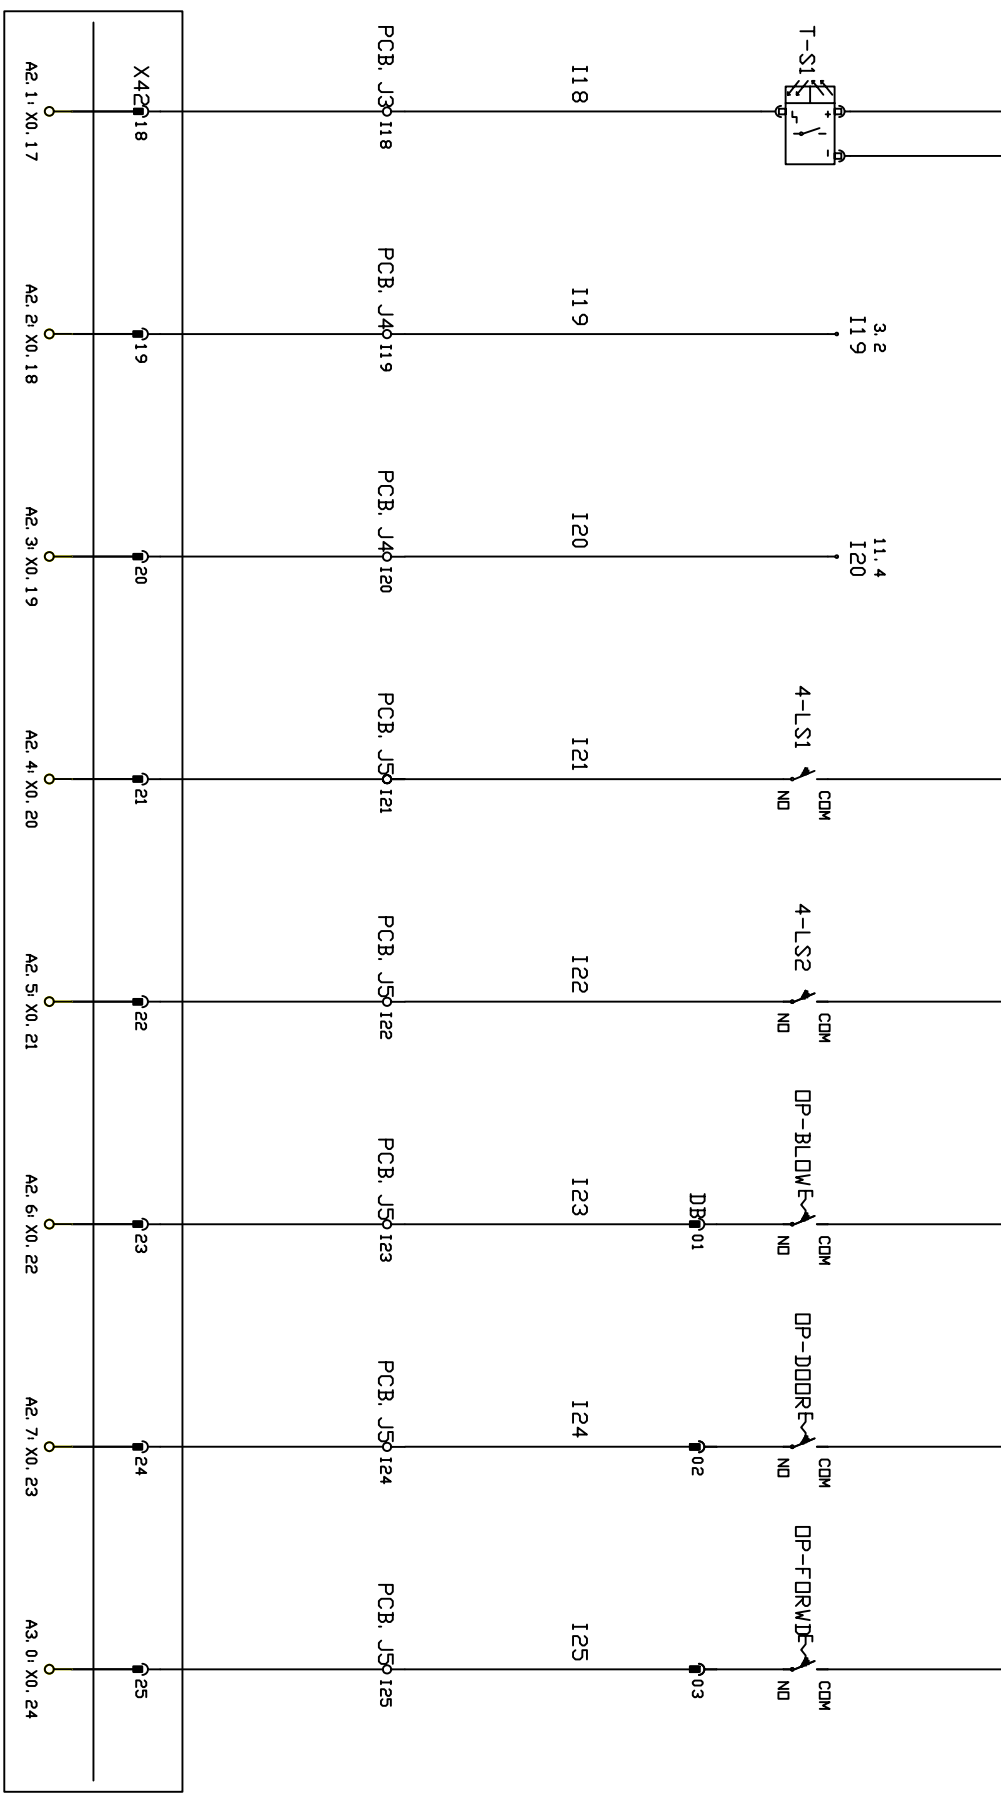

MAG HOME SPINDLE COOLANT MOTOR 4TH UCLP 4TH CLP AIR BLAST DOOR GUARD CHIP CONV
 SENSOR UNIT ALARM OVERLOAD LIM SW LIM SW < OPTION > RELEASE FWD PB
 < OPTION >

 X42

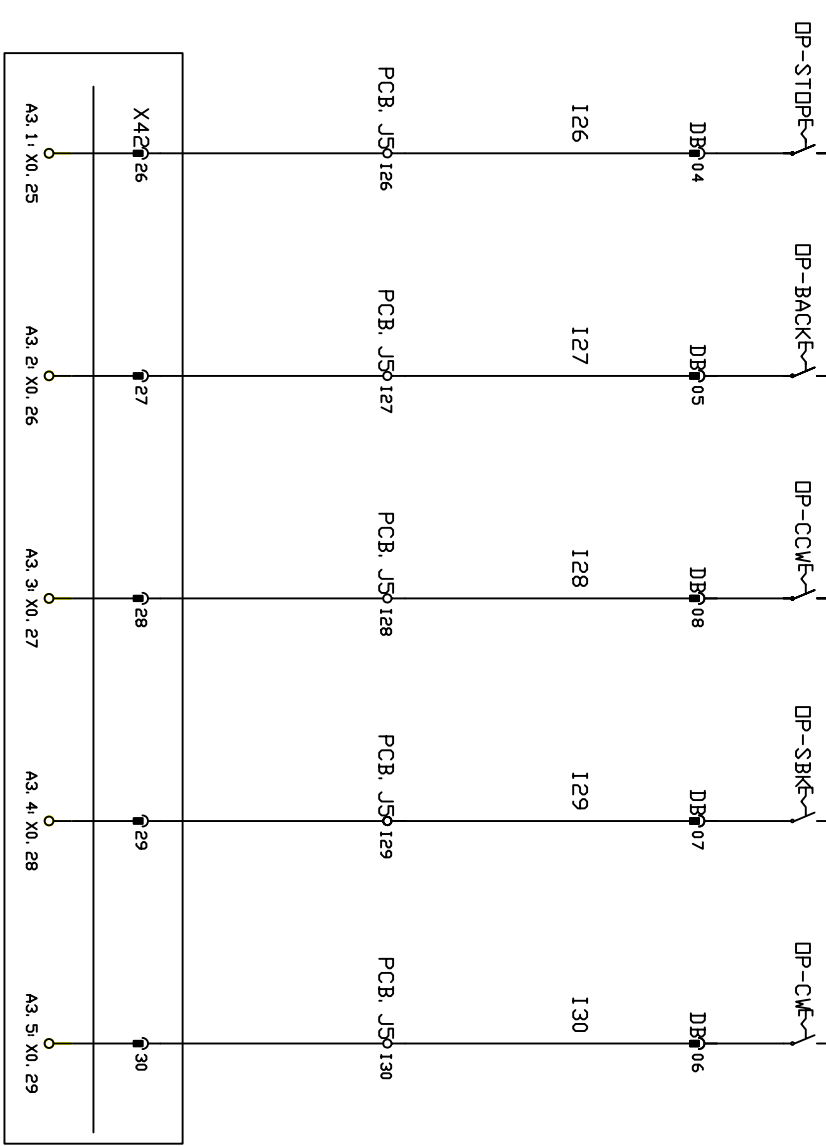



CHIP CONN OFF PB
 CHIP CONN REV PB
 MAG CCW PB
 SPARE
 MAG CW PB

15


X42
10.2

17

X41
18.0

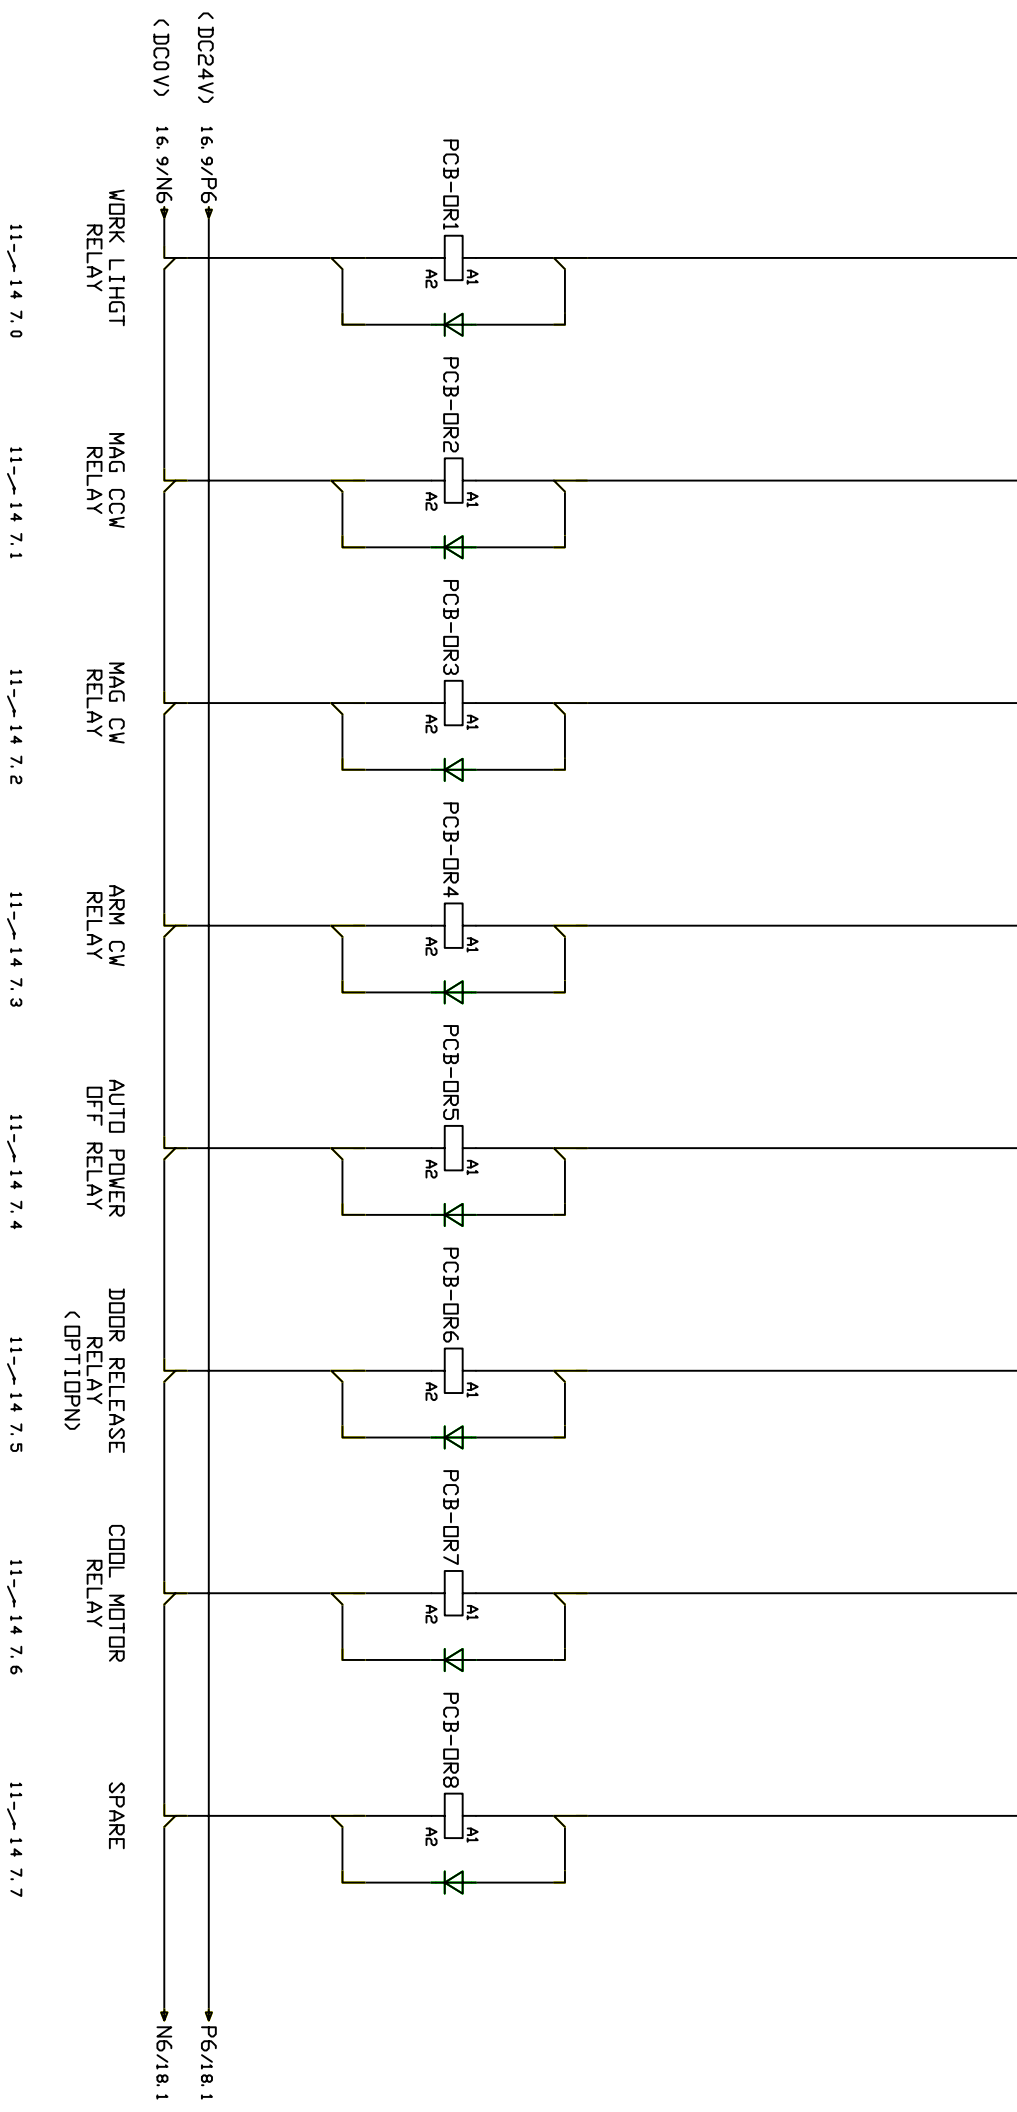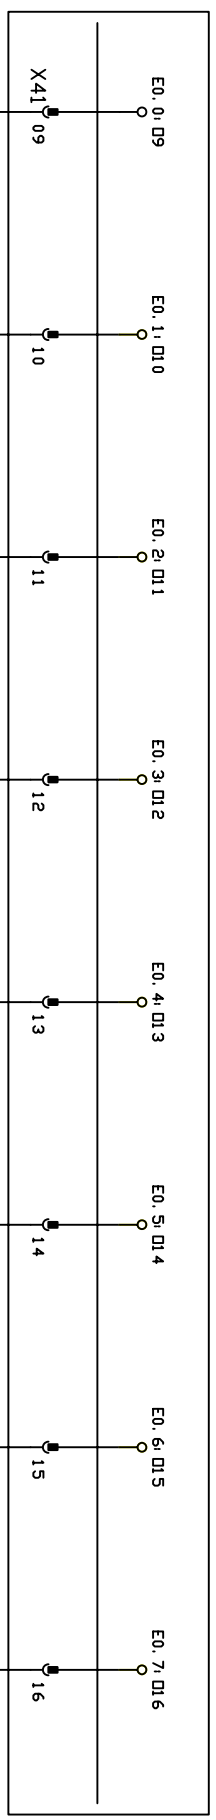


X41
17.0

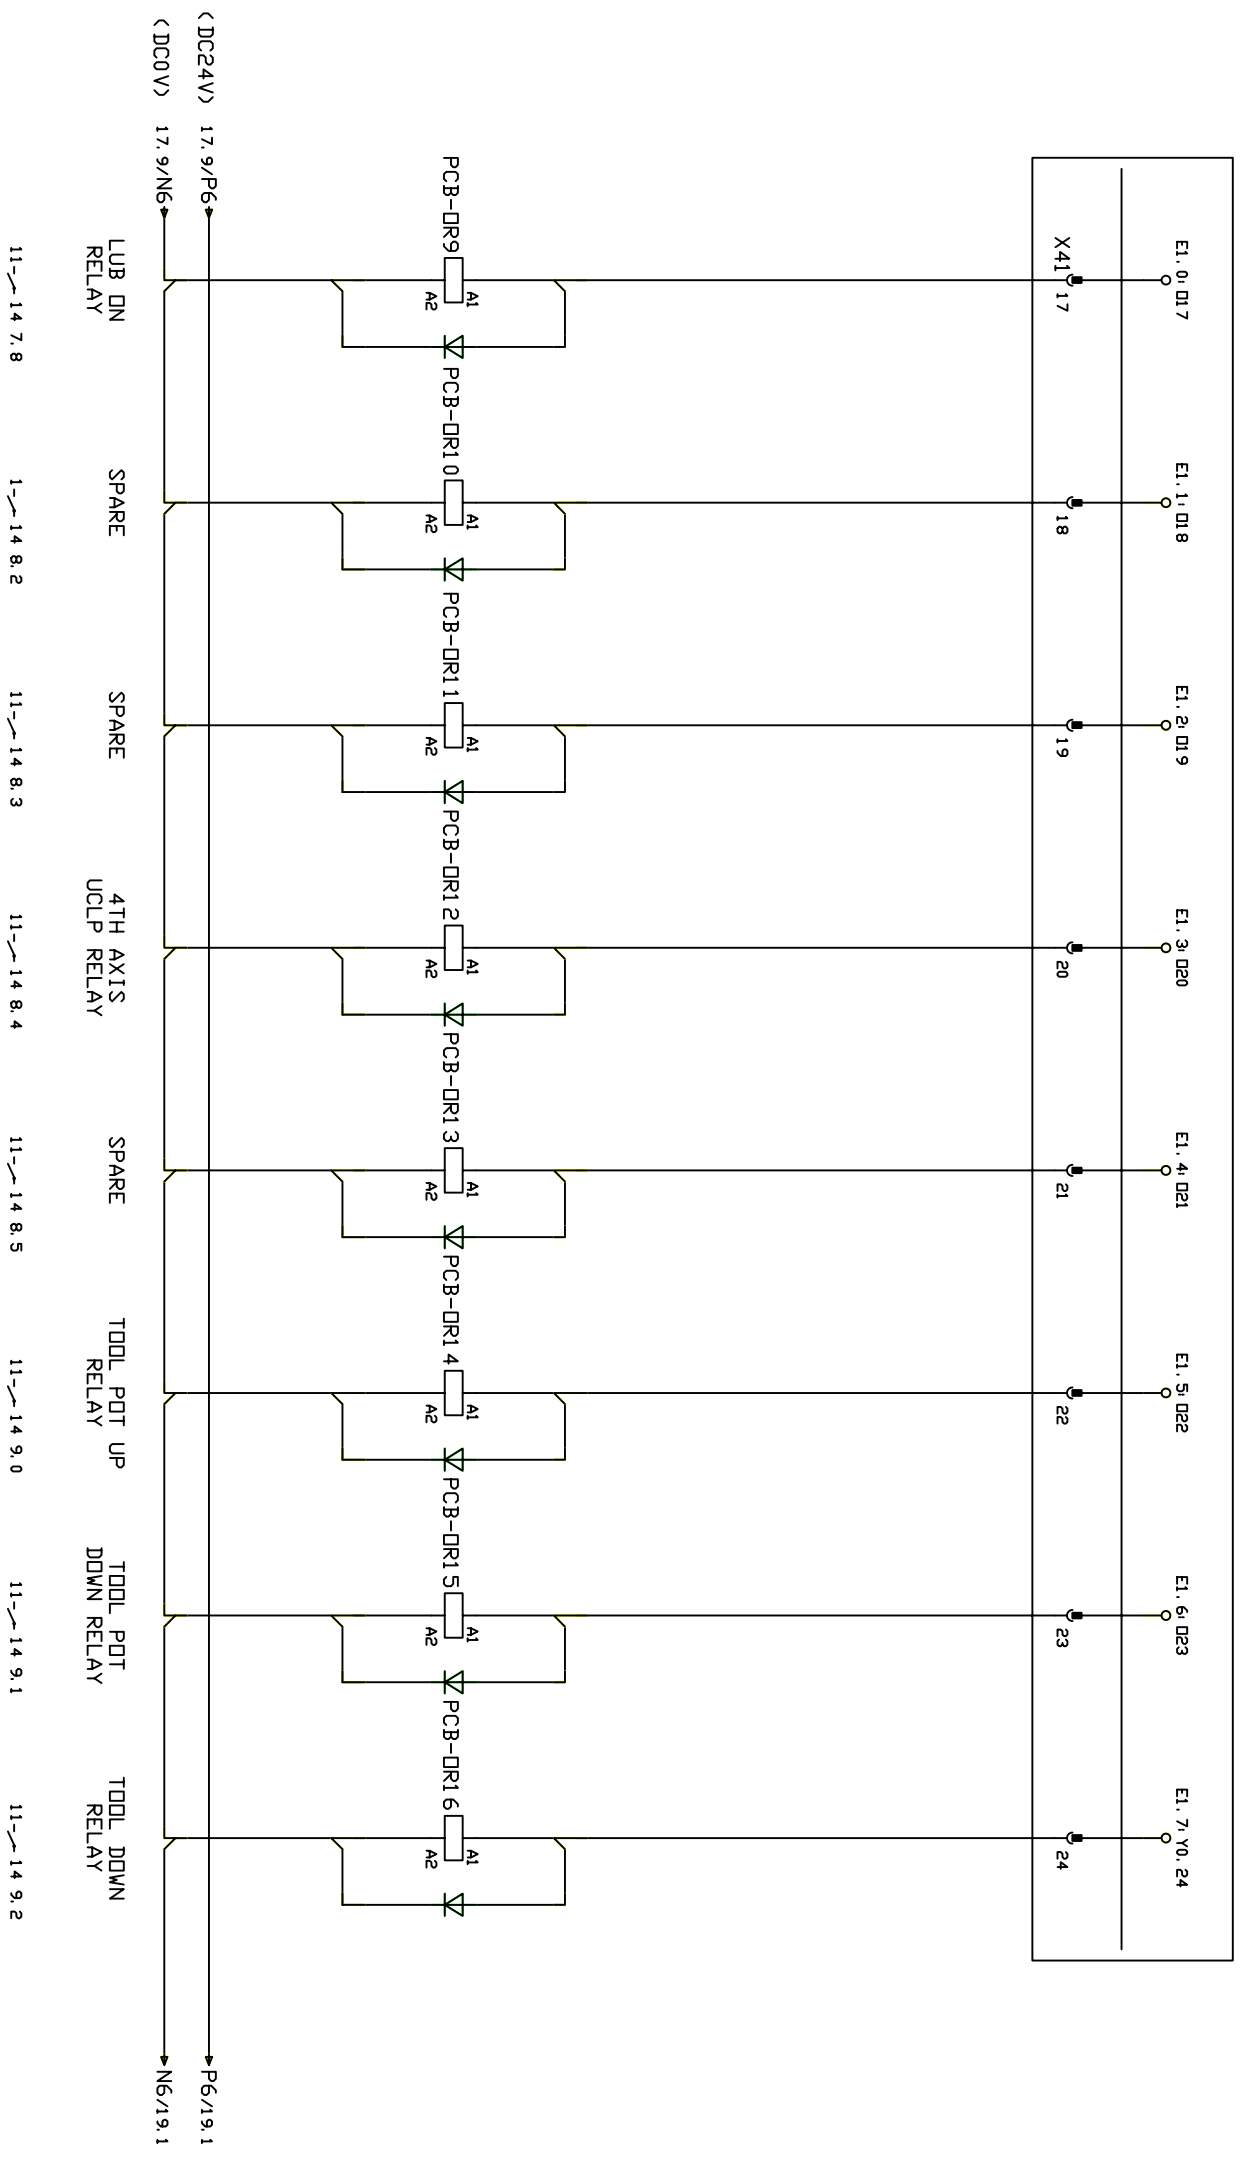


X41

18.0

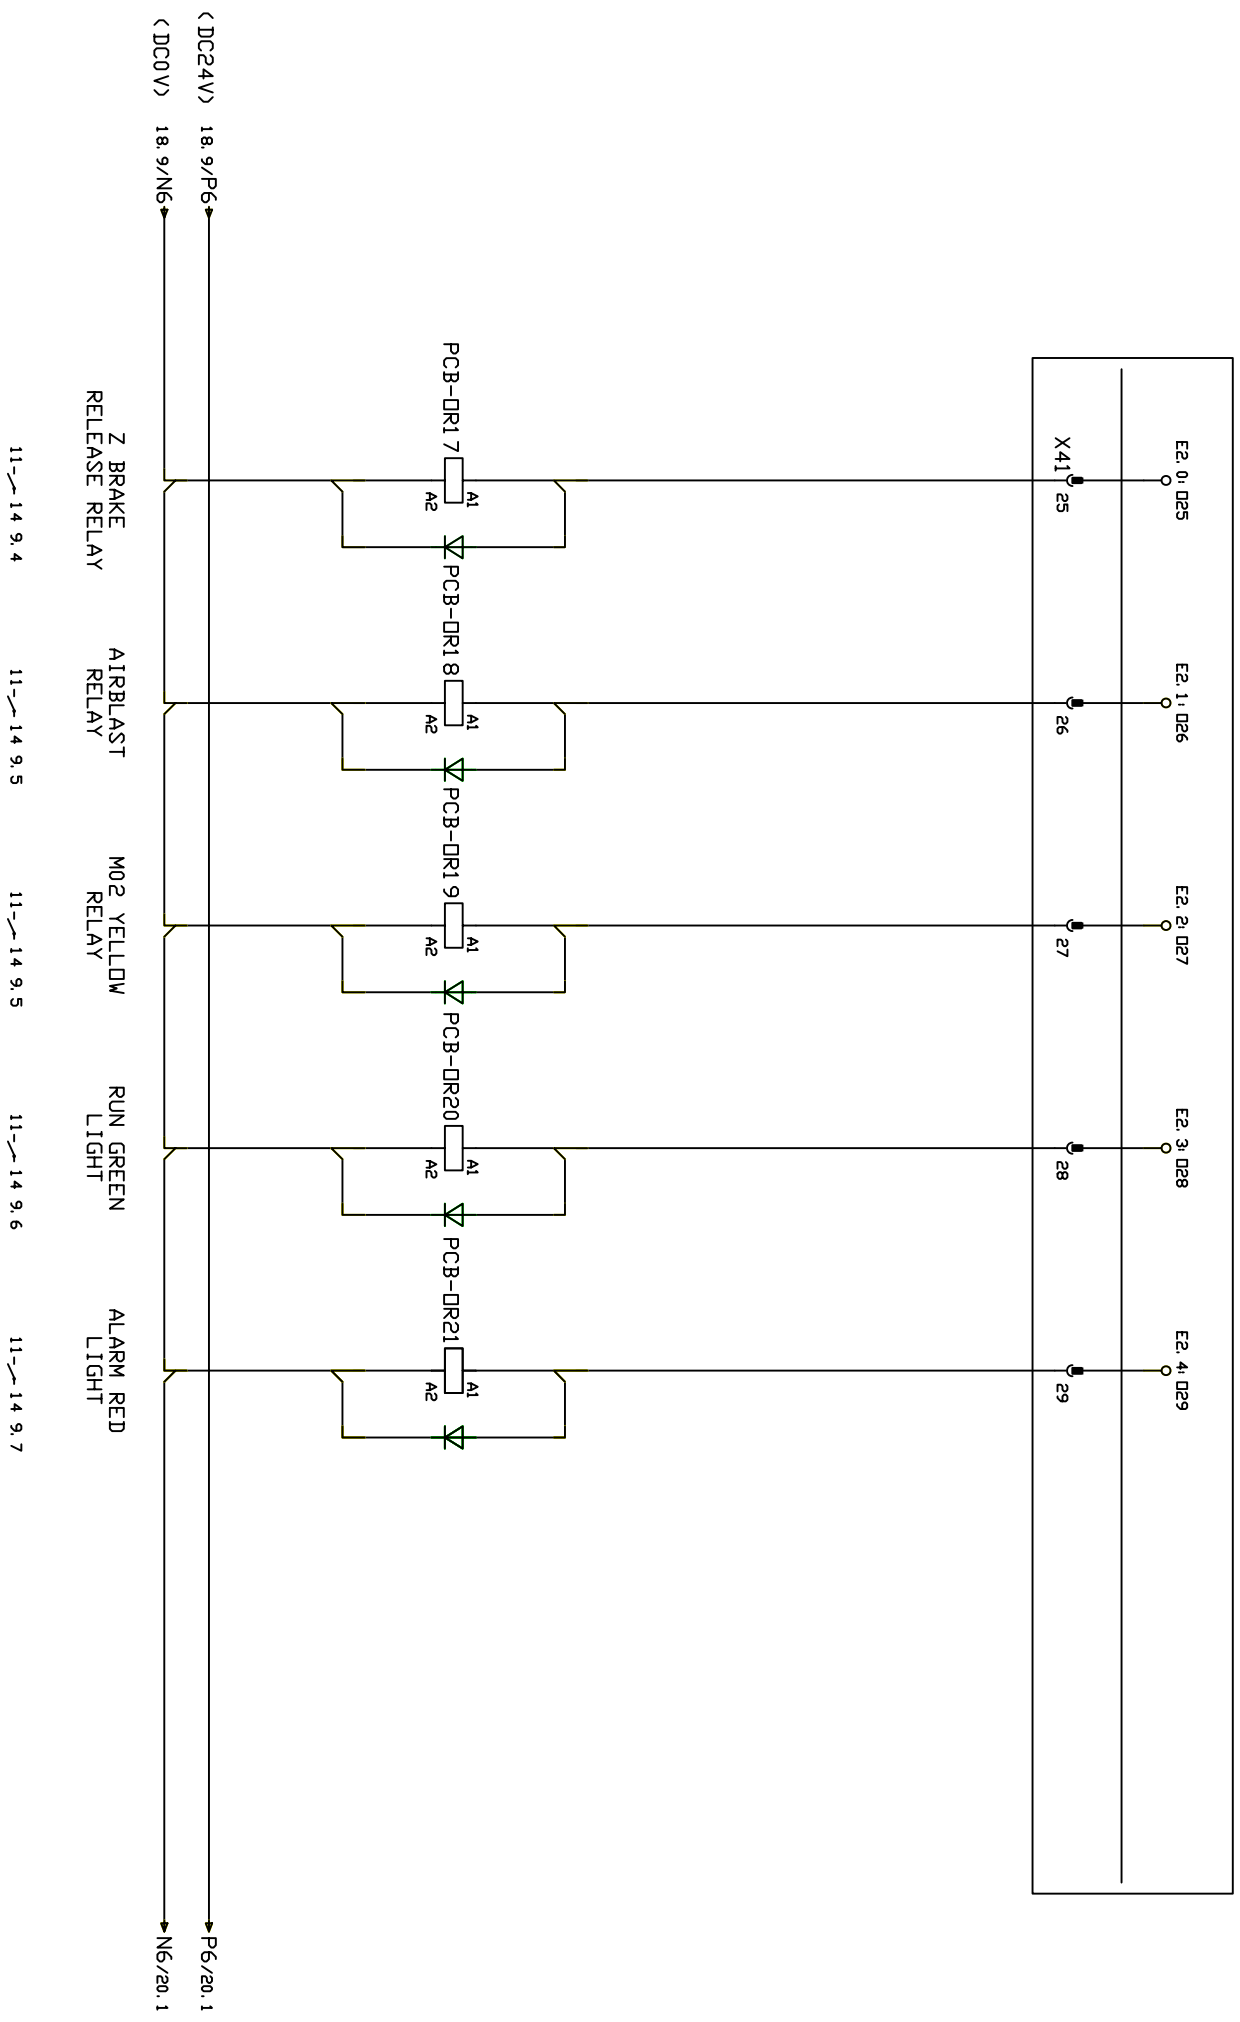


< DC24V > 9. 8/P6
 < DC0V > 19. 8/N6

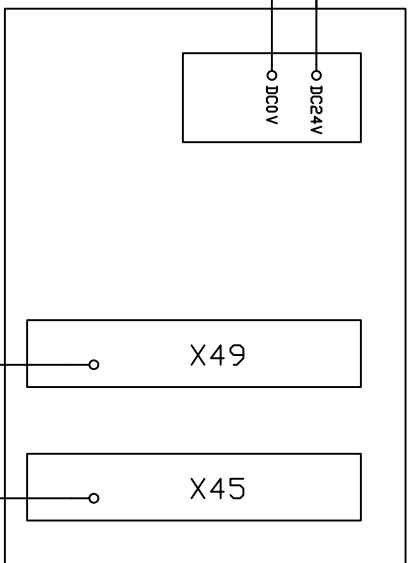

X49
22. 3


X45
22. 1



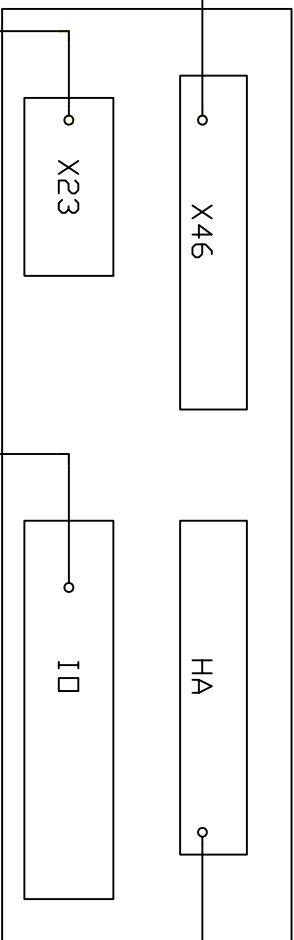



X46
22. 3

X23
22. 3

DB
22. 8

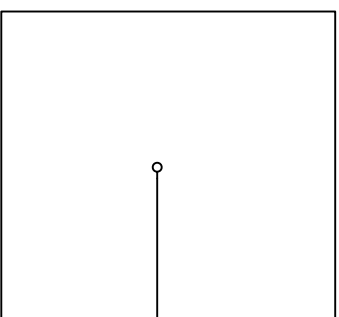

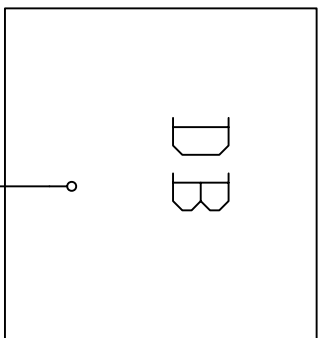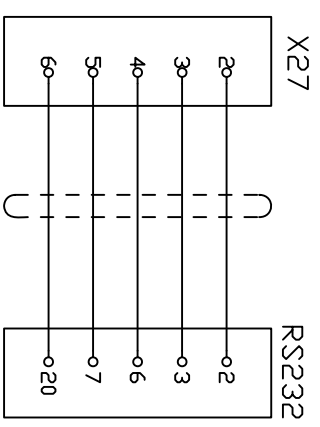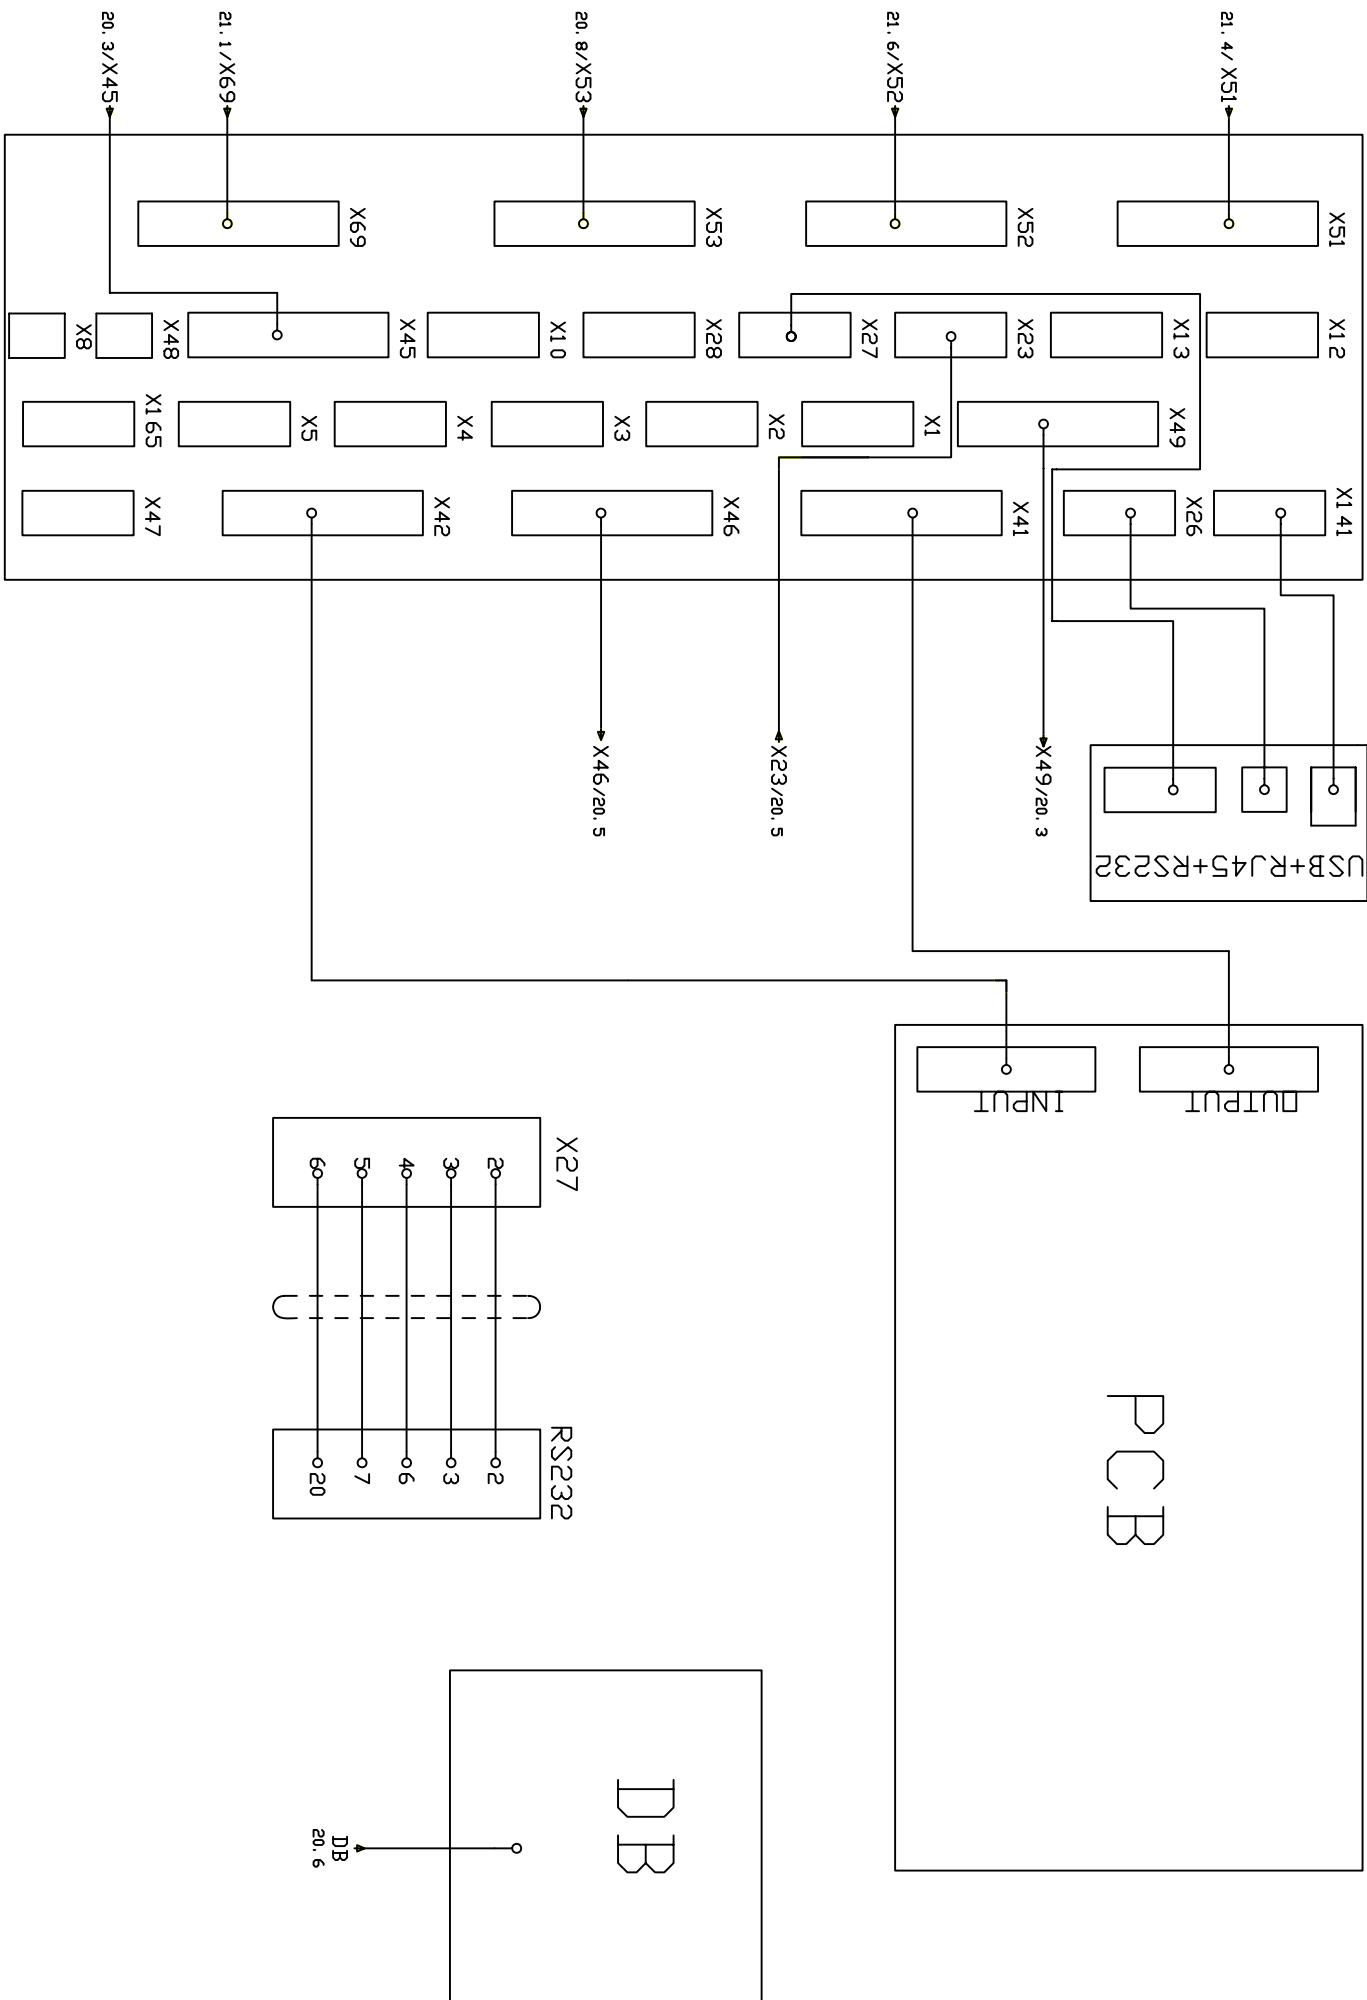


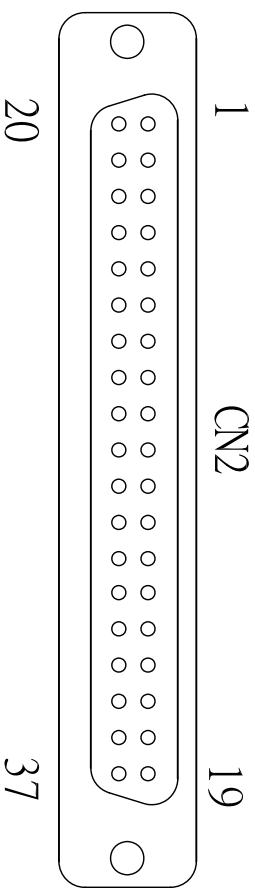



D37-M





1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	PE








X41-1	X41-2	X41-3	X41-4	X41-5	X41-6	X41-7	X41-8	X41-9	X41-10	X41-11	X41-12	X41-13	X41-14	X41-15	X41-16	X41-17	X41-18	X41-19
X41-20	X41-21	X41-22	X41-23	X41-24	X41-25	50	X41-27	X41-28	X41-29	X41-30	14B	X41-32	X41-33	X41-35	X41-36	X41-37	PE	

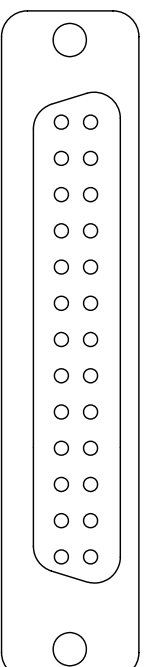

D25-F

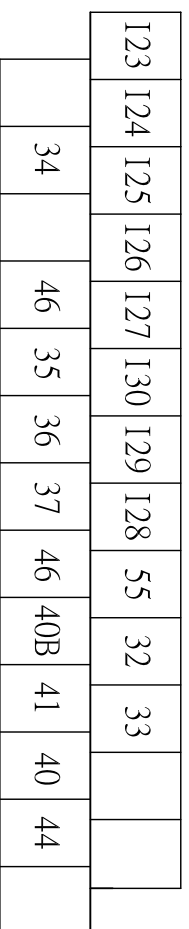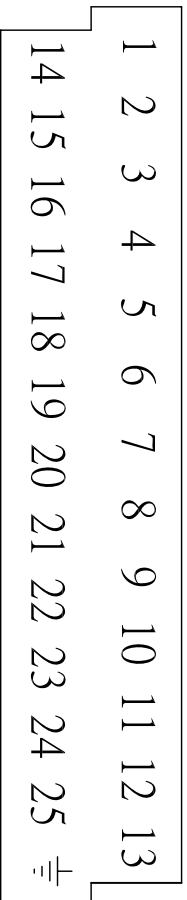

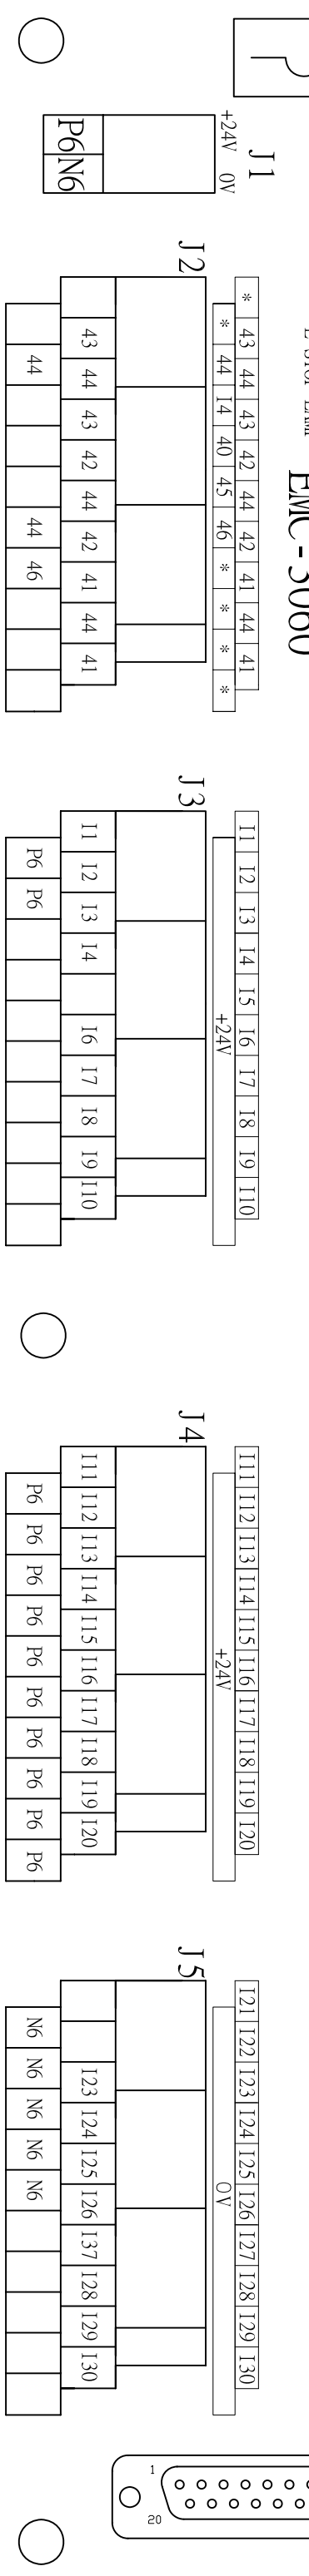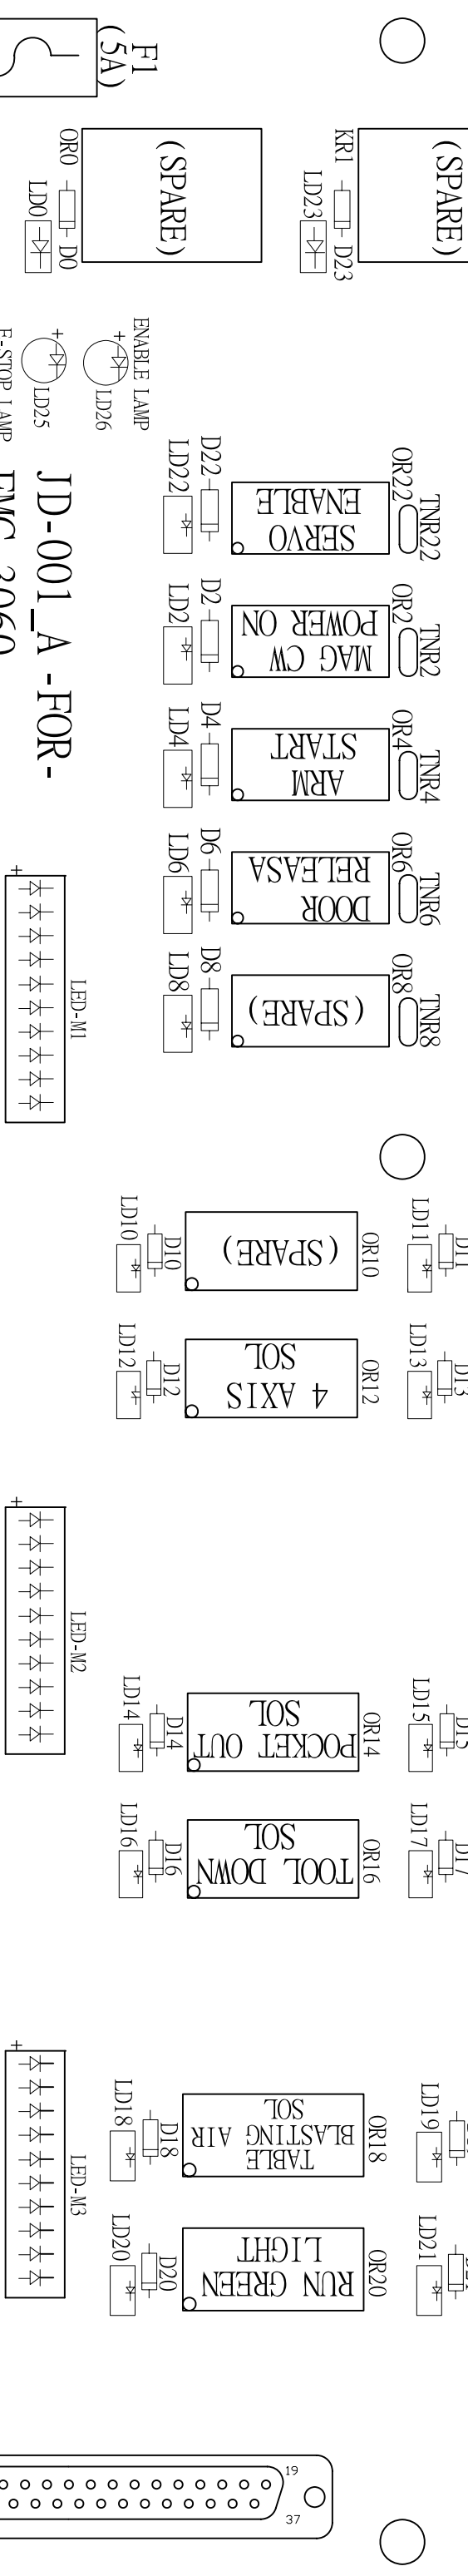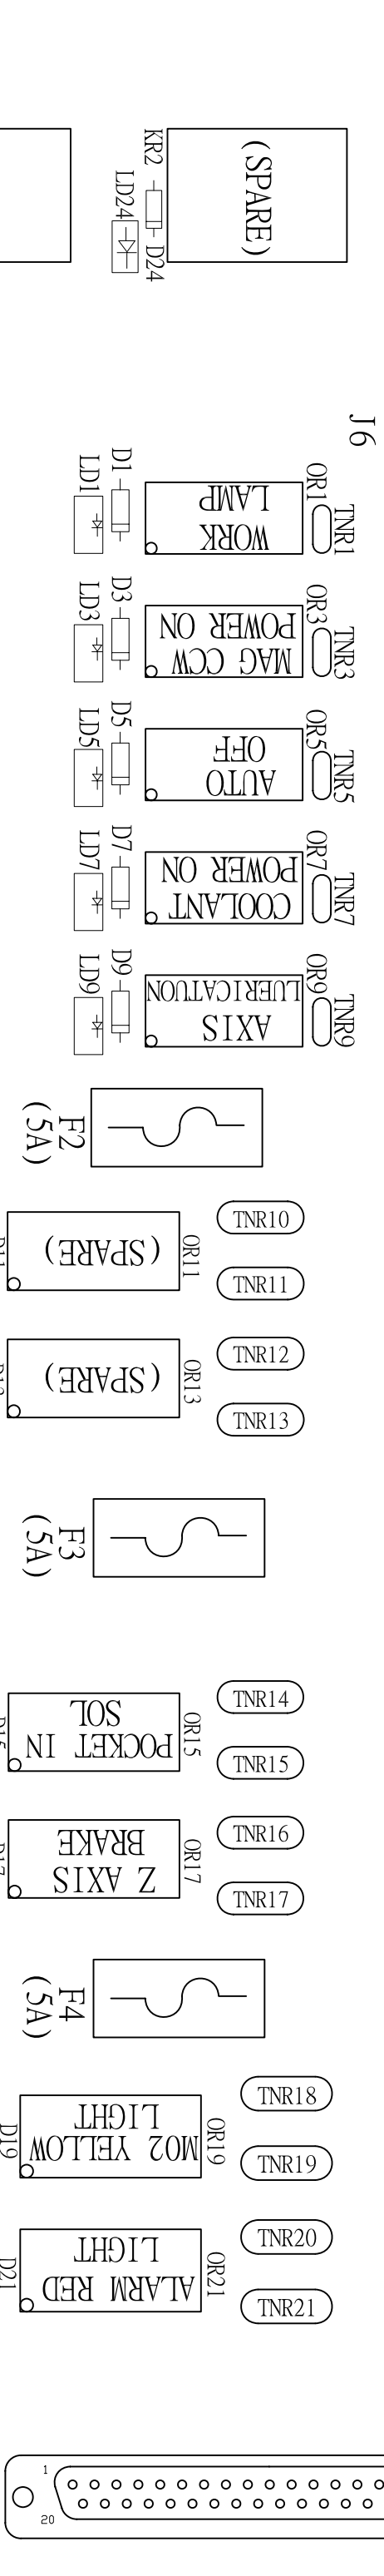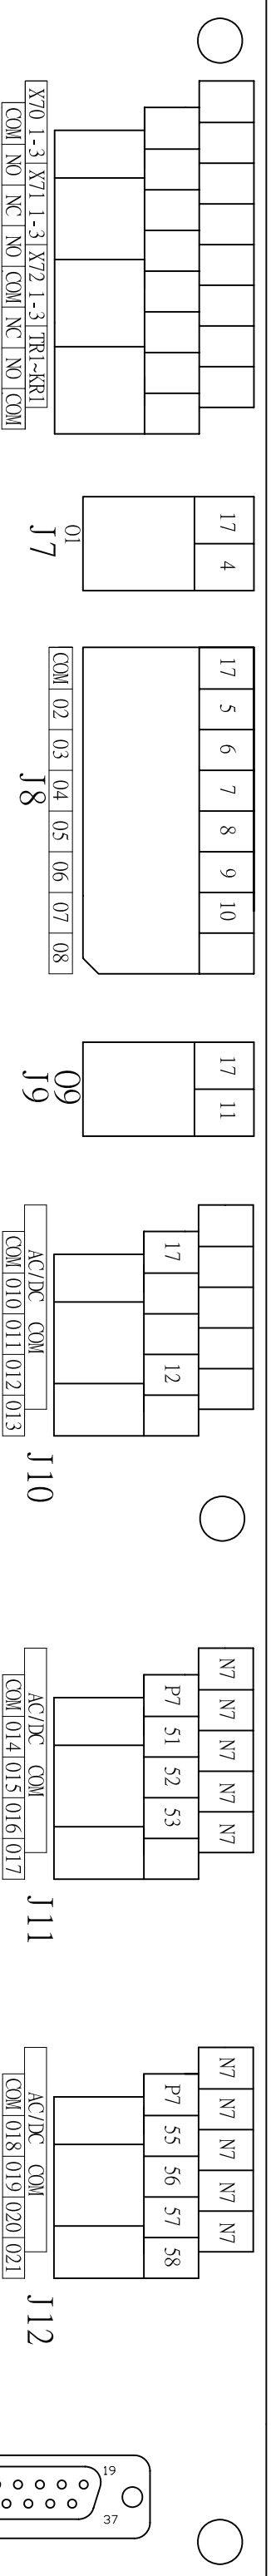

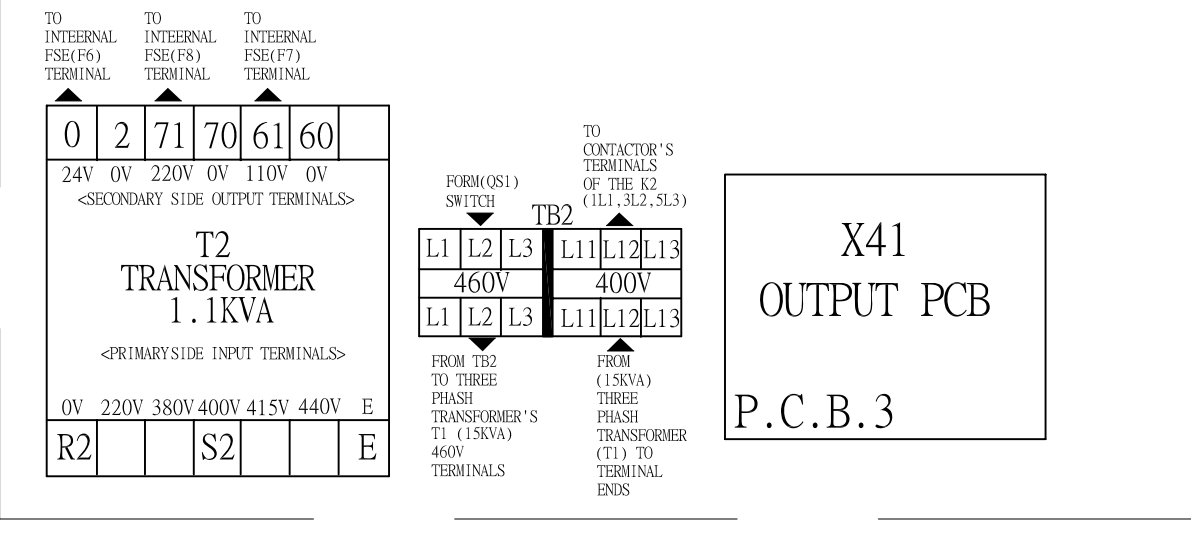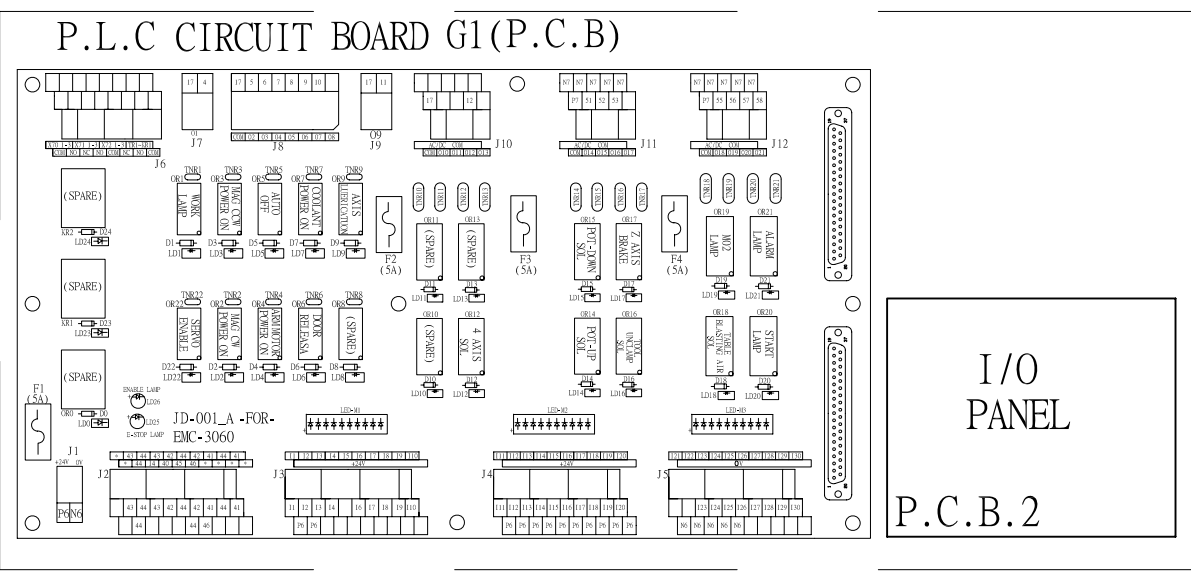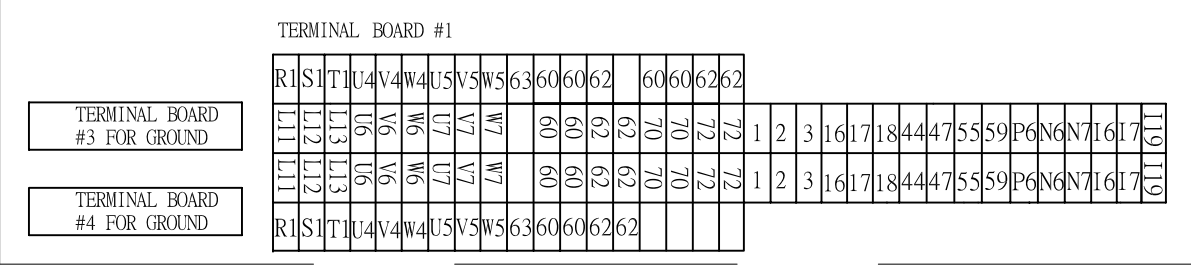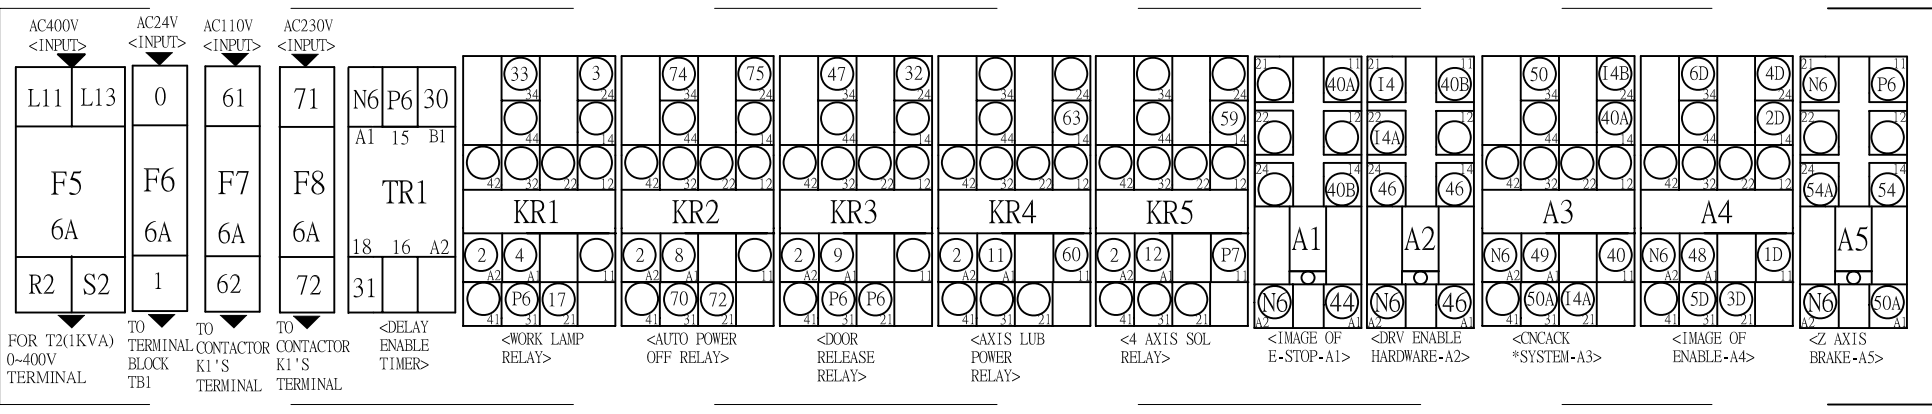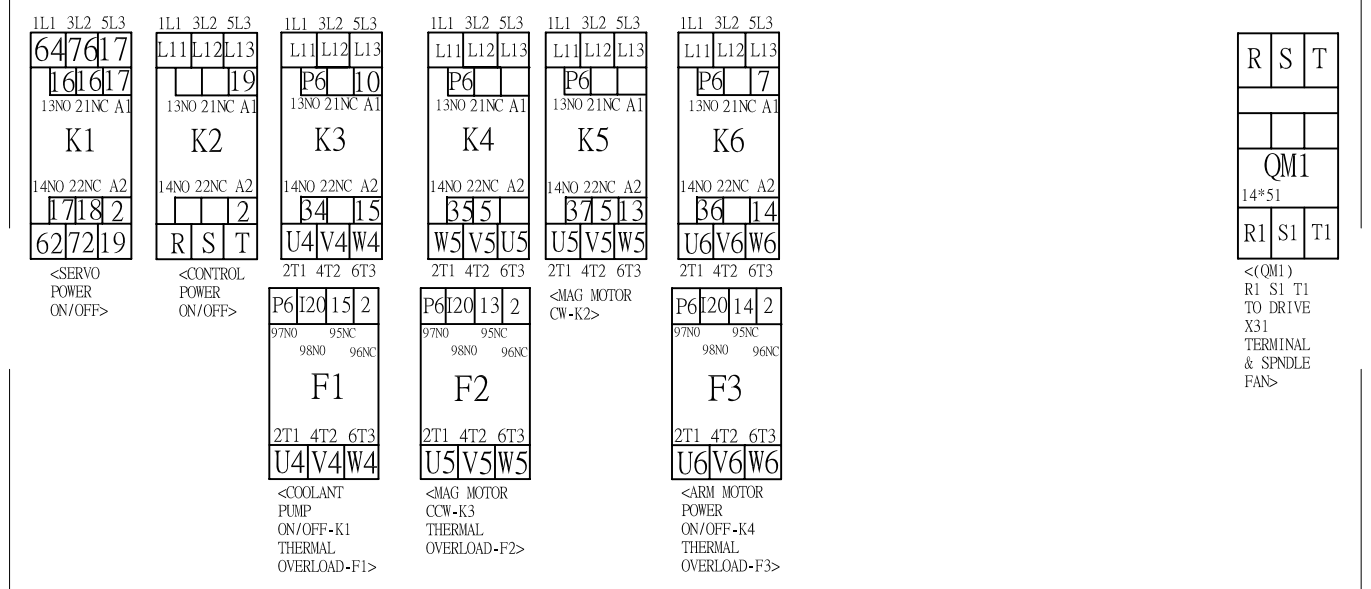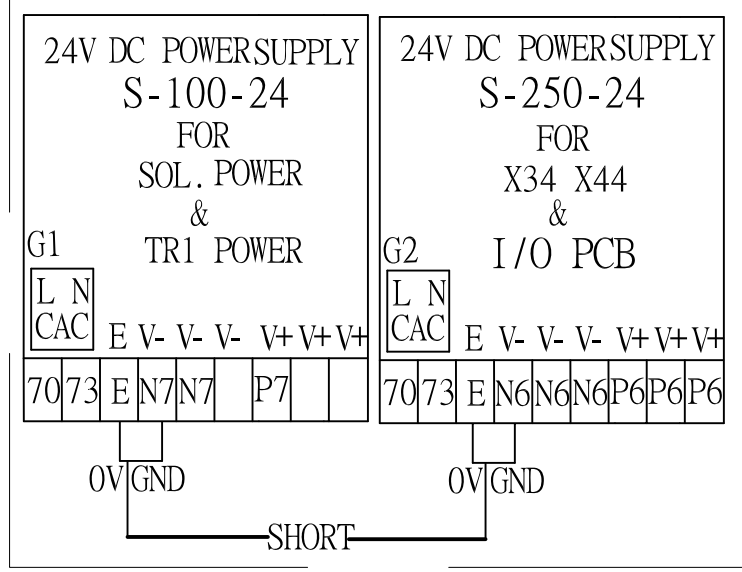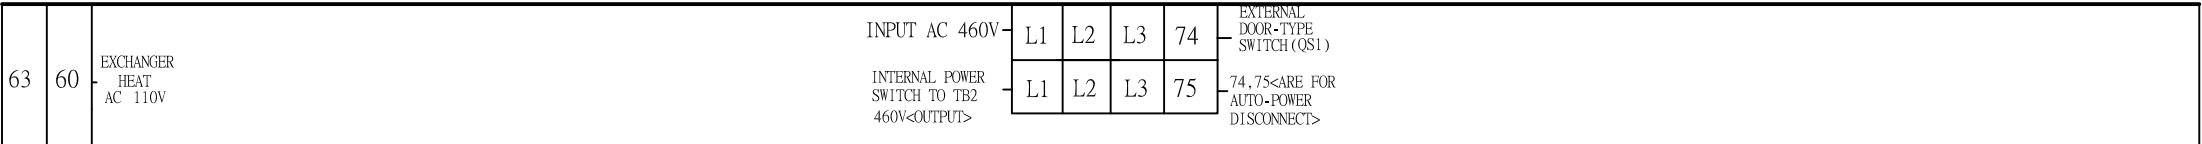

ACER-EMC-3060-6000i

