



Springwood Industrial, Inc.
1062 N. Kraemer Place
Anaheim, CA 92806
Tel: 714-632-9701 Fax: 714-632-9730
<http://www.aceronline.net>

info@acergroup.com


Klim Industrial, Inc.
244 N. Randolphville Road
Piscataway, NJ 08854
Tel: 732-752-9100 Fax: 732-752-9101
<http://www.aceronline.net>

acer_klim@yahoo.com

PROCEDURE TO CUT DOWN THE VOLUME OF OIL FOR THE YET-N/E AUTO LUBE

1. Unscrew the 4 screws to take off the cap.

The Jumper on the 2nd and 3rd pin determines the volume of the oil.

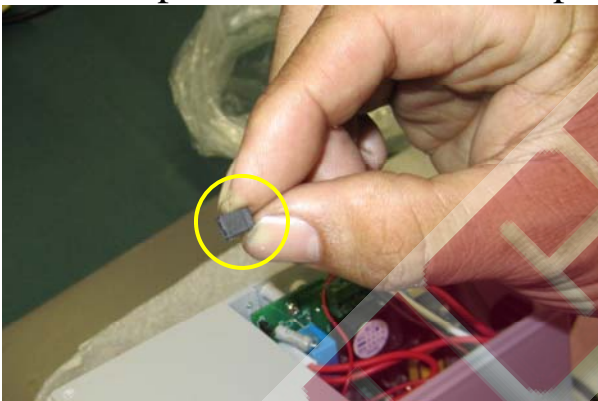

The Jumper ON means continuous 6-7 seconds the oil.

The Jumper OFF means full oil, 15 seconds the oil.

