


How to Align Headstock (where to adjust the headstock)

1. Loosen two tightening screws on each side of headstock

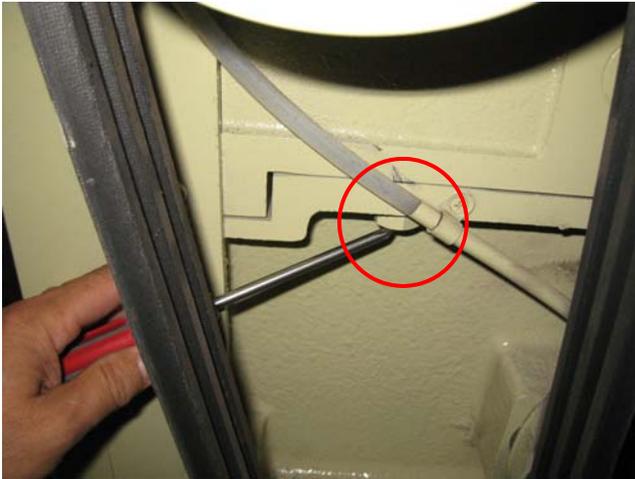

Note: One tightening screw is not shown in the picture

2. Adjust screws on the back of headstock

Inside screws are tighten screws

Outside screws are alignment

