Power off during tool change

Condition 1




Step 1 Make sure emergency switch is off.




Emergency switch


Step 2 Put a paper board or cushion on table.

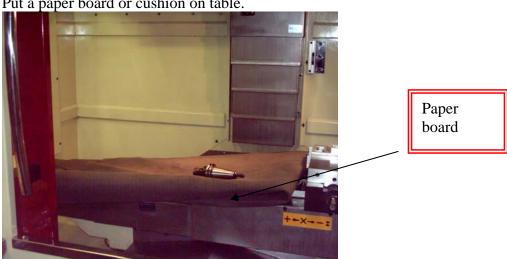


Step 3 Have Person A climb up magazine. Pull lever left to release brake.

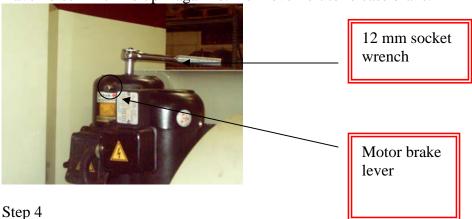

Use 12mm socket wrench and turn counterclockwise until the arm turns. Warning: make sure the arm swing back to Home Position away from tool (be careful, tool might drop). Have Person B on ground watch for three lights on magazine acrylic plate.

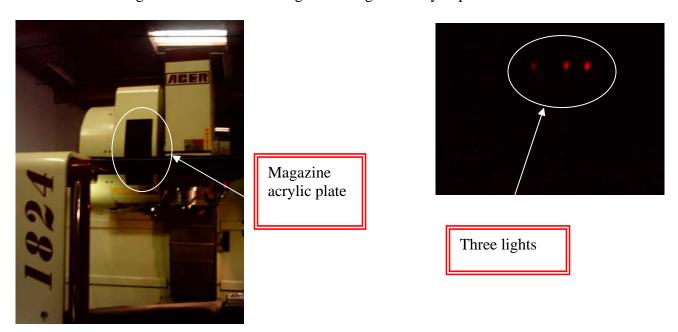

 Give signal to Person A to stop turning until only one center light remains.





Arm must be perpendicular to operator.

After one light remains, Person A needs to make sure to pull lever right, back to original position.



Step 5
Push Shift key and exit control. Turn power off (Red push button).



Step 6 Restart machine. Release emergency switch. Press "SERVO RESET", tool will pop up automatically.

Step 7 Remove tool from magazine with tool from tool box.





Tool magazine needs to be retooled.

Condition 2




Step 1 Make sure emergency switch is off.




Emergency switch


Step 2 Put a paper board or cushion on table.

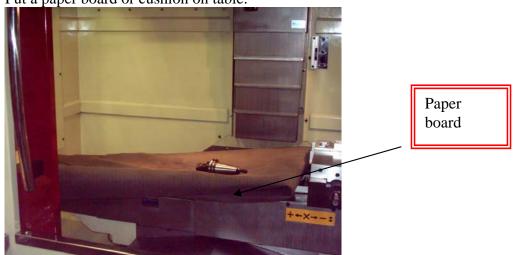


Step 3 Clear both tools by releasing the tool release pin and tool lock from arm.

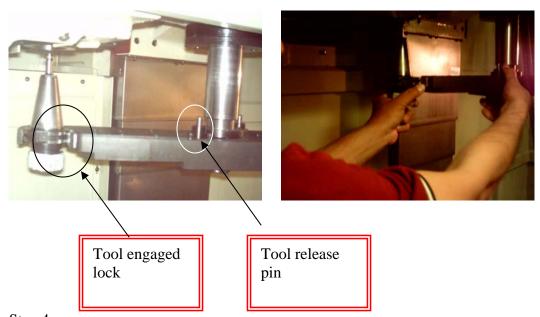


Step 4
Have Person A climb up magazine. Pull lever left to release brake.

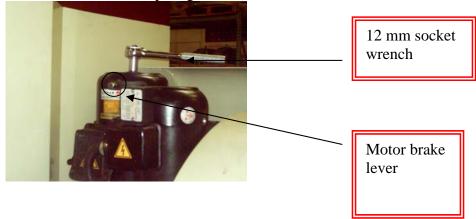

Step 5
Use 12mm socket wrench and turn clockwise until the arm turns (be careful, tool might drop). Have Person B on ground watch for three lights on magazine acrylic plate.

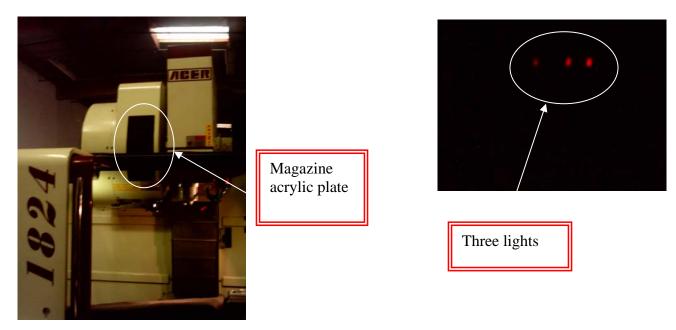

 Give signal to Person A to stop turning until only one center light remains.





Arm must be perpendicular to operator.

After one light remains, Person A needs to make sure to pull lever right, back to original position.



Step 6
Push Shift key and exit control. Turn power off (Red push button).



Step 7 Restart machine. Release emergency switch. Press "SERVO RESET", tool will pop up automatically.

Step 8 Remove tool from magazine with tool from tool box.





Tool magazine needs to be retooled.