



Springwood Industrial, Inc.  
1062 N. Kraemer Place  
Anaheim, CA 92806  
Tel: 714-632-9701 Fax: 714-632-9730  
<http://www.aceronline.net>

[info@acergroup.com](mailto:info@acergroup.com)

Klim Industrial, Inc.  
244 N. Randolphville Road  
Piscataway, NJ 08854  
Tel: 732-752-9100 Fax: 732-752-9101  
<http://www.aceronline.net>

[acer\\_klim@yahoo.com](mailto:acer_klim@yahoo.com)

## PROCEDURE TO CHANGE SPINDLE

1. Move spindle down and lock spindle. Remove set screw.

2. Turn **clockwise** to remove nose cap (left hand thread).



3. Remove nose cap, loosen set screw.



4. Reverse drawbar and tap spindle down. Another person hold R8 Spindle as it comes out. Insert a new spindle until gear hub and the spindle spline match. Push down and pull handle to push down spindle to spindle housing.



