



FOR MACHINE HOME POSITION
ANILAM ELECTRICAL BOX

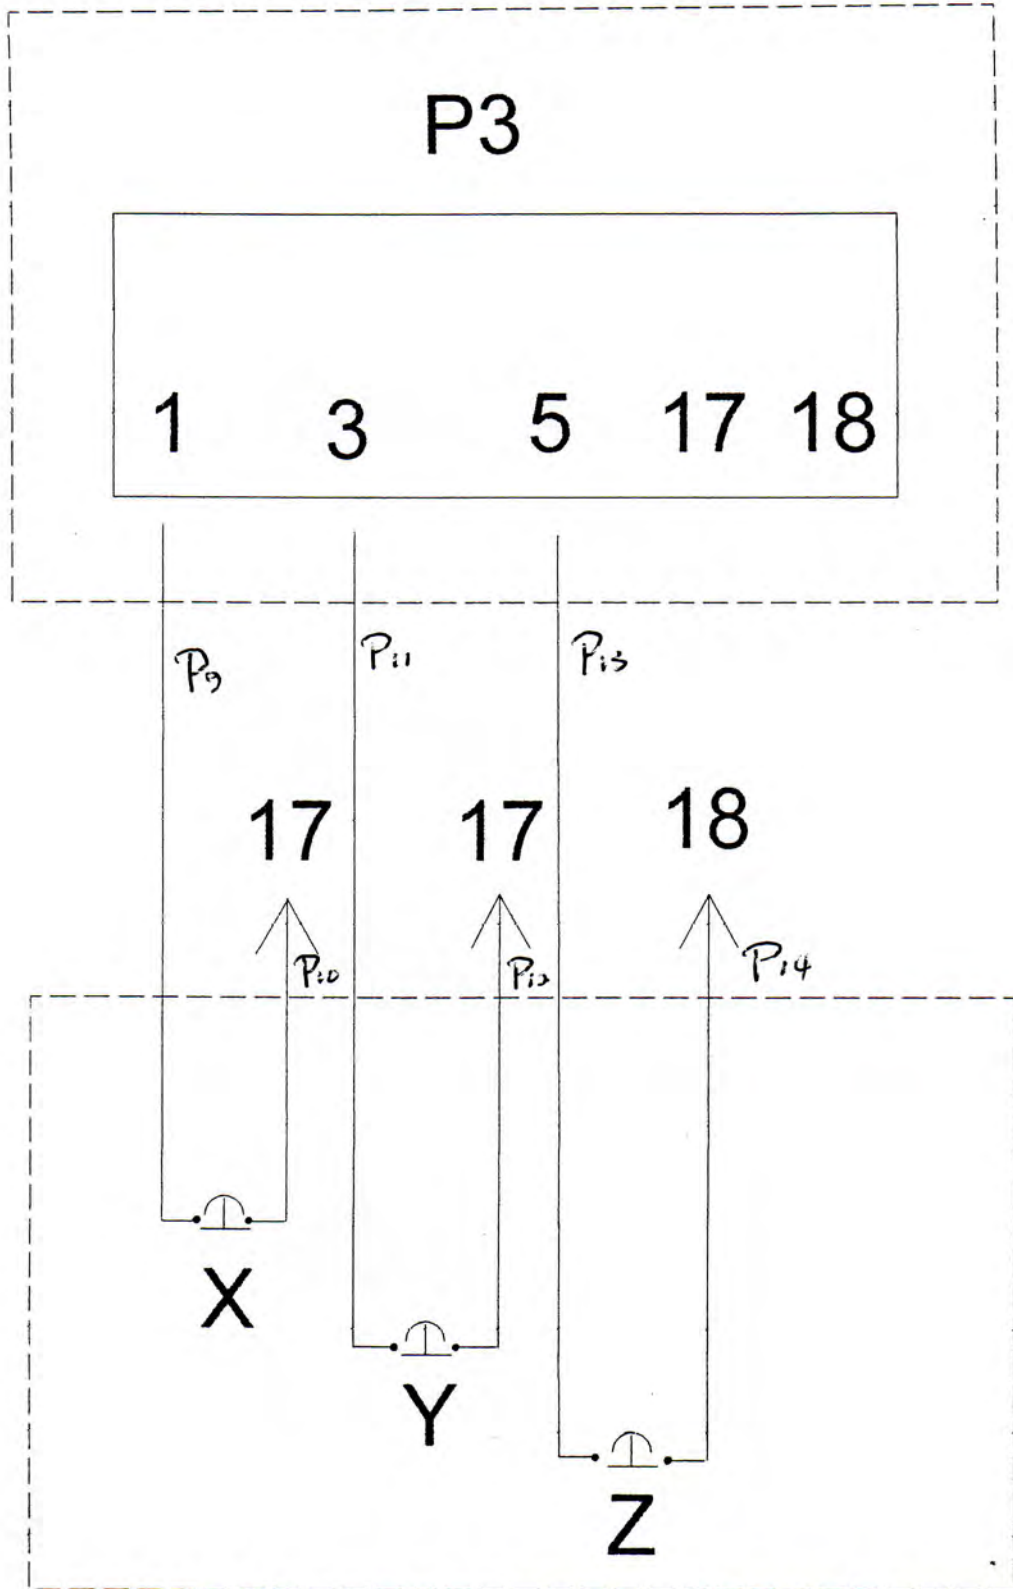

MACHINE DOG SWITCH

FOR CNC ADD INVERTER E - STOP FUNTION

ANILAM ELECTRICAL BOX

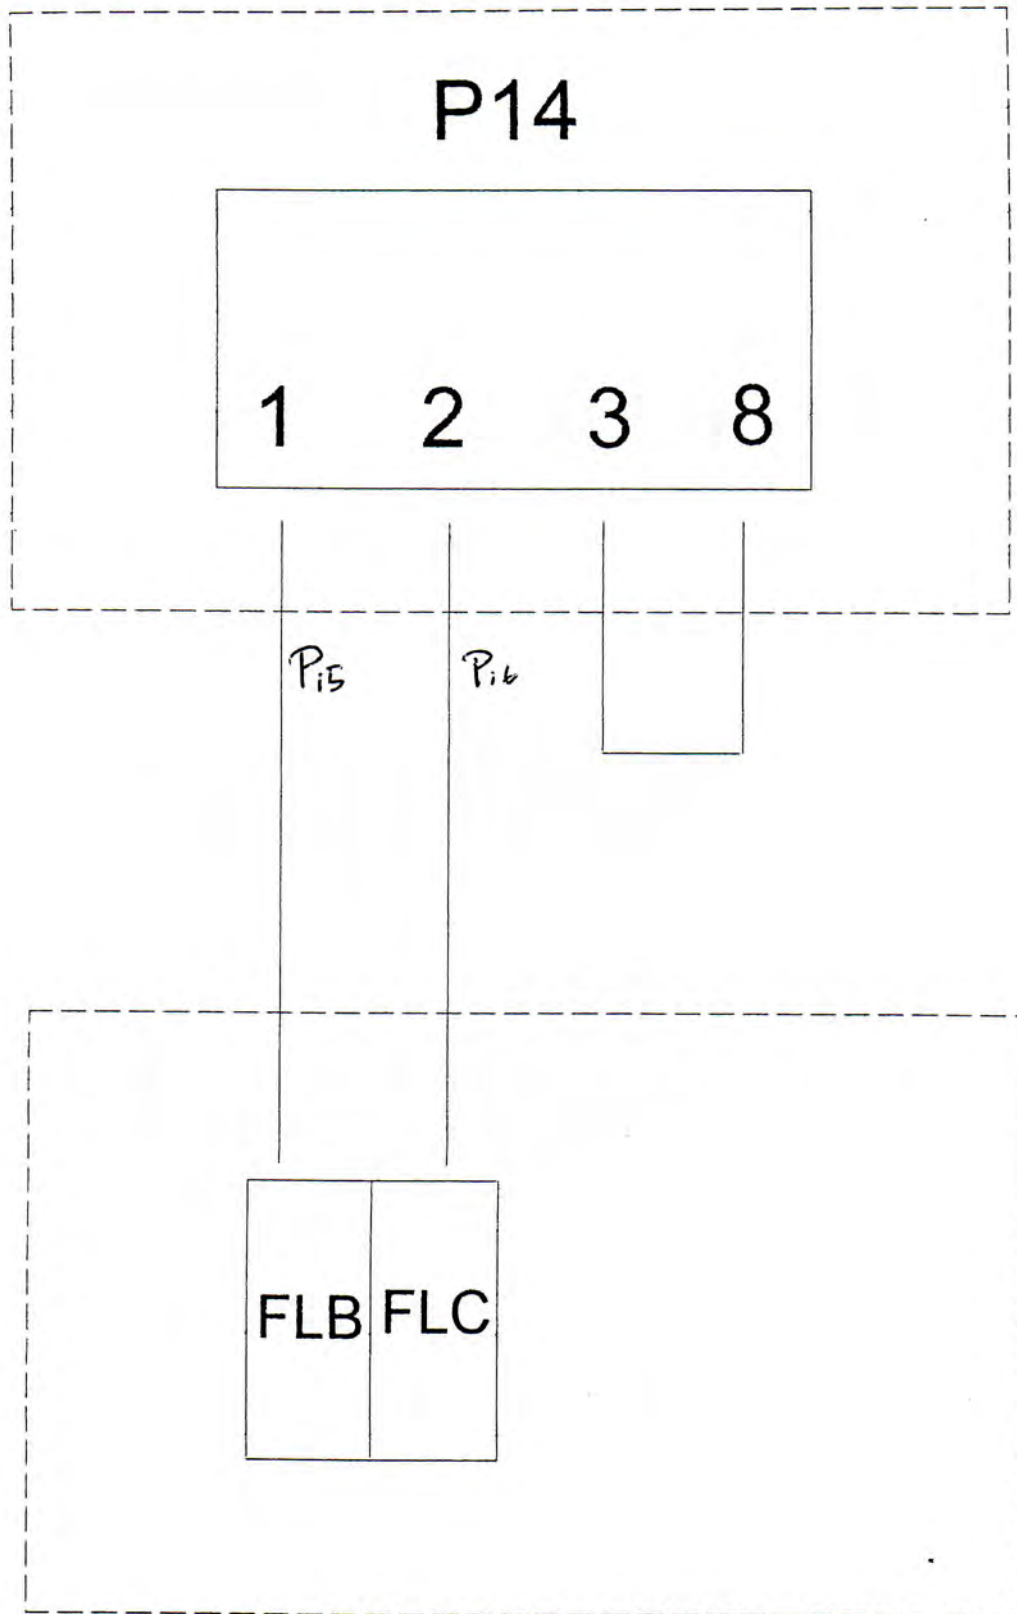

E - MILL INVERTER DRIVER

* NOTE : WIRE MUST BE REMOVED FROM P13 PIN 1 OR DAMAGE TO CNC CONTROL WILL RESULT

FOR PROGRAMABLE SPINDLE R.P.M

ANILAM ELECTRICAL BOX

